

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	HVACpassengers	00R2	Multiplexpower	_00	GNDBatteries
0	GNDBatteries	00R3	Multiplexpower	A1.11	TransmissionAlisson
0A	12Voutlets	00R4	Multiplexpower	A1.12	TransmissionAlisson
00A	Entrancedoor	00R5	RJBelectronicGND	A1.15	TransmissionAlisson
00A1	Multiplexpower	0RAD	GNDChassis	A1.16	TransmissionAlisson
00A2	Cust_Adapt_Dash_Interface	0RAD2	Fansdriveelectric	A1.18	TransmissionAlisson
0AltL	GNDChassis	0RFG	GND_refrigerator_option	A1.19	TransmissionAlisson
0AltLL	GNDChassis	0SS	GNDStud	A1.24	TransmissionAlisson
0AltR	GNDChassis	0SS1	VSS	A1.25	TransmissionAlisson
0AltUL	GNDChassis	0SS2	VSS	A1.31	TransmissionAlisson
0AltUR	GNDChassis	0SS2W	Cust_Adapt_WiFi	A1.33	TransmissionAlisson
0B	GNDChassis	0SS3	VSS	A1.36	TransmissionAlisson
0C	Ignition&enginestart	0SS5	Wifi_Chassis_Gnd	A1.37	TransmissionAlisson
0chgr	Preheat	0SS9	WiFi_Pwr	A1.51	TransmissionAlisson
0COND	GND_condensor_fans	0SW	Indirectlights	A1.52	TransmissionAlisson
0ECU	EngineECUVolvo	0SW1	Indirectlights	A1.54	TransmissionAlisson
0EV2	HVACpassengers	0TR-White	Trailerinterface	A1.55	TransmissionAlisson
0EVAP1	HVACpassengers	0TR.White	Trailerinterface	A1.58	TransmissionAlisson
0EVAP2	HVACpassengers	00VA	RJBelectronicGND	A1.71	TransmissionAlisson
0F	GNDCustomer	0W	GNDStud	A1.74	TransmissionAlisson
00F	Cust_Adaptation_DriveCam	4c	wcl_extra_switch	A1.76	TransmissionAlisson
00F1	Multiplexpower	4DD	Readinglamps&chime	A1.77	TransmissionAlisson
00F2	Multiplexpower	12Ecu	12VECU	A2A.9	TransmissionAlisson
00F3	Multiplexpower	12ISH	Pwrl_Shift	A2A.11	TransmissionAlisson
00F5	GNDTrailerOption	12VA	Batteries	A3.1	TransmissionAlisson
00F6	Readinglamps&chime	12VD	Batteries	A3.2	TransmissionAlisson
0FB1	UpperwipersGND	12VD1	12VD	A3.3	TransmissionAlisson
0FB4	12VDCustomer	12VD4	UNICAN_power_option	A3.5	TransmissionAlisson
0FD	InvertersGND	12Wup1	Cust_Adapt_WiFi	A3.6	TransmissionAlisson
0FE	GNDstud	24VA	Batteries	A3.7	TransmissionAlisson
0FH	Wipers&washer	24VD	Batteries	A4B.8	TransmissionAlisson
00FH	FJBelectronicGND	24VD2	Equalizer	A5.B	TransmissionAlisson
00FH1	HVACdefroster	24VD3	Ignition&enginestart	A9CX1.2	Cluster
00FH2	Multiplexpower	24VI	24WUP	A9CX1.4	ESP
00FR	FJB-RJBjunction	73	wcl_extra_switch	A9CX1.5	ESP
0Inv	3invertersOption	74A	wcl_extra_switch	A9CX1.6	Cluster
0Lav	wcl_extra_switch	74B	ReadingLampsLH	A9CX2.1	ESP
0P	120VACoutlets	75	wcl_extra_switch	A9CX2.2	ESP
0PA	GNDstud	400	CTGI_Gateway	A9CX2.3	ESP
0PR	120VACoutlets	401	CTGI_Gateway	A9CX2.4	ESP
0R	GNDChassis	402	CTGI_Gateway	A9CX2.6	ESP
0OR	Networks	900	Networks	A9CX2.7	ESP
0OR1	Masterrelay&12VIgn	901	Networks	A9CX2.9	ESP

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A9CX2.10	ESP	A34R.E3	Fansdriveelectric	A43J1.3	Lugg_door_lock
A9CX2.12	ESP	A34R.F3	Fansdriveelectric	A43J1.7	TPMS
A9CX2.13	ESP	A34R.G3	Fansdriveelectric	A43J2.1	Lugg_door_lock
A9CX2.16	ESP	A34R.H3	Fansdriveelectric	A43J2.4	Lugg_door_lock
A9CX2.17	ESP	A36JA.10	Ignition&enginestart	A43J2.7	EngineECUVolvo
A9CX3.2	ESP	A36JA.11	Horn	A43J2.10	EngineECUVolvo
A9CX3.3	ESP	A36JA.15	Ignition&enginestart	A43RJ1.17	ACB
A9CX3.5	ESP	A36JA.17	Ignition&enginestart	A44J1.1	Upperdefrost
A9CX3.7	ESP	A36JA.18	Ignition&enginestart	A44J1.3	Upperdefrost
A9CX3.9	ESP	A36JA.25	Brake	A44J1.4	Entrancedoor
A9CX3.10	ESP	A36JB.2	Ignition	A44J1.7	Wipers&washer
A9CX4.1	ESP	A36JB.14	Firesuppression	A44J1.10	Wipers&washer
A9CX4.4	ESP	A39P101.1	Speakers	A44J1.13	Upperdefrost
A9CX4.7	ESP	A39P101.2	Speakers	A44J1.16	Horn
A9CX4.8	ESP	A39P101.3	Speakers	A44J1.19	Engine&RJBcmpt.lights
A9CX4.10	ESP	A39P101.4	Speakers	A44J2.1	Sunvisor
A9CX4.11	ESP	A39P101.5	Speakers	A44J2.4	Sunvisor
A10X3.4	Preheat	A39P101.6	Speakers	A44J2.7	Driverlights
A10X3.6	preheat	A39P101.8	Speakers	A44J2.10	Sunvisor
A11A.2	Preheat	A39P101.9	Speakers	A44J2.13	Sunvisor
A14.A12	Cluster	A39P901.1	Speakers	A44RJ1.17	Frflashers
A14.B1	Cluster	A39P901.4	Speakers	A44RJ1.18	Upperdefrost
A14.B18	Cluster	A39P901.5	Speakers	A44RJ2.2	Entrancedoor
A14.B20	Cluster	A39P901.6	Speakers	A44RJ2.3	Wipers&washer
A14.B21	Cluster	A40.3.Blue	Trailer	A45J1.1	HVACdefroster
A17.24V	Preheat	A41J1.1	Preheater_sys	A45J1.3	HVACdefroster
A17.AC	Preheat	A41J1.7	Shutdown	A45J1.4	ZFsteering
A27.30	ZFsteering	A41J1.13	Kneeling	A45J1.7	Destinationsigns
A27.87A	ZFsteering	A41J1.16	EngineECUVolvo	A45J1.16	Mirrors
A34.A5	Fansdriveelectric	A41J1.19	EngineECUVolvo	A45J2.1	HVACdefroster
A34.B5	Fansdriveelectric	A41RJ2.18	Kneeling	A45J2.4	HVACdefroster
A34.C5	Fansdriveelectric	A42J1.1	Kneeling	A45J2.7	Driverwindow
A34.D5	Fansdriveelectric	A42J1.3	Kneeling	A45J2.13	Driverwindow
A34.E5	Fansdriveelectric	A42J1.4	Kneeling	A45RJ1.17	Cornering&foglights
A34.F5	Fansdriveelectric	A42J1.7	Kneeling	A46J1.1	Horn
A34.G5	Fansdriveelectric	A42J1.10	Kneeling	A46J1.4	Frflashers
A34.H5	Fansdriveelectric	A42J1.13	Kneeling	A46J1.7	Cornering&foglights
A34J.E	Fansdriveelectric	A42J1.16	Brake_Interlock	A46J1.10	Frflashers
A34J.F	Fansdriveelectric	A42J1.19	Brake_Interlock	A46J1.13	Frflashers
A34R.A3	Fansdriveelectric	A42J2.15	Kneeling	A46J1.17	Frflashers
A34R.B3	Fansdriveelectric	A42RJ2.14	Kneeling	A46J2.4	Frflashers
A34R.C3	Fansdriveelectric	A42RJ2.18	Kneeling	A46J2.7	Frflashers
A34R.D3	Fansdriveelectric	A43J1.1	Lugg_door_lock	A46RJ1.17	Frflashers

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A46RJ1.18	Frflashers	A50J2.1	Rrflashers	A53RJ1.17	Lavatory
A47J1.1	HVACdefroster	A50J2.7	Rrflashers	A53RJ1.18	Emergency&aislelights
A47J1.3	HVACdefroster	A50J2.10	Back-upwarnings	A53Rj1.18	Emergency&aislelights
A47J1.4	HVACdefroster	A50RJ1.17	Rrflashers	A53RJ2.2	ParcelrackA/Csystem
A47J1.7	Wipers&washer	A50RJ1.18	Rrflashers	A53RJ2.3	Readinglamps&chime
A47J1.10	Entrancedoor	A50RJ2.2	Back-upwarnings	A54J1.1	HVACpassengers
A47J1.13	Entrancedoor	A50RJ2.3	Airdryer	A54J1.3	HVACpassengers
A47J1.16	Entrancedoor	A51J1.4	Rrflashers	A54J1.4	Preheat
A47J1.19	Entrancedoor	A51J1.7	Rr_stop_lights	A54J1.7	HVACpassengers
A47J2.1	HVACdefroster	A51J1.10	Rrflashers	A54J1.10	Preheat
A47J2.7	Entrancedoor	A51J1.13	Rrflashers	A54J1.16	HVACpassengers
A47RJ1.6	HVACdefroster	A51J1.16	TransmissionAlisson	A54J1.19	HVACpassengers
A47RJ1.17	HVACdefroster	A51J1.19	WCL	A54J2.1	ParcelrackA/Csystem
A47RJ1.18	Entrancedoor	A51J2.1	Rrflashers	A54J2.4	HVACpassengers
A47RJ2.2	Entrancedoor	A51J2.4	TransmissionAlisson	A54J2.7	HVACpassengers
A48J1.1	Cornering&foglights	A51J2.7	Rrflashers	A54J2.10	HVACpassengers
A48J1.4	Cornering&foglights	A51J2.10	Rrflashers	A54J2.13	HVACpassengers
A48J1.7	Frflashers	A51J2.15	Starting_Aid	A54J2.15	HVACpassengers
A48J1.10	Frflashers	A51RJ1.17	Rrflashers	A54RJ1.6	HVACpassengers
A48J2.1	Frflashers	A51RJ1.18	WCL	A54RJ1.17	HVACpassengers
A48J2.4	Frflashers	A51RJ2.14	Starting_Aid	A54RJ1.18	ParcelrackA/Csystem
A48J2.13	Frflashers	A52J1.1	Fansdriveelectric	A54RJ2.2	HVACpassengers
A48RJ1.17	Cornering&foglights	A52J1.3	Fansdriveelectric	A54RJ2.3	HVACpassengers
A48RJ1.18	Frflashers	A52J1.4	Lavatory	A55J1.1	Driverlights
A48RJ2.2	Frflashers	A52J1.7	Engine&RJBcmpt.lights	A55J1.3	Weightmonitoring
A49J1.1	Fansdriveelectric	A52J1.10	Ignition&enginestart	A55J1.4	Cluster
A49J1.3	Fansdriveelectric	A52J1.13	RJBFan	A55J1.7	Back-upcamera
A49J1.4	Kneeling	A52J2.1	Alternators	A55J1.10	Entrancedoor
A49J1.7	Cadec	A52J2.4	Alternators	A55J2.15	Steering
A49J1.16	Starting_Aid	A52J2.13	Ignition&enginestart	A55RJ1.18	Weightmonitoring
A49J2.1	Alternators	A52RJ1.17	GNDMUXmodules	A56J1.3	Cluster
A49J2.10	Pre heat	A52RJ1.18	Engine&RJBcmpt.lights	A56J1.4	Cluster
A49J2.13	Brake	A53J1.1	ParcelrackA/Csystem	A56J1.7	Cluster
A49J2.15	Weightmonitoring	A53J1.3	ParcelrackA/Csystem	A56J1.10	Cluster
A49RJ1.6	Weightmonitoring	A53J1.4	Lavatory	A56J1.13	Multiplexpower
A49RJ1.17	Kneeling	A53J1.7	Curblights	A56J1.19	VSS
A49RJ1.18	Cadec	A53J1.10	Curblights	A56J2.15	Lugg_door_lock
A49RJ2.2	Fansdriveelectric	A53J1.13	Lavatory	A56RJ1.18	Windowsajar
A49RJ2.3	AuxiliaryBatteries	A53J2.1	Indirectlights	A57J1.1	WCL
A50J1.4	Airdryer	A53J2.4	Readinglamps&chime	A57J1.3	WCL
A50J1.7	Back-upwarnings	A53J2.7	Lavatory	A57J1.4	WCL
A50J1.13	Rrflashers	A53J2.10	Readinglamps&chime	A57J1.10	WCL
A50J1.19	Rrflashers	A53J2.13	Emergency&aislelights	A57J1.19	WCL

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A57RJ1.18	GNDMUXmodules	A103.3	Steering	A137A.24	Ureasystem
A60.Gnd	VSS	A103.5	Horn	A137A.28	Ureasystem
A60.L	VSS	A108.5	TransmissionI_Shift	A137A.40	Ureasystem
A60.R	VSS	A108.7	TransmissionI_Shift	A137A.44	Ureasystem
A60_Gnd	VSS	A108.8	TransmissionI_Shift	A137A.49	Ureasystem
A60_L+	VSS	A108.9	TransmissionI_Shift	A137A.50	Ureasystem
A60_R+	VSS	A108.10	TransmissionI_Shift	A137A.51	Ureasystem
A65_Gnd	VSS	A109A.7	TransmissionI_Shift	A137A.54	Ureasystem
A65_L+	VSS	A109A.8	TransmissionI_Shift	A137A.56	Ureasystem
A65_R+	VSS	A109A.9	TransmissionI_Shift	A137A.59	Ureasystem
A77.A	Equalizer	A109A.10	TransmissionI_Shift	A137A.62	Ureasystem
A77.F	Equalizer	A113.Gnd	VSS	A138.3	Ureasystem
A77.H	Equalizer	A113.L	VSS	A138.12	Ureasystem
A78.3	Equalizer	A113.R	VSS	A150.4	Starting_Aid
A78.4	Equalizer	A113D.1	VSS	A150.GND	VSS
A79.3	Equalizer	A113D.2	VSS	A150.L	VSS
A80.3	Equalizer	A113D.5	VSS	A150.R	VSS
A80.4	Equalizer	A120A.5	VSS	A151B.1	USB
A81JB.4	EngineECUVolvo	A120B.3	VSS	A151B.2	USB_Gnd
A81JB.6	ZFsteering	A120B.4	VSS	A153A.5	VSS
A81JB.10	EngineECUVolvo	A120B.5	VSS	A160.12	12WUP
A81JB.15	Ignition&enginestart	A120B.6	VSS	A175.8	Alternators
A81JB.16	EngineECUVolvo	A120C.4	VSS	A175.10	Alternators
A81JB.17	EngineECUVolvo	A121A.18	VSS	A175.12	Alternators
A81JB.19	EngineECUVolvo	A121B.16	VSS	A190GND	Wifi_Chassis_Gnd
A81JB.22	EngineECUVolvo	A121B.17	VSS	Alt_LL.2	Alternators
A81JB.23	EngineECUVolvo	A121C.7	VSS	Alt_LR.2	Alternators
A81JB.25	EngineECUVolvo	A121C.11	VSS	Alt_UR.2	Alternators
A81JB.26	EngineECUVolvo	A121C.12	VSS	AltL	Alternators
A85.A	12WUP	A121C.13	VSS	AltLL	Alternators
A85.B	GND_Aux_Batteries	A121C.15	VSS	AltLR	Alternators
A86.3	Starting_Aid	A121D.7	VSS	AltR	Alternators
A96.8.Black	TPMS	A130.3	Firesuppression	AltUL	Alternators
A96.23.Red	TPMS	A130.4	Firesuppression	AltUR	Alternators
A96.24.Black	TPMS	A130.6	Firesuppression	Aux24V	Starting_Aid
A96.25.Red	TPMS	A130.8	Firesuppression	AuxVideoGnd	VSS
A96.27.Black	TPMS	A130.11	Firesuppression	AuxVideoL	VSS
A96.28.Red	TPMS	A131A.C	Firesuppression	AuxVideoR	VSS
A100.3.White	TPMS	A131B.A	Firesuppression	B85.2	Ureasystem
A101.3.White	TPMS	A131B.C	Firesuppression	B97.2	Ureasystem
A101.7.White	TPMS	A137A.4	Ureasystem	B98.2	Ureasystem
A102.3.White	TPMS	A137A.7	Ureasystem	B99.2	Ureasystem
A103.1	Steering	A137A.8	Ureasystem	B115A.3	Ureasystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
BatAux24V	24WUP	CTS	Networks	F17	Multiplexpower
BLACK	120VACoutlets	Cts	Networks	F18	Multiplexpower
Black	Preheat	D1	Ignition&enginestart	F19	Multiplexpower
Black.1	Readinglamps&chime	D7	Entrancedoor	F20	Multiplexpower
Black.3	Readinglamps&chime	D9	Preheat	F21	Multiplexpower
Black.4	Readinglamps&chime	D12	Horn	F22	ELD
BLK	Cust_Adaptation_DriveCam	D13	Horn	F23	ESP
BLK1	VSS	D44	Ignition&enginestart	F24	Cust_Adapt_Dash_Interface
BLK2	VSS	D45	Starting_Aid	F24B	customersupply
Blue	Audio	D45.B	Starting_Aid	F24D	customersupply
BRN	ELD	D46	Ignition&enginestart	F24W	customersupply
Brown	Destinationsigns	D55	Readinglamps&chime	F25	12Voutlets
BussBar	12VtoCB10	DL0H	Networks	F26	EntranceDoor
C41.A	Preheat	DL0HS	Spareswires	F27	SparesVECF
CanH2	Spareswires	DL0L	Networks	F29	ECUignition
CanL2	Spareswires	DL0LS	Spareswires	F30	Networks
CB1	24WUP	DL1H	Networks	F33	Multiplexpower
CB2	Ignition&enginestart	DL1L	Networks	F34	Multiplexpower
CB3	HVACpassengers	DL2H	Networks	F35	Multiplexpower
CB5	24WUP	DL2L	Networks	F36	Startswitch
CB6	24VD	DL3H	Networks	F37	Entrancedoor
CB8	12WUP	DL3L	Networks	F39	24VDcustomer
CB9	Preheat	DL7H	NetworksECU	F40	Firesuppression
CB10	12WUP	DL7L	NetworksECU	F42	TransmissionI_Shift
CB11	VSS	DL9H	NetworksECU	F43	TransmissionI_Shift
CB13	120VACoutlets	DL9L	NetworksECU	F44	Multiplexpower
CB13A1	3inverterOption	DL10H	Networks	F45	Multiplexpower
CB13A2	3inverterOption	DL10L	Networks	F46	Multiplexpower
CB13B	3inverterOption	DL100H	J1939network	F47	Multiplexpower
CB48	Frflashers	DL100L	J1939network	F50	HVACdefroster
CB117	TrailerElecOption	Drain	Audio	F51	Destinationsigns
CB119	TrailerElecOption	DVD_Gnd	VSS	F51/A41J1.1	Destination_Sign_Pwr
CB128	24VD	DVD_L+	VSS	F52	FMSGateway
CB201	Fansdriveelectric	DVD_R+	VSS	F53	VSS
CB202	Fansdriveelectric	EI.7	Cluster	F55	Back-upcamera
CB203	Fansdriveelectric	EI.18	EngineECUVolvo	F57	customersupply
CB204	Fansdriveelectric	EMS.EB29	Ignition&enginestart	F73	EngineECUVolvo
CB205	Fansdriveelectric	F4	TransmissionI_Shift	F90	Ureasystem
CB206	Fansdriveelectric	F10	Cluster	F91	EngineECUVolvo
CB207	Fansdriveelectric	F11	Horn	F95	FMSGateway
CB208	Fansdriveelectric	F13	12VDCustomer	F96	Ureasystem
CB301.Black	Trailer	F15	TWG_Pwr	F99	EngineECUVolvo
Cd1	Networks	F16	12VEng.run	F100	EngineECUVolvo

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
F101	R1toStarter	F243	HVACpassengers	Mo70.3	Fansdriveelectric
F102	3InverterOption	F612	Cust_Adapt_REIDVR_5Cameras	Mo71.3	Fansdriveelectric
F103	24Wup	F614	Cust_Adapt_REIDVR_5Cameras	Mo72.3	Fansdriveelectric
F106	Multiplexpower	gnd_1	Cantrack	Mo73.3	Fansdriveelectric
F107	Multiplexpower	Gnd_2	Cantrack	N1	Networks
F108	Networks	GndA	Networks	N2	Networks
F109	Engine&RJBcmpt.lights	GndG	GndCadec	N3	Networks
F110	TransmissionAlisson	GREEN	120VACoutlets	N4	Networks
F112	SparesVECR	Green	Preheat	N5	Networks
F116	24WUP	Green/White	USB	N6	Networks
F117	SparesVECR	GRN1	VSS	N7	Networks
F118	TrailerElecOption	GRN2	VSS	N8	Networks
F121	CCust	IN1	UNICAN	N9	Networks
F122	Equalizer	IN2	UNICAN	N10	Networks
F123	Preheat	IN3	UNICAN	N11	Networks
F124	Preheat	JMP6-10	Cust_Adaptation	N12	Networks
F126	HVACpassengers	JMP_C700	ELD	N13	Networks
F127	Preheat	L+	VSS	N14	Networks
F129	Preheat	L+TV	VSS	N15	Networks
F130	Preheat	L-	VSS	N16	Networks
F131	CCust	L142.3	Lavatory	N17	Networks
F132	Multiplexpower	L207.1	WCL	N18	Networks
F133	Multiplexpower	L207.3	WCL	N19	Networks
F134	Multiplexpower	L207.GND	WCL	N20	Networks
F135	Multiplexpower	L309	Inverters	N21	Networks
F136	Multiplexpower	L309D	InverterDisplay	N22	Networks
F138	Readinglamps&chime	L310	Inverters	N23	Networks
F139	Alternators	L310D	InverterDisplay	N24	Networks
F141	HVACpassengers	L350A.B2	EngineECUVolvo	N25	Networks
F142	HVACpassengers	L400.G	Engineheateroutlet	N26	Networks
F143	HVACpassengers	L400.L	Engineheateroutlet	N27	Networks
F144	HVACpassengers	L400.N	Engineheateroutlet	N28	Networks
F145	PWR_refrigerator_option	LF+	VSS	N29	Networks
F147	CCust	LF-	VSS	N30	Networks
F148	12VD	LightGreen	USB	N31	Networks
F152	SparesVECR	LR+	VSS	N56-1	Networks
F156	UNICAN_power_option	LR-	VSS	N56-2	Networks
F199	Fansdriveelectric	Mo62	Roof_Hatch_Fans	N57_1	Networks
F200	VSS	Mo63	Roof_Hatch_Fans	N57_2	Networks
F201	VSS	Mo65.3	Fansdriveelectric	Pink	VSS
F202	VSS	Mo67.3	Fansdriveelectric	Pot1	Driverlights
F203	VSS	Mo68.3	Fansdriveelectric	PP1	WCL
F214	WiFi_Pwr	Mo69.3	Fansdriveelectric	Pull	Pullwire

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
R+	VSS	RF+	VSS	Se40.1	ESP
R+TV	VSS	RF-	VSS	Se40.2	ESP
R-	VSS	RR+	VSS	Se45.2	Wipers&washer
R4.85	Firesuppression	RR-	VSS	Se46.B	Trailerparkbrake
R4.87A	Preheat	RTS	Networks	Se49	HVACpassengers
R5.87	PreHeat	Rts	Networks	Se51.2	Cluster
R12	HVACpassengers	RX	TPMS	Se51.Jmp	Seat_Belt_Jumper
R12.2	HVACpassengers	Rx	Cantrack	Se53.C	Cluster
R12VISS	VSS	RxD	Networks	Se54.C	Cluster
R20.87	Preheat	RxTx	Networks	Se55.C	Cluster
R21.87	RJBoutswitch	Se2	TransmissionAlisson	Se56.A	WCL
R21.B	Ignition&enginestart	Se4.1	Windowsajar	Se62.B	WCL
R21A.B	Ignition&enginestart	Se11.Sig	Cluster	Se63.1	ESP
R22.87	ECUignition	Se11.Wrn	Cluster	Se63.2	ESP
R23.30	Cluster	Se13.B	EngineECUVolvo	Se64.1	ESP
R23A.87A	I_Shift	Se14A.B	EngineECUVolvo	Se64.2	ESP
R25.87	24VIgnition	Se14B.C	EngineECUVolvo	Se67.C	ESP
R26.30	HVACpassengers	Se15.1	Entrancedoor	Se69.C	ESP
R27.87A	Wipers&washer	Se17.1	Entrancedoor	Se74.3	TransmissionAlisson
R29	EngineECUVolvo	Se17.1/Se76.4	Entrancedoor	Se75.C	Weightmonitoring
R30.87	12VEngruncustomer	Se18.B	Brake	Se76.4	Entrancedoor
R31.87	12VIncustomer	Se19_P.D	Brake	Se77.C	Entrancedoor
R34.30	12VECU	Se19_S.D	Brake	Se78.C	Entrancedoor
R36.87	Horn	Se20.B	Cluster	Se79.1	KneelingLevel
R37.30	Horn	Se21.2	HVACdefroster	Se79.4	Kneeling
R38.87	12Voutlets	Se23.C	HVACpassengers	Se80.C	Weightmonitoring
R40.87	TransmissionI_Shift	Se24.2	HVACpassengers	Se89.A	Engine_Ecu
R47.87	WCL	Se24.3	HVACpassengers	Se94.A	WCL
R51.87.Yellow	Trailerinteface	Se25.2	HVACpassengers	Se100.4	WCL
R52.87.Green	Trailerinteface	Se30.A	Engine&RJBcmpt.lights	Shield_149	GNDstud
R53.30.Red	Trailerinteface	Se32.A	TransmissionAlisson	Shield_149A	GNDstud
R54.87	Trailer	Se32.B	TransmissionAlisson	Shield_A16A	Destinationsigns
R55.30.Brown	Trailerinteface	Se33.A	TransmissionAlisson	SHL2	VSS
R140	Lavatory	Se34.A	TransmissionAlisson	So9.B	HVACpassengers
R210.B	Cust_Adaptation_GLI	Se34.B	TransmissionAlisson	spare10	Spareswires
R_Inv	InverterPwr	Se35.A	TransmissionAlisson	spare11	Spareswires
R_Starter	Ignition&enginestart	Se35.B	TransmissionAlisson	spare12	Spareswires
Radio_Gnd	VSS	Se37.1	ESP	spare13	Spareswires
Radio_R+	VSS	Se37.2	ESP	spare14	Spareswires
Radoi_L+	VSS	Se38.1	ESP	spare15	Spareswires
RED	12VDCustomer	Se38.2	ESP	spare16	Spareswires
RED1	VSS	Se39.1	ESP	spare17	Spareswires
RED2	VSS	Se39.2	ESP	spare18	Spareswires

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
spare19	Spareswires	Spk10_L	Speakers	Sw24.3	Driverlights
spare20	Spareswires	Spk10_R	Speakers	Sw24.6	Driverlights
spare21	Spareswires	Spk11_L	Speakers	Sw25.3	Readinglamps&chime
spare22	Spareswires	Spk11_R	Speakers	Sw25.6	Readinglamps&chime
spare23	Spareswires	Spk12_L	Speakers	Sw26.3	Readinglamps&chime
spare24	Spareswires	Spk12_R	Speakers	Sw26.6	Readinglamps&chime
spare25	Spareswires	Spk13_L	Speakers	Sw26.8	Readinglamps&chime
spare28	Spareswires	Spk13_R	Speakers	Sw27.3	ParcelrackA/Csystem
spare29	Spareswires	Spk14_L	Speakers	Sw27.8	ParcelrackA/Csystem
spare30	Spareswires	Spk14_R	Speakers	Sw29.2	Readinglamps&chime
spare31	Spareswires	STO-LOC	WCL	Sw29.3	Readinglamps&chime
spare32	Spareswires	Sw1.5	Frflashers	Sw29.8	Readinglamps&chime
spare33	Spareswires	Sw1C258.2	Wipers&washer	Sw32.3	Entrancedoor
spare34	Spareswires	Sw1C258.3	Wipers&washer	Sw33.3	Entrancedoor
spare35	Spareswires	Sw1C258.4	Wipers&washer	Sw34.1	Entrancedoor
spare39	Spareswires	Sw1C258.6	Wipers&washer	Sw34.4	Entrancedoor
spare40	Spareswires	Sw1C258.7	Wipers&washer	Sw35.3	EngineECUVolvo
spare41	Spareswires	Sw1C258.8	Frflashers	Sw35.8	EngineECUVolvo
spare42	Spareswires	Sw1C259.1	Frflashers	Sw38.2B	Driverwindow
spare43	Spareswires	Sw1C259.2	Frflashers	Sw40.B	Trailerparkbrake
spare44	Spareswires	Sw1C259.4	Frflashers	Sw41.A1	Mirrors
spare64	Spareswires	Sw2.3	Frflashers	Sw41.A3	Mirrors
spare65	Spareswires	Sw2.6	Frflashers	Sw41.B1	Mirrors
spare72	Spareswires	Sw3.3	Cornering&foglights	Sw41.B2	Mirrors
spare73	Spareswires	Sw3.8	Cornering&foglights	Sw41.B4	Mirrors
spare210	Cadec	Sw4.3	Frflashers	Sw42.2	WCL
spare211	Cadec	Sw4.8	Frflashers	Sw42.3	WCL
spare212	Cadec	Sw6.4	Wipers&washer	Sw42.4	WCL
spare213	Cadec	Sw10A.2B	Kneeling	Sw42.5	WCL
Spk1_L	Speakers	Sw12.3	Destinationsigns	Sw42.6	WCL
Spk1_R	Speakers	Sw12.8	Destinationsigns	Sw42.7	WCL
Spk2_L	Speakers	Sw12A.3	Destinationsigns	Sw43.B	Kneeling
Spk2_R	Speakers	Sw14.3	EngineECUVolvo	Sw44	Engine&RJBcmpt.lights
Spk3_L	Speakers	Sw14.8	EngineECUVolvo	Sw46A	Engine&RJBcmpt.lights
Spk3_R	Speakers	Sw16.3	Brake	Sw55.1	Lavatory
Spk4_L	Speakers	Sw16.8	Brake	Sw56.1	Lavatory
Spk4_R	Speakers	Sw17.3	Engine_Ecu	Sw58.2	Ignition&enginestart
Spk5_L	Speakers	Sw17.6	EngineECUVolvo	Sw58.3	Ignition&enginestart
Spk5_R	Speakers	Sw18A.2B	Lugg_door_lock	Sw58.5	Ignition&enginestart
Spk6_L	Speakers	Sw20.3	WCL	Sw58.7	Ignition&enginestart
Spk6_R	Speakers	Sw20.8	WCL	Sw59.3	Ignition&enginestart
Spk9_L	Speakers	Sw21.3	Upperdefrost	Sw63A.3	Horn
Spk9_R	Speakers	Sw21.8	Upperdefrost	Sw63A.4	Horn

CIRCUITS LIST

CircuitID	Description	CircuitID	Description		
Sw64	Kneeling	Sw662.3	Cust_Adaptation		
Sw80.6	Starting_Aid	TR-Black	VECT		
Sw80A.6	Starting_Aid	TR-Blue	VECT		
Sw82.4	Masterrelay&12VIgn	TR-Brown	VECT		
Sw82.5	Ignition&Engine_Start	TR-Green	Trailerinterface		
Sw82.8	Starting_Aid	TR-Red	Trailerinterface		
Sw82A.8	Starting_Aid	TR-Yellow	VECT		
Sw83.Acc	Ignition&enginestart	Tv.Gnd	VSS		
Sw83.Ign	Ignition&enginestart	TV.L	VSS		
Sw83.St	Ignition&enginestart	TV.R	VSS		
Sw83.St.Rtn	Ignition&enginestart	TvGnd	VSS		
Sw83A.4	Starting_Aid	TWU.3	WCL		
Sw83A.6	Starting_Aid	TX	TPMS		
Sw85.A1	Mirrors	Tx	Cantrack		
Sw85.A3	Mirrors	TxD	Networks		
Sw85.B1	Mirrors	ve+	Cantrack		
Sw85.B2	Mirrors	VECPR4.H	Cust_Adaptation_GLI		
Sw85.B4	Mirrors	WHITE	120VACoutlets		
Sw94	WCL	White	Preheat		
Sw96.N3	Readinglamps&chime	WHT1	VSS		
Sw97.N1	Readinglamps&chime	WHT2	VSS		
Sw100A.3	Cornering&foglights	YelGrn	Readinglamps&chime		
Sw109	Lugg_door_sw				
Sw110	Lugg_door_sw				
Sw111	Lugg_door_sw				
Sw112	Lugg_door_sw				
Sw113	Lugg_door_sw				
Sw114	Lugg_door_sw				
Sw115	Lugg_door_sw				
Sw124.3	Destinationsigns				
Sw125.B	Kneeling				
Sw135.N3	Readinglamps&chime				
Sw140.B	Entrancedoor				
Sw142.5	Entrancedoor				
Sw149.2B	ReadinglampsCancelSw				
Sw149.3	Readinglamps&chime				
Sw152.B	Firesuppression				
Sw156.1	Mirrors				
Sw156.6	Mirrors				
Sw156.8	Mirrors				
Sw157.2B	Sunvisor				
Sw158.2B	Sunvisor				
Sw313.N3	Readinglamps&chime				