

Ground distribution:

0-Electric gnd
00- Electronic Gnd

A-Dash - Lh console harness
F-Front junction box harness
FH-Front harness
R-Rear junction box harness
FR-Front to rear

FJB Electronic GND

RJB Electronic GND

Dash harness

- gnd-00A1-16 • 7.1_Mux_Power:4 B
- gnd-00A-18 • 34.1_wiper_washer:1 C
- gnd-00A-18 • 29.1_Entrance_door_Keyless:0 C
- gnd-00A-18 • 29.1_Entrance_door_Keyless:0 A

- gnd-00A-18 • 41.1_Steering:1 D
- gnd-00A-18 • 19.1_Driver_Lights:1 E
- gnd-00A-18 • 30.1_Drivers_Window:1 D
- gnd-00A-18 • 19.1_Driver_Lights:1 C
- gnd-00A-18 • 16.1_ESP:0 A
- gnd-00A-18 • 10.1_Cluster:3 B

- gnd-00A-18 • 14.1_Engine_Ecu:8 D
- gnd-00A-18 • 26.1_Front_Lighting:0 D
- gnd-00A-18 • 12.1_Brake:2 B

- gnd-00A-18 • 36.1_WCL_Ricon:6 E
- gnd-00A-18 • 26.1_Front_Lighting:0 A
- gnd-00A-18 • 26.5_Fog_Corn_Dock_Lts:1 B
- gnd-00A-18 • 26.1_Front_Lighting:1 E
- gnd-00A-18 • 6.2_Network:4 C
- gnd-00A-18 • 16.2_ACC_LDW:3 A

Lh console harness

- gnd-00A-16 • 9.1_Horn:1 D
- gnd-00A-18 • 12.2_Trailler_ParkBrake:2 B
- gnd-00A-18 • 14.1_Engine_Ecu:8 C
- gnd-00A-18 • 26.3_Backup_Warnings:1 C
- gnd-00A-18 • 32.1_Level_low:1 E
- gnd-00A-18 • 33.1_Luggage_LockUnlock:1 B
- gnd-00A-18 • 31.1_Mirror:1 A
- gnd-00A-18 • 30.1_Drivers_Window:1 B
- gnd-00A-18 • 32.1_Level_low:1 D

Front harness

- gnd-00FH-18 • 29.1_Entrance_door_Keyless:2 A
- gnd-00FH-16 • 32.1_Level_low:3 D
- gnd-00FH-16 • 9.1_Horn:3 C
- gnd-00FH-18 • 34.1_wiper_washer:1 B
- gnd-00FH-18 • 12.1_Brake:2 D
- gnd-00FH-18 • 18.1_Defroster:0 B
- gnd-00FH1-12 • 18.1_Defroster:2 B
- gnd-00FH2-10 • 7.1_Mux_Power:2 B
- gnd-00FH2-10 • 7.1_Mux_Power:2 C

FJB harness

- gnd-00F1-12 • 7.1_Mux_Power:1 D
- gnd-00F1-12 • 7.1_Mux_Power:1 C
- gnd-00F2-12 • 7.1_Mux_Power:1 D
- gnd-00F2-12 • 7.1_Mux_Power:1 E

- gnd-00F3-16 • 7.1_Mux_Power:1 B
- gnd-00F4-18 • 21.1_Converter_interface:2 B
- gnd-00F5-12 • 26.4_Trailler:1 A

- gnd-00F-18 • 12.2_Trailler_ParkBrake:2 B
- gnd-00F-18 • 14.1_Engine_Ecu:5 C
- gnd-00F-18 • 42.4_ELD ITS_Gateway:5 C
- gnd-00F-14 • 16.1_ESP:2 B
- gnd-00F-18 • 30.2_Outlet_12v:1 B

- gnd-00F-18 • 4.1_Dist_12V_FJB:2 C
- gnd-00F-18 • 37.2_Power_SteeringCtrl:1 B
- gnd-00F-18 • 38.1_Fire_Supp:0 C
- gnd-00F-18 • 38.1_Fire_Supp:2 C
- gnd-00F-18 • 4.1_Dist_12V_FJB:4 A
- gnd-00F-18 • 4.1_Dist_12V_FJB:4 B
- gnd-00F-18 • 9.1_Horn:1 B

RJB harness

- gnd-00R1-18 • 27.1_Window_Ajar:0 D
- gnd-00R1-18 • 3.1_Main_Disti:2 A
- gnd-00R1-18 • 6.2_Network:1 B
- gnd-00R1-14 • 15.1_Trans_Allison:0 A
- gnd-00R1-16 • 38.1_Fire_Supp:2 C
- gnd-00R1-18 • 12.1_Brake:2 C
- gnd-00R1-18 • 33.2_LuggageLockSw:1 B
- gnd-00R1-18 • 3.2_Ign_Start:1 C
- gnd-00R1-18 • 14.1_Engine_Ecu:3 A

- gnd-00R6-10 • 7.1_Mux_Power:2 D
- gnd-00R2-12 • 7.1_Mux_Power:2 D
- gnd-00R3-12 • 7.1_Mux_Power:4 D
- gnd-00R3-12 • 7.1_Mux_Power:4 C

- gnd-00R4-12 • 7.1_Mux_Power:4 D
- gnd-00R4-12 • 7.1_Mux_Power:4 E
- gnd-00R4-16 • 7.1_Mux_Power:4 B
- gnd-00R5-14 • 1.1_batteries:0 B
- gnd-00R5-12 • 14.1_Engine_Ecu:3 C
- gnd-00R5-14 • 14.2_Urea:1 B
- gnd-00R5-18 • 26.4_Trailler:1 E

- gnd-00VA-2 • 1.1_batteries:0 C

- gnd-00-1/0 • 1.1_batteries:2 B

Electronic ground distribution

