

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
		0RAD2	Fans drive electric	A3.1	Transmission
0	Power Batteries	0TR	Trailer interface	A3.2	Transmission
0A	12V Outlets	00VA	Equalizer Gnd	A3.3	Transmission
00A	Multiplex power	12Ecu	12v Engine Ecu	A3.5	Transmission
0AltEXTR	Chassis Gnd	12ISH	Pwr I_Shift	A3.6	Transmission
0AltL	Chassis Gnd	12VA	Main distribution power	A3.7	Transmission
0AltR	Chassis Gnd	12VD	Power Batteries	A4B.8	Transmission
0AltUL	Chassis Gnd	12VI8A	Pwr to Module A50	A5.B	Transmission
0B	Engine Chassis Gnd	24VA	Main distribution power	A9CX1.2	Cluster
0C	Ignition and engine start	24VD	Power Batteries	A9CX1.4	ESP
0COND	Full HVAC passengers	24VD2	Ignition and engine start	A9CX1.5	ESP
0ECU	Engine ECU Volvo	24VD3	Main distribution power	A9CX1.6	Cluster
0EV2	Full HVAC passengers	24VI	24VI to Rear Vec	A9CX2.1	ESP
0EVAP1	Full HVAC passengers	900	J1587 network	A9CX2.2	ESP
0EVAP2	Full HVAC passengers	901	J1587 network	A9CX2.3	ESP
0F	Chassis Gnd	A1.11	Transmission	A9CX2.4	ESP
00F	GND Electronic FJB	A1.12	Transmission	A9CX2.6	ESP
00F1	Multiplex power	A1.15	Transmission	A9CX2.7	ESP
00F2	Multiplex power	A1.16	Transmission	A9CX2.9	ESP
00F3	Multiplex power	A1.18	Transmission	A9CX2.10	ESP
00F4	FJB	A1.19	Transmission	A9CX2.12	ESP
0FE	Fire suppression	A1.24	Transmission	A9CX2.13	ESP
0FH	Keyless entry system	A1.25	Transmission	A9CX2.16	ESP
00FH	Keyless entry system	A1.31	Transmission	A9CX2.17	ESP
0FH1	Driver seat	A1.33	Transmission	A9CX3.3	ESP
00FH1	HVAC defroster	A1.36	Transmission	A9CX3.5	ESP
00FH2	Multiplex power	A1.37	Transmission	A9CX3.7	ESP
00FR	GND Electronic	A1.51	Transmission	A9CX3.9	ESP
0R	Power distribution RJB	A1.52	Transmission	A9CX3.10	ESP
00R	Can Iso J2284 network	A1.54	Transmission	A9CX4.1	ESP
00R1	Master relay	A1.55	Transmission	A9CX4.4	ESP
00R2	Multiplex power	A1.58	Transmission	A9CX4.7	ESP
00R3	Multiplex power	A1.71	Transmission	A9CX4.8	ESP
00R4	Multiplex power	A1.74	Transmission	A9CX4.10	ESP
00R5	Vanner Ctr	A1.76	Transmission	A9CX4.11	ESP
00R6	Multiplex power	A1.77	Transmission	A14.A12	Cluster
00R7	Trailer interface	A2A.9	Transmission	A14.B1	Cluster
0RAD	Engine Chassis Gnd	A2A.11	Transmission	A14.B18	Cluster

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
A14.B20	Cluster	A41J1.16	Engine ECU Volvo	A45J1.16	Mirrors
A14.B21	Cluster	A41J1.19	Engine ECU Volvo	A45J2.1	HVAC defroster
A27.30	Power steering	A41J2.2	Keyless entry system	A45J2.4	HVAC defroster
A27.87A	Power steering	A41J2.15	Keyless entry system	A45J2.7	Driver & entrance window
A31J4.1	Keyless entry system	A41RJ1.18	Keyless entry system	A45J2.13	Driver & entrance window
A31J4.2	Keyless entry system	A41RJ2.14	FJB	A45RJ1.17	Fog, cornering, docking lights
A31J4.3	Keyless entry system	A42J1.3	FJB	A46J1.1	Horn
A31J4.4	Keyless entry system	A42J1.4	FJB	A46J1.4	Lights, flashers, markers
A31J4.5	Keyless entry system	A42J1.7	FJB	A46J1.10	Lights, flashers, markers
A31J4.7	Keyless entry system	A42J1.13	FJB	A46J1.13	Lights, flashers, markers
A31J4.8	Keyless entry system	A42J1.16	FJB	A46J2.1	Fog, cornering, docking lights
A31J5.1	Keyless entry system	A42J1.18	FJB	A46J2.4	Lights, flashers, markers
A31J5.3	Keyless entry system	A42J2.15	FJB	A46J2.7	Lights, flashers, markers
A34.A5	Fans drive electric	A43J1.1	Lugg. doors locks	A46RJ1.17	Lights, flashers, markers
A34.B5	Fans drive electric	A43J1.3	Lugg. doors locks	A46RJ1.18	Lights, flashers, markers
A34.C5	Fans drive electric	A43J1.4	ACB	A47J1.1	HVAC defroster
A34.D5	Fans drive electric	A43J1.7	TPMS	A47J1.3	HVAC defroster
A34.E5	Fans drive electric	A43J2.1	Lugg. doors locks	A47J1.4	HVAC defroster
A34.F5	Fans drive electric	A43J2.4	Lugg. doors locks	A47J1.7	Wipers and washer
A34.G5	Fans drive electric	A43J2.7	Engine ECU Volvo	A47J1.16	Small A/C
A34.H5	Fans drive electric	A43J2.10	Engine ECU Volvo	A47J2.1	HVAC defroster
A34J.E	Fans drive electric	A43RJ1.17	ACB	A47J2.4	HVAC defroster
A34J.F	Fans drive electric	A44J1.7	Wipers and washer	A47J2.7	Keyless entry system
A34R.A3	Fans drive electric	A44J1.10	Wipers and washer	A47J2.10	Keyless entry system
A34R.B3	Fans drive electric	A44J1.16	Horn	A47J2.15	Small A/C
A34R.C3	Fans drive electric	A44J1.19	Luggages lights	A47RJ1.6	HVAC defroster
A34R.D3	Fans drive electric	A44J2.1	Sun visor	A47RJ1.17	HVAC defroster
A34R.E3	Fans drive electric	A44J2.4	Sun visor	A47RJ1.18	Wipers and washer
A34R.F3	Fans drive electric	A44J2.7	Driver lights	A47RJ2.2	Keyless entry system
A34R.G3	Fans drive electric	A44J2.10	Sun visor	A47RJ2.3	Small A/C
A34R.H3	Fans drive electric	A44J2.13	Sun visor	A48J1.1	Fog, cornering, docking lights
A36JA.11	Horn	A44RJ1.17	Lights, flashers, markers	A48J1.3	Fog, cornering, docking lights
A36JA.15	Ignition and engine start	A44RJ2.2	Driver lights	A48J1.7	Lights, flashers, markers
A36JA.17	Ignition and engine start	A44RJ2.3	Wipers and washer	A48J1.10	Lights, flashers, markers
A36JA.25	Brake, engine brake, retarder	A45J1.1	HVAC defroster	A48J2.1	Lights, flashers, markers
A41J1.3	Keyless entry system	A45J1.3	HVAC defroster	A48J2.4	Lights, flashers, markers
A41J1.4	Keyless entry system	A45J1.4	Power steering	A48J2.7	Driver & entrance window
A41J1.7	12V Power distribution FJB	A45J1.7	Fog, cornering, docking lights	A48J2.10	Driver & entrance window

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
A48J2.13	Lights, flashers, markers	A51RJ1.17	Rr flashers, markers, tail & stop light	A58J1.1	Slide out front left
A48RJ1.17	Fog, cornering, docking lights	A51RJ1.18	Fog, cornering, docking lights	A58J1.4	Slide out front left
A48RJ1.18	Lights, flashers, markers	A52J1.1	Fans drive electric	A58J1.7	Slide out front left
A48RJ2.2	Lights, flashers, markers	A52J1.3	Fans drive electric	A58J1.10	Slide out front left
A49J1.1	Fans drive electric	A52J1.7	Engine and RJB lights	A58J1.16	Slide out front left
A49J1.3	Fans drive electric	A52J1.10	Ignition and engine start	A58J1.19	Slide out front left
A49J1.10	Full HVAC passengers	A52J1.13	RJB fan	A58J2.1	Slide out front left
A49J1.17	Small A/C	A52J2.1	Alternators	A58J2.4	Slide out front left
A49J1.18	Small A/C	A52J2.4	Alternators	A58J2.11	Slide out front left
A49J2.1	Alternators	A52J2.13	Ignition and engine start	A58J2.15	Slide out front left
A49J2.4	Small A/C	A52RJ1.17	RJB_Gnd	A58RJ1.17	Slide out front left
A49J2.13	Brake, engine brake, retarder	A52RJ1.18	Engine and RJB lights	A58RJ2.2	Slide out front left
A49J2.15	Full HVAC passengers	A52RJ2.3	Ignition and engine start	A58RJ2.14	Slide out front left
A49RJ1.6	Small A/C	A54J1.1	Full HVAC passengers	A59J1.7	Slide out rear left
A49RJ1.18	Full HVAC passengers	A54J1.3	Full HVAC passengers	A59J1.10	Slide out rear left
A49RJ2.2	Fans drive electric	A54J1.7	Full HVAC passengers	A59J1.16	Slide out rear left
A50J1.4	Air dryer and heater	A54J1.10	Full HVAC passengers	A59J1.19	Slide out rear left
A50J1.7	Backup warnings	A54J1.16	Full HVAC passengers	A59J2.15	Slide out rear left
A50J1.13	Rr flashers, markers, tail & stop light	A54J1.19	Full HVAC passengers	A59RJ1.17	Slide out rear left
A50J1.19	Rr flashers, markers, tail & stop light	A54J2.4	Full HVAC passengers	A59RJ2.2	Slide out rear left
A50J2.1	Rr flashers, markers, tail & stop light	A54J2.7	Full HVAC passengers	A59RJ2.14	Slide out rear left
A50J2.7	Rr flashers, markers, tail & stop light	A54J2.10	Full HVAC passengers	A77.A	Equalizer
A50J2.10	Backup warnings	A54J2.13	Full HVAC passengers	A77.H	Equalizer
A50RJ1.17	Rr flashers, markers, tail & stop light	A54J2.15	Full HVAC passengers	A78.3	Equalizer
A50RJ1.18	Rr flashers, markers, tail & stop light	A54RJ1.6	Full HVAC passengers	A78.4	Equalizer
A50RJ2.2	Backup warnings	A54RJ1.17	Full HVAC passengers	A79.3	Equalizer
A50RJ2.3	Air dryer and heater	A54RJ2.2	Full HVAC passengers	A80.3	Equalizer
A51J1.1	Fog, cornering, docking lights	A54RJ2.3	Full HVAC passengers	A80.4	Equalizer
A51J1.3	Fog, cornering, docking lights	A55J1.1	Driver lights	A81JB.4	Engine ECU Volvo
A51J1.4	Rr flashers, markers, tail & stop light	A55J1.4	Cluster	A81JB.6	Power steering
A51J1.7	Rr flashers, markers, tail & stop light	A55J2.15	Keyless entry system	A81JB.10	Engine ECU Volvo
A51J1.10	Rr flashers, markers, tail & stop light	A55RJ1.18	Steering multifunctions	A81JB.15	Ignition and engine start
A51J1.13	Rr flashers, markers, tail & stop light	A56J1.3	Cluster	A81JB.16	Engine ECU Volvo
A51J1.16	Transmission	A56J1.4	Cluster	A81JB.17	Engine ECU Volvo
A51J2.1	Rr flashers, markers, tail & stop light	A56J1.7	Cluster	A81JB.19	Engine ECU Volvo
A51J2.4	Transmission	A56J1.10	Cluster	A81JB.22	Engine ECU Volvo
A51J2.7	Rr flashers, markers, tail & stop light	A56J1.13	Multiplex power	A81JB.23	Engine ECU Volvo
A51J2.10	Rr flashers, markers, tail & stop light	A56J2.15	Lugg. doors locks	A81JB.26	Engine ECU Volvo

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
A96.8.Black	TPMS	Alt_LL	Alternators	Clnt6	FJB
A96.23.Red	TPMS	Alt_UL	Alternators	Clnt7	FJB
A96.24.Black	TPMS	Alt_UR	Alternators	Clnt8	FJB
A96.25.Red	TPMS	AltLL	Main distribution power	CTS	Multiplex network
A96.27.Black	TPMS	AltUL	Alternators	Cts	Multiplex network
A96.28.Red	TPMS	AltUR	Main distribution power	D1	Ignition and engine start
A100.3.White	TPMS	B85.2	Urea System	D12	Horn
A101.3.White	TPMS	B97.2	Urea System	D13	Horn
A102.3.White	TPMS	B98.2	Urea System	D51	Tag and level low
A103.1	Steering multifunctions	B115A.3	Delta P Signals	D75	Slide out front left
A103.3	Steering multifunctions	BussBar	Main distribution power	DATAKH	Keyless entry system
A103.5	Horn	CanH2	Spare	DATAKL	Keyless entry system
A108.5	Cmd_Ground	CanL2	Spare	DL0H	Spare
A130.3	Fire suppression	CB1	Main distribution power	DL0L	Spare
A130.4	Fire suppression	CB2	Main distribution power	DL1H	J1939 network
A130.6	Fire suppression	CB3	Main distribution power	DL1L	J1939 network
A130.8	Fire suppression	CB5	Main distribution power	DL2H	Transmission
A130.11	Fire suppression	CB6	Main distribution power	DL2L	Transmission
A131B.A	Fire suppression	CB8	Main distribution power	DL3H	DBUS network
A131B.C	Fire suppression	CB10	Main distribution power	DL3L	DBUS network
A137A.4	Urea System	CB48	Lights, flashers, markers	DL7H	Engine ECU Volvo
A137A.7	Urea System	CB128	Power distribution RJB	DL7L	Engine ECU Volvo
A137A.8	Urea System	CB201	Fans drive electric	DSO1.1	Slide out front left
A137A.24	Urea System	CB202	Fans drive electric	DSO2.1	Slide out rear left
A137A.28	Urea System	CB203	Fans drive electric	EI.7	Cluster
A137A.40	Urea System	CB204	Fans drive electric	EI.18	Engine ECU Volvo
A137A.44	Urea System	CB205	Fans drive electric	EMS.EB29	Ignition and engine start
A137A.49	Urea System	CB206	Fans drive electric	F4	Volvo link TGW
A137A.50	Urea System	CB207	Fans drive electric	F10	Cluster
A137A.51	Urea System	CB208	Fans drive electric	F11	Horn
A137A.54	Urea System	CC16	FJB	F12	Keyless entry system
A137A.56	Urea System	CC17	FJB	F13	12V Power distribution FJB
A137A.59	Urea System	Cd1	Multiplex network	F16	12V Power distribution FJB
A137A.62	Urea System	Clnt1	FJB	F17	Multiplex power
A138.3	Urea System	Clnt2	FJB	F18	Multiplex power
A138.12	Urea System	Clnt3	FJB	F19	Multiplex power
AE59J1.1	Slide out rear left	Clnt4	FJB	F20	Multiplex power
AE59J1.4	Slide out rear left	Clnt5	FJB		

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
F21	Multiplex power	F130	Windows ajar	N11	Multiplex network
F23	ESP	F131	Power distribution RJB	N12	Multiplex network
F24	12V Power distribution FJB	F133	Multiplex power	N13	Multiplex network
F25	12V Outlets	F134	Multiplex power	N14	Multiplex network
F27	Driver seat	F135	Multiplex power	N15	Multiplex network
F29	12V Power distribution FJB	F136	Multiplex power	N16	Multiplex network
F30	Can Iso J2284 network	F137	24VI to Mux	N17	Multiplex network
F34	Multiplex power	F139	Alternators	N18	Multiplex network
F35	Multiplex power	F141	Small A/C	N19	Multiplex network
F36	Ignition and engine start	F142	Full HVAC passengers	N20	Multiplex network
F37	Keyless entry system	F143	Full HVAC passengers	N21	Multiplex network
F39	24V Pole power	F144	Full HVAC passengers	N22	Multiplex network
F40	Fire suppression	F147	Power distribution RJB	N23	Multiplex network
F41	Multiplex power	F199	Fans drive electric	N24	Multiplex network
F42	Pwr I_Shift	gnd_1	Cantrack	N27	Multiplex network
F43	Pwr I_Shift	Gnd_2	Cantrack	N28	Multiplex network
F44	Multiplex power	GndA	Multiplex network	N29	Multiplex network
F45	Multiplex power	jumper	Lugg. doors locks	N30	Multiplex network
F46	Multiplex power	L350A.B2	Engine ECU Volvo	N31	Multiplex network
F47	Multiplex power	Mo40.2	Windows ajar	N32	Multiplex network
F50	HVAC defroster	Mo65.3	Fans drive electric	N33	Multiplex network
F51	12V Ignition	Mo67.3	Fans drive electric	N56-1	Multiplex network
F73	Engine ECU Volvo	Mo68.3	Fans drive electric	N56-2	Multiplex network
F90	Power to Ecm	Mo69.3	Fans drive electric	Pot1	Multiplex power
F91	Engine ECU Volvo	Mo70.3	Fans drive electric	R6.30	Keyless entry system
F95	Volvo link TGW	Mo71.3	Fans drive electric	R7.30	Keyless entry system
F96	Urea System	Mo72.3	Fans drive electric	R12	Full HVAC passengers
F99	Power distribution RJB	Mo73.3	Fans drive electric	R20.87	Full HVAC passengers
F100	Engine ECU Volvo	N1	Multiplex network	R21.87	Ignition and engine start
F101	Main distribution power	N2	Multiplex network	R22.87	ECU Ignition
F106	Multiplex power	N3	Multiplex network	R23.30	Transmission
F107	Multiplex power	N4	Multiplex network	R25.87	24VI
F108	Can Iso J2284 network	N5	Multiplex network	R26.30	Full HVAC passengers
F109	Engine and RJB lights	N6	Multiplex network	R27.87A	Wipers and washer
F110	Transmission	N7	Multiplex network	R29	Engine ECU Volvo
F112	Trailer interface	N8	Multiplex network	R30.87	12V Power distribution FJB
F121	Power distribution RJB	N9	Multiplex network	R31.87	12V Power distribution FJB
F126	Full HVAC passengers	N10	Multiplex network	R34.30	Ignition and engine start

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
R36.87	Horn	Se35.A	Transmission	spare28	Spare
R37.30	Horn	Se35.B	Transmission	spare29	Spare
R38.87	12V Outlets	Se37.1	ESP	spare30	Spare
R_Starter	Ignition and engine start	Se37.2	ESP	spare31	Spare
RSO1_CL	Slide out front left	Se38.1	ESP	spare32	Spare
RSO1_OP	Slide out front left	Se38.2	ESP	spare33	Spare
RSO2_CL	Slide out rear left	Se39.1	ESP	spare34	Spare
RSO2_OP	Slide out rear left	Se39.2	ESP	spare35	Spare
RTS	Multiplex network	Se40.1	ESP	spare39	Spare
Rts	Multiplex network	Se40.2	ESP	spare40	Spare
RX	TPMS	Se45.2	Cluster	spare41	Spare
Rx	Cantrack	Se46.B	Trailer park Brake	spare42	Spare
RxD	Multiplex network	Se53.C	Cluster	spare43	Spare
RxTx	Multiplex network	Se54.C	Cluster	spare44	Spare
Se11.Sig	Cluster	Se55.C	Cluster	spare64	Spare
Se11.Wrn	Cluster	Se63.1	ESP	spare65	Spare
Se13.B	Engine ECU Volvo	Se63.2	ESP	spare72	Spare
Se14A.B	Engine ECU Volvo	Se64.1	ESP	spare73	Spare
Se14B.C	Engine ECU Volvo	Se64.2	ESP	Sw1.5	Lights, flashers, markers
Se15.NO	Keyless entry system	Se67.C	ESP	Sw1C258.2	Lights, flashers, markers
Se16	Keyless entry system	Se69.C	ESP	Sw1C258.3	Lights, flashers, markers
Se17.NC	Keyless entry system	SES02.4	Slide out front left	Sw1C258.4	Lights, flashers, markers
Se17.NO	Keyless entry system	SES03.2	Slide out front left	Sw1C258.6	Lights, flashers, markers
Se18.B	Brake, engine brake, retarder	SES05.4	Slide out rear left	Sw1C258.7	Lights, flashers, markers
Se19_P.D	Brake, engine brake, retarder	SES06.2	Slide out rear left	Sw1C258.8	Lights, flashers, markers
Se19_S.D	Brake, engine brake, retarder	Shield_149	gnd shield	Sw1C259.1	Lights, flashers, markers
Se20.B	Cluster	Shield_149A	Gnd Shield	Sw1C259.2	Lights, flashers, markers
Se21.2	HVAC defroster	So9.B	Full HVAC passengers	Sw1C259.4	Lights, flashers, markers
Se23	Full HVAC passengers	So36	Small A/C	Sw2.3	Lights, flashers, markers
Se24.2	Full HVAC passengers	spare17	Spare	Sw2.6	Lights, flashers, markers
Se24.3	Full HVAC passengers	spare18	Spare	Sw3.3	Fog, cornering, docking lights
Se25.2	Full HVAC passengers	spare19	Spare	Sw3.8	Fog, cornering, docking lights
Se30.A	Engine and RJB lights	spare20	Spare	Sw4.3	Lights, flashers, markers
Se32.A	Transmission	spare21	Spare	Sw4.8	Lights, flashers, markers
Se32.B	Transmission	spare22	Spare	Sw6.4	Wipers and washer
Se33.A	Transmission	spare23	Spare	Sw14.3	Engine ECU Volvo
Se34.A	Transmission	spare24	Spare	Sw14.8	Engine ECU Volvo
Se34.B	Transmission	spare25	Spare	Sw16.3	Brake, engine brake, retarder

Circuits list

Circuit ID	Description	Circuit ID	Description	Circuit ID	Description
Sw16.8	Brake, engine brake, retarder	Sw103A.6	Backup warnings	Tx	Cantrack
Sw17.6	Engine ECU Volvo	Sw104.1	Keyless entry system	TxD	Multiplex network
Sw18A.2B	Lugg. doors locks	Sw104.3	Keyless entry system	ve+	Cantrack
Sw18A.4	Keyless entry system	Sw104.5B	Keyless entry system		
Sw18A.6	Keyless entry system	Sw107.2	Tag and level low		
Sw24.3	Driver lights	Sw107.4	Tag and level low		
Sw24.6	Driver lights	Sw107.6	Tag and level low		
Sw34.2B	Driver & entrance window	Sw107.8	Tag and level low		
Sw35.3	Engine ECU Volvo	Sw107.10	Tag and level low		
Sw35.8	Engine ECU Volvo	Sw108.1	Tag and level low		
Sw38.2B	Driver & entrance window	Sw108.3	Tag and level low		
Sw40.B	Trailer park Brake, engine brake, ret	Sw109	Lugg. doors locks		
Sw41.A1	Mirrors	Sw110	Lugg. doors locks		
Sw41.A3	Mirrors	Sw111	Lugg. doors locks		
Sw41.B1	Mirrors	Sw112	Lugg. doors locks		
Sw41.B2	Mirrors	Sw113	Lugg. doors locks		
Sw41.B4	Mirrors	Sw114	Lugg. doors locks		
Sw44	Luggages lights	Sw115	Lugg. doors locks		
Sw58.5	Ignition and engine start	Sw116	Lugg. doors locks		
Sw58.7	Ignition and engine start	Sw117	Lugg. doors locks		
Sw59.3	Ignition and engine start	Sw122.1	HVAC defroster		
Sw63A.3	Horn	Sw122.3	HVAC defroster		
Sw63A.4	Horn	Sw152.B	Fire suppression		
Sw64	Tag and level low	Sw156.6	Mirrors		
Sw82.4	Master relay	Sw156.8	Mirrors		
Sw82.5	Master relay	Sw157.2B	Sun visor		
Sw83.Acc	Ignition and engine start	Sw158.2B	Sun visor		
Sw83.Ign	Ignition and engine start	SwSo1.4	Slide out front left		
Sw83.St	Ignition and engine start	SwSo1.5	Slide out front left		
Sw85.A1	Mirrors	SwSo2.4	Slide out rear left		
Sw85.A3	Mirrors	SwSo2.5	Slide out rear left		
Sw85.B1	Mirrors	TR-Black	Trailer interface		
Sw85.B2	Mirrors	TR-Blue	Trailer interface		
Sw85.B4	Mirrors	TR-Brown	Trailer interface		
Sw99.3	Fog, cornering, docking lights	TR-Green	Trailer interface		
Sw102.3	Fog, cornering, docking lights	TR-Red	Trailer interface		
Sw102.8	Fog, cornering, docking lights	TR-Yellow	Trailer interface		
Sw103A.3	Backup warnings	TX	TPMS		