

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	PowerBatteries	12VA	Maindistributionpower	A3.5	Transmission
0	PowerBatteries	12VD	PowerBatteries	A3.6	Transmission
0A	12VOutlets	12VI8A	PwrtoModuleA50	A3.7	Transmission
00A	Keylessentrysystem	24VA	Maindistributionpower	A4B.8	Transmission
00A1	Multiplexpower	24VD	PowerBatteries	A5.B	Transmission
0AItEXTR	ChassisGnd	24VD2	Ignitionandenginestart	A9CX1.2	Cluster
0AItL	ChassisGnd	24VD3	Maindistributionpower	A9CX1.4	ESP
0AItR	ChassisGnd	24VI	24VIttoRearVec	A9CX1.5	ESP
0AItUL	ChassisGnd	26	DriverWindoPw	A9CX1.6	Cluster
0B	EngneChassisGnd	41RJ1.6	Keylessentrysystem	A9CX2.1	ESP
0C	Ignitionandenginestart	76	24VIPreHeater	A9CX2.2	ESP
0COND	FullHVACpassengers	136A	TransmissionPwr	A9CX2.3	ESP
0ECU	EngneECUVolvo	146A	PwrtoModuleA50	A9CX2.4	ESP
0EVAP1	FullHVACpassengers	290A	GndFanClutch	A9CX2.6	ESP
0F	ChassisGnd	900	J1587network	A9CX2.7	ESP
00F	GNDElectronic	901	J1587network	A9CX2.9	ESP
00F1	Multiplexpower	_00	PowerBatteries	A9CX2.10	ESP
00F2	Multiplexpower	A1.11	Transmission	A9CX2.12	ESP
00F3	Multiplexpower	A1.12	Transmission	A9CX2.13	ESP
00F4	FJB	A1.15	Transmission	A9CX2.16	ESP
00F5	Groundelec	A1.16	Transmission	A9CX2.17	ESP
0FE	Firesuppression	A1.18	Transmission	A9CX3.3	ESP
0FH	Keylessentrysystem	A1.19	Transmission	A9CX3.5	ESP
00FH	Keylessentrysystem	A1.24	Transmission	A9CX3.7	ESP
0FH1	Driverseat	A1.25	Transmission	A9CX3.9	ESP
00FH1	HVACdefroster	A1.31	Transmission	A9CX3.10	ESP
00FH2	Multiplexpower	A1.33	Transmission	A9CX4.1	ESP
00FR	GNDElectronic	A1.36	Transmission	A9CX4.4	ESP
0R	PowerdistributionRJB	A1.37	Transmission	A9CX4.7	ESP
00R	CanIsoJ2284network	A1.51	Transmission	A9CX4.8	ESP
00R1	Masterrelay	A1.52	Transmission	A9CX4.10	ESP
00R2	Multiplexpower	A1.54	Transmission	A9CX4.11	ESP
00R3	Multiplexpower	A1.55	Transmission	A14.A12	Cluster
00R4	Multiplexpower	A1.58	Transmission	A14.B1	Cluster
00R5	VannerCtr	A1.71	Transmission	A14.B18	Cluster
00R6	Multiplexpower	A1.74	Transmission	A14.B20	Cluster
0RAD	EngneChassisGnd	A1.76	Transmission	A14.B21	Cluster
0RAD2	Fansdriveelectric	A1.77	Transmission	A27.30	Powersteering
0TR.White	Trailerinterface	A2A.9	Transmission	A27.87A	Powersteering
00VA	EqualizerGnd	A2A.11	Transmission	A31J4.1	Keylessentrysystem
0W	GNDStud	A3.1	Transmission	A31J4.2	Keylessentrysystem
12Ecu	12vEngineEcu	A3.2	Transmission	A31J4.3	Keylessentrysystem
12ISH	PwrI_Shift	A3.3	Transmission	A31J4.4	Keylessentrysystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A31J4.5	Keylessentrysystem	A42J1.3	FJB	A46J1.13	Frflash
A31J4.6	Keylessentrysystem	A42J1.4	FJB	A46J2.1	Fog
A31J4.7	Keylessentrysystem	A42J1.7	FJB	A46J2.4	Frheadlights
A31J4.8	Keylessentrysystem	A42J1.10	Kneeling	A46J2.7	Frheadlights
A31J5.1	Keylessentrysystem	A42J1.13	Kneeling	A46RJ1.17	Frflash
A31J5.3	Keylessentrysystem	A42J1.16	FJB	A46RJ1.18	Frflash
A34.A5	Fansdriveelectric	A42J1.18	FJB	A47J1.1	HVACdefroster
A34.B5	Fansdriveelectric	A42J2.15	FJB	A47J1.3	HVACdefroster
A34.C5	Fansdriveelectric	A43J1.1	Lugg.doorslocks	A47J1.4	HVACdefroster
A34.D5	Fansdriveelectric	A43J1.3	Lugg.doorslocks	A47J1.7	Wipersandwasher
A34.E5	Fansdriveelectric	A43J1.7	TPMS	A47J1.16	SmallA/C
A34.F5	Fansdriveelectric	A43J2.1	Lugg.doorslocks	A47J2.1	HVACdefroster
A34.G5	Fansdriveelectric	A43J2.4	Lugg.doorslocks	A47J2.4	HVACdefroster
A34.H5	Fansdriveelectric	A43J2.7	EngineECUVolvo	A47J2.15	SmallA/C
A34J.E	Fansdriveelectric	A43J2.10	EngineECUVolvo	A47RJ1.6	HVACdefroster
A34J.F	Fansdriveelectric	A43RJ1.17	ACB	A47RJ1.17	HVACdefroster
A34R.A3	Fansdriveelectric	A44J1.4	12VPowerdistributionFJB	A47RJ1.18	Wipersandwasher
A34R.B3	Fansdriveelectric	A44J1.7	Wipersandwasher	A47RJ2.2	Keylessentrysystem
A34R.C3	Fansdriveelectric	A44J1.10	Wipersandwasher	A47RJ2.3	SmallA/C
A34R.D3	Fansdriveelectric	A44J1.16	Horn	A48J1.1	Fog
A34R.E3	Fansdriveelectric	A44J1.19	Luggageslights	A48J1.3	Fog
A34R.F3	Fansdriveelectric	A44J2.1	Sunvisor	A48J1.7	Frflash
A34R.G3	Fansdriveelectric	A44J2.4	Sunvisor	A48J1.10	Frflash
A34R.H3	Fansdriveelectric	A44J2.7	Driverlight	A48J2.1	Frheadlights
A36JA.10	Ignitionandenginestart	A44J2.7.A	Driverlight	A48J2.4	Frheadlights
A36JA.11	Horn	A44J2.10	Sunvisor	A48J2.7	Driver&entracewindow
A36JA.15	Ignitionandenginestart	A44J2.13	Sunvisor	A48J2.10	Driver&entracewindow
A36JA.16	FJB	A44RJ1.17	Frflash	A48J2.13	Frflash
A36JA.17	Ignitionandenginestart	A44RJ2.2	Driverlights	A48RJ1.17	Fog
A36JA.18	Ignitionandenginestart	A44RJ2.3	Wipersandwasher	A48RJ1.18	Frflash
A36JA.25	Brake	A45J1.1	HVACdefroster	A48RJ2.2	Frflash
A40.3.Blue	Trailerinterface	A45J1.3	HVACdefroster	A49J1.1	Fansdriveelectric
A41J1.1	Keylessentrysystem	A45J1.4	Powersteering	A49J1.3	Fansdriveelectric
A41J1.3	Keylessentrysystem	A45J1.7	12VPowerdistributionFJB	A49J1.10	FullHVACpassengers
A41J1.4	Keylessentrysystem	A45J1.16	Mirrors	A49J1.17	SmallA/C
A41J1.7	Keylessentrysystem	A45J2.1	HVACdefroster	A49J1.18	SmallA/C
A41J1.16	EngineECUVolvo	A45J2.4	HVACdefroster	A49J2.1	Alternators
A41J1.19	EngineECUVolvo	A45J2.7	Driver&entracewindow	A49J2.4	SmallA/C
A41J2.2	Keylessentrysystem	A45J2.13	Driver&entracewindow	A49J2.13	Brake
A41J2.15	Keylessentrysystem	A45RJ1.17	Fog	A49J2.15	SmallA/C
A41RJ1.6	Keylessentrysystem	A46J1.1	Horn	A49RJ1.6	SmallA/C
A41RJ1.18	Keylessentrysystem	A46J1.4	Frflash	A49RJ1.18	FullHVACpassengers
A41RJ2.14	FJB	A46J1.10	Frflash	A49RJ2.2	Fansdriveelectric

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A49RJ2.3	SmallA/C	A54J2.7	HVACPassengers	A59J2.15	Slideoutrearleft
A50J1.4	Airdryerandheater	A54J2.10	FullHVACpassengers	A59RJ1.17	Slideoutrearleft
A50J1.7	Backupwarnings	A54J2.15	FullHVACpassengers	A59RJ2.2	Slideoutrearleft
A50J1.13	Rrflashers	A54RJ1.6	FullHVACpassengers	A59RJ2.14	Slideoutrearleft
A50J1.19	Rrflashers	A54RJ1.17	FullHVACpassengers	A77.A	Equalizer
A50J2.1	Rrflashers	A54RJ1.18	FullHVACpassengers	A77.H	Equalizer
A50J2.7	Rrflashers	A54RJ2.2	FullHVACpassengers	A78.3	Equalizer
A50J2.10	Backupwarnings	A54RJ2.3	FullHVACpassengers	A78.4	Equalizer
A50RJ1.17	Rrflashers	A54RJ2.14	FullHVACpassengers	A79.3	Equalizer
A50RJ1.18	Rrflashers	A55J1.1	Driverlights	A80.3	Equalizer
A50RJ2.2	Backupwarnings	A55J1.4	Cluster	A80.4	Equalizer
A50RJ2.3	Airdryerandheater	A55J2.1	Driverlights	A81JB.4	EngineECUVolvo
A51J1.1	Fog	A55J2.15	Keylessentriystem	A81JB.6	Powersteering
A51J1.3	Fog	A55RJ1.18	Steeringmultifunctions	A81JB.10	EngineECUVolvo
A51J1.4	Rrflashers	A56J1.3	Cluster	A81JB.15	Ignitionandenginestart
A51J1.7	Rrflashers	A56J1.4	Cluster	A81JB.16	EngineECUVolvo
A51J1.10	Rrflashers	A56J1.7	Cluster	A81JB.17	EngineECUVolvo
A51J1.13	Rrflashers	A56J1.10	Cluster	A81JB.19	EngineECUVolvo
A51J1.16	Transmission	A56J1.13	Multiplexpower	A81JB.22	EngineECUVolvo
A51J1.19	WCL	A56J2.15	Frflash	A81JB.23	EngineECUVolvo
A51J2.1	Rrflashers	A57J1.1	WCL	A81JB.26	EngineECUVolvo
A51J2.4	Transmission	A57J1.3	WCL	A96.8.Black	TPMS
A51J2.7	Rrflashers	A57J1.19		A96.23.Red	TPMS
A51J2.10	Rrflashers	A57RJ1.18		A96.24.Black	TPMS
A51RJ1.17	Rrflashers	A58J1.1	Slideoutfrontleft	A96.25.Red	TPMS
A51RJ1.18	Fog	A58J1.4	Slideoutfrontleft	A96.27.Black	TPMS
A52J1.1	Fansdriveelectric	A58J1.7	Slideoutfrontleft	A96.28.Red	TPMS
A52J1.3	Fansdriveelectric	A58J1.10	Slideoutfrontleft	A100.3.White	TPMS
A52J1.7	EngineandRJBlights	A58J1.16	Slideoutfrontleft	A101.3.White	TPMS
A52J1.10	Ignitionandenginestart	A58J1.19	Slideoutfrontleft	A102.3.White	TPMS
A52J1.13	RJBfan	A58J2.1	Slideoutfrontleft	A103.1	Steeringmultifunctions
A52J2.1	Alternators	A58J2.4	Slideoutfrontleft	A103.3	Steeringmultifunctions
A52J2.4	Alternators	A58J2.11	Slideoutfrontleft	A103.5	Horn
A52J2.13	Ignitionandenginestart	A58J2.15	Slideoutfrontleft	A108.5	Cmd_Ground
A52RJ1.17	RJB_Gnd	A58RJ1.17	Slideoutfrontleft	A130.3	Firesuppression
A52RJ1.18	EngineandRJBlights	A58RJ2.2	Slideoutfrontleft	A130.4	Firesuppression
A54J1.1	FullHVACpassengers	A58RJ2.14	Slideoutfrontleft	A130.6	Firesuppression
A54J1.3	FullHVACpassengers	A59J1.1	Slideoutrearleft	A130.8	Firesuppression
A54J1.7	FullHVACpassengers	A59J1.4	Slideoutrearleft	A130.11	Firesuppression
A54J1.10	FullHVACpassengers	A59J1.7	Slideoutrearleft	A131A.C	Firesuppression
A54J1.16	SmallA/C	A59J1.10	Slideoutrearleft	A131B.A	Firesuppression
A54J1.19	FullHVACpassengers	A59J1.16	Slideoutrearleft	A131B.C	Firesuppression
A54J2.4	FullHVACpassengers	A59J1.19	Slideoutrearleft	A137A.4	UreaSystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A137A.7	UreaSystem	CB204	Fansdriveelectric	EI.7	Cluster
A137A.8	UreaSystem	CB205	Fansdriveelectric	EI.18	EngineECUVolvo
A137A.24	UreaSystem	CB206	Fansdriveelectric	EMS.EB29	Ignitionandenginestart
A137A.28	UreaSystem	CB207	Fansdriveelectric	F10	Cluster
A137A.40	UreaSystem	CB208	Fansdriveelectric	F11	Horn
A137A.44	UreaSystem	CB301.Black	Trailerinterface	F12	Keylessentriystem
A137A.49	UreaSystem	CC16	FJB	F13	12VPowerdistributionFJB
A137A.50	UreaSystem	CC17	FJB	F14	Multiplexpower
A137A.51	UreaSystem	Cd1	Multiplexnetwork	F15	Keylessentriystem
A137A.54	UreaSystem	Clnt1	FJB	F16	12VPowerdistributionFJB
A137A.56	UreaSystem	Clnt2	FJB	F18	Multiplexpower
A137A.59	UreaSystem	Clnt3	FJB	F19	Multiplexpower
A137A.62	UreaSystem	Clnt4	FJB	F20	Multiplexpower
A138.3	UreaSystem	Clnt5	FJB	F21	Multiplexpower
A138.12	UreaSystem	Clnt6	FJB	F22	ELD/ITS Gateway
Alt_LL	Alternators	Clnt7	FJB	F23	ESP
Alt_UL	Alternators	Clnt8	FJB	F24	12VPowerdistributionFJB
Alt_UR	Alternators	CTS	Multiplexnetwork	F25	12VOutlets
AltLL	Maindistributionpower	Cts	Multiplexnetwork	F27	Driverseat
AltUL	Alternators	D1	Ignitionandenginestart	F29	12VPowerdistributionFJB
AltUR	Maindistributionpower	D12	Horn	F30	CanIsoJ2284network
B85.2	UreaSystem	D13	Horn	F33	AirDryer
B97.2	UreaSystem	D51	Tagandlevellow	F35	Multiplexpower
B98.2	UreaSystem	D75	Slideoutfrontleft	F36	Ignitionandenginestart
B115A.3	DeltaPSignals	D82.A	Driverlight	F37	Keylessentriystem
BussBar	12VtoCB10	D88.A	Luggageslights	F39	24VPowerdistributionFJB
CanH2	Spare	D89.A	Luggageslights	F40	Firesuppression
CanL2	Spare	DATAKH	Keylessentriystem	F41	Multiplexpower
CB1	Maindistributionpower	DATAKL	Keylessentriystem	F42	PwrI_Shift
CB2	Maindistributionpower	DL0H	Spare	F43	PwrI_Shift
CB3	Maindistributionpower	DL0L	Spare	F44	Multiplexpower
CB5	Maindistributionpower	DL1H	J1939network	F45	Multiplexpower
CB6	Maindistributionpower	DL1L	J1939network	F46	Multiplexpower
CB7	Maindistributionpower	DL2H	Transmission	F47	Multiplexpower
CB8	Maindistributionpower	DL2L	Transmission	F50	HVACdefroster
CB10	Maindistributionpower	DL3H	DBUSnetwork	F51	Multiplexpower
CB48	Frfash	DL3L	DBUSnetwork	F52	ELD/ITS Gateway
CB117	Trailer	DL7H	EngineECUVolvo	F53	Tagandlevellow
CB119	Trailerinteface	DL7L	EngineECUVolvo	F73	EngineECUVolvo
CB128	PowerdistributionRJB	DL100H	J1939network	F90	PowertoEcm
CB201	Fansdriveelectric	DL100L	J1939network	F91	EngineECUVolvo
CB202	Fansdriveelectric	DSO1.1	Slideoutfrontleft	F95	ELD/ITS Gateway
CB203	Fansdriveelectric	DSO2.1	Slideoutrearleft	F96	UreaSystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
F99	PowerdistributionRJB	Mo69.3	Fansdriveelectric	R12	FullHVACpassengers
F100	EngineECUVolvo	Mo70.3	Fansdriveelectric	R20.87	FullHVACpassengers
F101	Maindistributionpower	Mo71.3	Fansdriveelectric	R21.87	
F106	Multiplexpower	Mo72.3	Fansdriveelectric	R21.B	ISM
F107	Multiplexpower	Mo73.3	Fansdriveelectric	R22.87	Ignitionandenginestart
F108	CanIsoJ2284network	N1	Multiplexnetwork	R23.30	transmission
F109	EngineandRJBlights	N2	Multiplexnetwork	R25.87	24VI
F110	Transmission	N3	Multiplexnetwork	R27.87A	Wipersandwasher
F117	Trailer	N4	Multiplexnetwork	R29	EngineECUVolvo
F118	Trailer	N5	Multiplexnetwork	R30.87	12VPowerdistributionFJB
F119	Trailer	N6	Multiplexnetwork	R31.87	12VPowerdistributionFJB
F121	PowerdistributionRJB	N7	Multiplexnetwork	R34.30	Ignitionandenginestart
F122	24VtoMux	N8	Multiplexnetwork	R36.87	Horn
F126	FullHVACpassengers	N9	Multiplexnetwork	R37.30	Horn
F130	Windowsajar	N10	Multiplexnetwork	R38.87	12VOutlets
F131	PowerdistributionRJB	N11	Multiplexnetwork	R47.87	WCL
F132	Multiplexpower	N12	Multiplexnetwork	R51.87.Yellow	Trailerinterface
F133	Multiplexpower	N13	Multiplexnetwork	R52.87.Green	Trailerinterface
F134	Multiplexpower	N14	Multiplexnetwork	R53.30.Red	Trailerinterface
F135	Multiplexpower	N15	Multiplexnetwork	R54.87	Trailerinterface
F136	Multiplexpower	N16	Multiplexnetwork	R55.30.Brown	Trailerinterface
F139	Alternators	N17	Multiplexnetwork	R167.30	Luggageslights
F141	FullHVACpassengers	N18	Multiplexnetwork	R167.86	Luggageslights
F142	FullHVACpassengers	N19	Multiplexnetwork	R_Starter	Ignitionandenginestart
F143	FullHVACpassengers	N20	Multiplexnetwork	RSO1_1	Slideoutfrontleft
F144	FullHVACpassengers	N21	Multiplexnetwork	RSO1_2	Slideoutfrontleft
F147	PowerdistributionRJB	N22	Multiplexnetwork	RSO2_1	Slideoutrearleft
F167	Luggage_Lights	N23	Multiplexnetwork	RSO2_2	Slideoutrearleft
F199	Fansdriveelectric	N24	Multiplexnetwork	RTS	Multiplexnetwork
gnd_1	Cantrack	N27	Multiplexnetwork	Rts	Multiplexnetwork
Gnd_2	Cantrack	N28	Multiplexnetwork	RX	TPMS
GndA	Multiplexnetwork	N29	Multiplexnetwork	Rx	Cantrack
Jmp_Sw24.8	Driverlights	N30	Multiplexnetwork	RxD	Multiplexnetwork
jumper	Lugg.doorslocks	N31	Multiplexnetwork	RxTx	Multiplexnetwork
L207.1	WCL	N32	Multiplexnetwork	Se11.Sig	Cluster
L207.3	WCL	N33	Multiplexnetwork	Se11.Wrn	Cluster
L207.GND	WCL	N56-1	Multiplexnetwork	Se13.B	EngineECUVolvo
L350A.B2	EngineECUVolvo	N56-2	Multiplexnetwork	Se14A.B	EngineECUVolvo
Mo11.3	SmallA/C	N57_1	WCL	Se14B.C	EngineECUVolvo
Mo40.2	Windowsajar	N57_2	WCL	Se15.NO	Keylessentriystem
Mo65.3	Fansdriveelectric	Pot1	Multiplexpower	Se16	Keylessentriystem
Mo67.3	Fansdriveelectric	R6.30	Keylessentriystem	Se17.NC	Keylessentriystem
Mo68.3	Fansdriveelectric	R7.30	Keylessentriystem	Se17.NO	Keylessentriystem

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Se18.B	Brake	Se94	WCL	Sw1C258.6	Frflash
Se19_P.D	Brake	Se94.A	WCL	Sw1C258.7	Frflash
Se19_S.D	Brake	Se100.4	WCL	Sw1C258.8	Frflash
Se20.B	Cluster	SESO2.4	Slideoutfrontleft	Sw1C259.1	Frflash
Se21.2	HVACdefroster	SESO3.2	Slideoutfrontleft	Sw1C259.2	Frflash
Se23	SmallA/C	SESO5.4	Slideoutrearleft	Sw1C259.4	Frflash
Se23.C	FullHVACpassengers	SESO6.2	Slideoutrearleft	Sw2.3	Frflash
Se23A	SmallA/C	Shield_149	gndshield	Sw2.6	Frflash
Se24.2	FullHVACpassengers	Shield_149A	GndShield	Sw3.3	Fog
Se24.3	FullHVACpassengers	So9.B	FullHVACpassengers	Sw3.8	Fog
Se25.2	FullHVACpassengers	So36	SmallA/C	Sw4.3	Frflash
Se30.A	EngineandRJBlights	spare17	Spare	Sw4.8	Frflash
Se32.A	Transmission	spare18	Spare	Sw6.4	Wipersandwasher
Se32.B	Transmission	spare19	Spare	Sw14.3	EngineECUVolvo
Se33.A	Transmission	spare20	Spare	Sw14.8	EngineECUVolvo
Se34.A	Transmission	spare21	Spare	Sw16.3	Brake
Se34.B	Transmission	spare22	Spare	Sw16.8	Brake
Se35.A	Transmission	spare23	Spare	Sw17.6	EngineECUVolvo
Se35.B	Transmission	spare24	Spare	Sw18A.2B	Lugg.doorslocks
Se37.1	ESP	spare25	Spare	Sw18A.4	Keylessentriysystem
Se37.2	ESP	spare28	Spare	Sw18A.6	Keylessentriysystem
Se38.1	ESP	spare29	Spare	Sw20.3	WCL
Se38.2	ESP	spare30	Spare	Sw20.8	WCL
Se39.1	ESP	spare31	Spare	Sw24.1	DriverandEntrancelights
Se39.2	ESP	spare32	Spare	Sw24.3	DriverandEntrancelights
Se40.1	ESP	spare33	Spare	Sw24.4	Driverlights
Se40.2	ESP	spare34	Spare	Sw24.6	Driverlights
Se45.2	Cluster	spare35	Spare	Sw24.8	Driverlights
Se46.B	Trailerparkbrake	spare39	Spare	Sw34.2B	Driver&entracewindow
Se49	FullHVACpassengers	spare40	Spare	Sw35.3	EngineECUVolvo
Se51.2	Cluster	spare41	Spare	Sw35.8	EngineECUVolvo
Se51.Jmp	Seat_Belt_Jumper	spare42	Spare	Sw38.2B	Driver&entracewindow
Se53.C	Cluster	spare43	Spare	Sw40.B	Trailerparkbrake
Se54.C	Cluster	spare44	Spare	Sw41.A1	Mirrors
Se55.C	Cluster	spare64	Spare	Sw41.A3	Mirrors
Se56.A	WCL	spare65	Spare	Sw41.B1	Mirrors
Se62.B	WCL	spare72	Spare	Sw41.B2	Mirrors
Se63.1	ESP	spare73	Spare	Sw41.B4	Mirrors
Se63.2	ESP	STO-LOCselenoid	WCL	Sw42.2	WCL
Se64.1	ESP	Sw1.5	Frflash	Sw42.3	WCL
Se64.2	ESP	Sw1C258.2	Frflash	Sw42.4	WCL
Se67.C	ESP	Sw1C258.3	Frflash	Sw42.5	WCL
Se69.C	ESP	Sw1C258.4	Frflash	Sw42.6	WCL

CIRCUITS LIST

CircuitID	Description	CircuitID	Description		
Sw42.7	WCL	Sw117	Lugg.doorslocks		
Sw44	Luggageslights	Sw122.1	HVACdefroster		
Sw46A	Engine&RJBcmpt.lights	Sw122.3	HVACdefroster		
Sw58.3	Ignitionandenginestart	Sw152.B	Firesuppression		
Sw58.5	Ignitionandenginestart	Sw156.6	Mirrors		
Sw58.7	Ignitionandenginestart	Sw156.8	Mirrors		
Sw59.3	Ignitionandenginestart	Sw157.2B	Sunvisor		
Sw63A.3	Horn	Sw158.2B	Sunvisor		
Sw63A.4	Horn	Sw165.1	DriverandEntrancelights		
Sw64	Tagandlevellow	Sw165.3	DriverandEntrancelights		
Sw82.4	Masterrelay	Sw165.4	Driverlights		
Sw82.5	Masterrelay	Sw165.6	Driverlights		
Sw83.Acc	Ignitionandenginestart	Sw167.6			
Sw83.Ign		SwSo1.4	Slideoutfrontleft		
Sw83.St	Ignitionandenginestart	SwSo1.5	Slideoutfrontleft		
Sw85.A1	Mirrors	SwSo2.4	Slideoutrearleft		
Sw85.A3	Mirrors	SwSo2.5	Slideoutrearleft		
Sw85.B1	Mirrors	TWU.3	WCL		
Sw85.B2	Mirrors	TX	TPMS		
Sw85.B4	Mirrors	Tx	Cantrack		
Sw99.3	Fog	TxD	Multiplexnetwork		
Sw102.3	Fog	ve+	Cantrack		
Sw102.8	Fog				
Sw103A.3	Backupwarnings				
Sw103A.6	Backupwarnings				
Sw104.1	Keylessentriystem				
Sw104.3	Keylessentriystem				
Sw104.5B	Keylessentriystem				
Sw107.2	Tagandlevellow				
Sw107.4	Tagandlevellow				
Sw107.6	Tagandlevellow				
Sw107.8	Tagandlevellow				
Sw107.10	Tagandlevellow				
Sw108.1	Tagandlevellow				
Sw108.3	Tagandlevellow				
Sw109	Lugg.doorslocks				
Sw110	Lugg.doorslocks				
Sw111	Lugg.doorslocks				
Sw112	Lugg.doorslocks				
Sw113	Lugg.doorslocks				
Sw114	Lugg.doorslocks				
Sw115	Lugg.doorslocks				
Sw116	Lugg.doorslocks				