

Relays list

No	Location	Part no	Function	Page
R1	RJB	562364	Master Relay	3.1_Main_Disti 2 A
R3	RJB	563348	12v Ign & Acc Relay	3.1_Main_Disti 2 B
R6	RJB	563269	Unlock	29.1_Entrance_door_Keyless 4 C
R7	RJB	563269	Lock	29.1_Entrance_door_Keyless 4 C
R12	RJB	563551	Evaporator Relay	18.2_Full_AC 4 C
R21	FJB_VECF	563269	Emergency cutout relay	4.1_Dist_12V_FJB 1 B
R22	FJB_VECF	563269	Ecu Ign	4.1_Dist_12V_FJB 1 C
R23	FJB_VECF	563269	Shutdown	4.1_Dist_12V_FJB 1 D
R24	FJB_VECF	563269	12V_Ign	4.1_Dist_12V_FJB 1 D
R25	FJB_VECF	563269	24V Ign	4.2_Dist_24V_FJB 1 C
R26	Evap_Cmpt	563332	Pre-Heat Relay	18.2_Full_AC 3 B
R27	RH Console	563332	Lower wiper motor	34.1_wiper_washer 3 C
R29	RJB	563348	Preheater_Volvo	14.1_Engine_Ecu 2 E
R30	RJB	563269	12v ENG RUN	4.1_Dist_12V_FJB 4 A
R31	RJB	563269	12v IGN	4.1_Dist_12V_FJB 4 B
R34	RJB	564218	12v Rr Engine Ecu	3.2_Ign_Start 3 C
R36	RJB	563269	Fire_Extinguisher	9.1_Horn 1 B
R37	RJB	563269	Electric horn	9.1_Horn 2 C
R38	RJB	563269	Cigar lighter relay	30.2_Outlet_12v 1 B
R52	RJB	563270	Clearance lights & side markers	26.4_Trailer 2 B
R53	RJB	563270	Flashers left side	26.4_Trailer 2 B
R54	RJB	563270	Brake lights	26.4_Trailer 2 C
R55	RJB	563270	Flashers right side	26.4_Trailer 2 C
R56	RJB	563270	Tail & licence lights	26.4_Trailer 2 D
R167	FJB	563332	Luggage compt Lights	25.1_Compt_Lighting 0 C
R_Starter	RJB	564095	Starter Relay Ctr	3.2_Ign_Start 3 D