

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
5 N	INTERIOR LTS-EMERGENCY EXIT	12 I F	FR JCT BOX 12V IGNITION	2 4	BAT CPT 24V BATTERY	2 4 W C	BATT.CPT TO HYD. PUMP (WCL)
5 NC	SPEED SIGNAL LOWER 5MPH	12 P	LH CONSOLE POWER OUTLET	2 4	FR JCT BOX 24V DISC SW	2 4 W L	24V BATTERY-HYD. PUMP (WCL)
5 NO	SPEED SIGNAL HIGHER 5MPH	12 R	BAT CPT 12V DISC RLY TO RJB	2 4 A	BOOSTER BLOCK 24V DISC SW	2 5	12VAC GEN RLY ON SIGNAL
6	INTERIOR LTS-AISLE	12 R	MEMORY BATTERY RADIO	2 4 A	FR JCT BOX 24V DISC SW	2 5	12VAC GEN RLY ON SIGNAL
7 B	ENTRANCE DOOR (SEDAN)	12 S	SOUND SYSTEM 12V RADIO	2 4 A	RR JCT BOX 24V DISC SW	2 5 A	NOT GENERATOR-WARNING LT
7 D	ENTRANCE DOOR (SEDAN)	12 S 1	SOUND SYSTEM 12V RADIO	2 4 B	24V STARTER RLY FEEDING	2 5 B	EXTERIOR LTS-DAYTIME RUN LTS
7 DA	ENTRANCE DOOR (SEDAN)	12 S 2	SOUND SYSTEM 12V RADIO	2 4 B	FR JCT BOX 24V DISC SW	2 6	CIGAR LIGHTER
9	INTERIOR LTS-ENGINE CPT	12 S B	SOUND SYSTEM 12V FEEDING	2 4 B	RR JCT BOX 24V DISC SW	2 6	DRIVER'S WINDOW LIFTER
9 A	INTERIOR LTS-ENGINE CPT	12 S S	SOUND SYSTEM 12V FEEDING	2 4 B E	RJB CPT-BAT EQ MONITOR HOT WIRE	2 6 B	DRIVER'S WINDOW LIFTER
9 B	INTERIOR LTS-ENGINE CPT	12 VA	BATTERY TO EQUALIZER 12V	2 4 C	FR JCT BOX 24V DISC SW	2 6 C	DRIVER'S WINDOW LIFTER
9 E	INTERIOR LTS-FR SERVICE CPT	12 VD	12V HOT WIRE DISTRIBUTION	2 4 C	RR JCT BOX 24V DISC SW	2 7	LAVATORY-EMERGENCY SONALERT
9 F	INTERIOR LTS-FR SERVICE CPT	12 VF	BAT CPT 12V FJB & IC	2 4 D	BAT CPT 24V HOT WIRE	2 8 A	A/C & HEAT SYSTEM-HI PRESSURE
10	INTERIOR LTS-LUGGAGE CPT	12 VI	12V IGNITION DISTRIBUTION	2 4 D	FR JCT BOX 24V HOT WIRE	2 9	A/C & HEAT SYSTEM-DRIVER'S HTR
10 A	INTERIOR LTS-LUGGAGE CPT	12 VR	BAT CPT 12V DISC RLY TO RJB	2 4 D	RR JCT BOX 24V HOT WIRE	2 9 A	A/C & HEAT SYSTEM-DRIVER'S HTR
10 B	INTERIOR LTS-LUGGAGE CPT	12 W	12V BATTERY DDEC III	2 4 D A	A/C JCT BOX 24V HOT WIRE	2 9 B	A/C & HEAT SYSTEM-DRIVER'S HTR
10 D	INTERIOR LTS-LUGGAGE CPT	12 W	ENTRANCE DOOR (SEDAN)	2 4 E	BAT CPT 24V DISC SW	3 0 A	GALLEY
10 F	INTERIOR LTS-LUGGAGE CPT	12 W A	ENTRANCE DOOR (SEDAN)	2 4 E	FR JCT BOX 24V DISC SW	3 1 A	A/C & HEAT SYSTEM-UNLOADER
10 H	INTERIOR LTS-LUGGAGE CPT	12 X	FR JCT BOX 12V DISC SW	2 4 E	RR JCT BOX 24V DISC SW	3 1 B	A/C & HEAT SYSTEM-UNLOADER
10 K	INTERIOR LTS-LUGGAGE CPT	12 X 2	FR JCT BOX 12V DISC SW	2 4 F	FR JCT BOX 24V DISC SW	3 1 B	WIPER & WASHER SYSTEM
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR	12 Y	FR JCT BOX 12V DISC SW	2 4 F	RR JCT BOX 24V DISC SW	3 1 C	WIPER & WASHER SYSTEM
11	FR DESTINATION SIGN	13 A	ALARM & SIGNAL-LO AIR PRIM.	2 4 G	FR JCT BOX 24V DISC SW	3 1 D	WIPER & WASHER SYSTEM
11 A	FR DESTINATION SIGN	13 B	ALARM & SIGNAL-LO AIR SEC.	2 4 G	RR JCT BOX 24V DISC SW	3 1 E	WIPER & WASHER SYSTEM
11 B	FR DESTINATION SIGN	14	LAVATORY-FLUSHING PUMP	2 4 H	FR JCT BOX 24V DISC SW	3 1 J	WIPER & WASHER SYSTEM
11 C	FR DESTINATION SIGN	14 A	LAVATORY-FLUSHING PUMP	2 4 H	RR JCT BOX 24V DISC SW	3 1 X	WIPER & WASHER SYSTEM
11 D	FR DESTINATION SIGN	15	EXTERIOR LTS-MULTI FUNC LEVEL	2 4 I	FR JCT BOX 24V IGNITION	3 2	EXTERIOR LTS-BACK-UP
11 E	FR DESTINATION SIGN	15 A	WIPER & WASHER UPPER WINDSHIELD	2 4 I	RR JCT BOX 24V IGNITION	3 2 B	EXTERIOR LTS-BACK-UP
11 K	FR DESTINATION SIGN	16	SPEED - SIGNAL +	2 4 I A	FR JCT BOX 24V IGNITION	3 2 C	BACK-UP PWR & SIGNAL
12	12V BAT ELECTRONIC JCT BLOCK	16 A	SPEED - SIGNAL +	2 4 I A	RR JCT BOX 24V IGNITION	3 2 D	BACK-UP ALARM
12	BAT CPT 12V BATTERY	16 T	SPEED - SIGNAL +	2 4 I B	FR JCT BOX 24V IGNITION	3 2 F	BACK-UP MONITOR
12 A	FR JCT BOX 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT	2 4 I B	RR JCT BOX 24V IGNITION	3 5	ENTRANCE DOOR (SEDAN)
12 A	RR JCT BOX 12V DISC SW	17 A	EXTERIOR LTS-FLASHER UNIT	2 4 I C	FR JCT BOX 24V IGNITION	3 5 B	ENTRANCE DOOR (SEDAN)
12 B	12V BAT ELECTRICAL JCT BLOCK	19	DIFFERENTIAL OIL TEMP	2 4 P	FR JCT BOX 24V DISC SW	3 5 B B	ENTRANCE DOOR (SEDAN)
12 B	RR JCT BOX 12V DISC SW	20	SPEED - SIGNAL -	2 4 S	24V DISC SW RLY SIGNAL	3 5 D	ENTRANCE DOOR (SEDAN)
12 B	FR JCT BOX 12V DISC SW	20 T	SPEED - SIGNAL -	2 4 S 1	SOUND SYSTEM 24V AMPLIFIER	3 6	JACOB BRAKE SYSREM
12 B E	BAT. EQUALIZER MONITOR	20 W	SPEED - SIGNAL -	2 4 S 2	SOUND SYSTEM 24V AMPLIFIER	3 6 A	JACOB BRAKE SYSREM
12 C	FR JCT BOX 12V DISC SW	21	EXTERIOR LTS-DIRECTIONNAL LH	2 4 S 3	SOUND SYSTEM 24V VIDEO	3 8	INTERIOR LTS-24V FLUORESCENT
12 C	RR JCT BOX 12V DISC SW	21 A	EXTERIOR LTS-DIRECTIONNAL LH	2 4 S 4	SOUND SYSTEM 24V VIDEO	3 8 A	INTERIOR LTS-24V FLUORESCENT
12 D	BAT CPT 12V BATTERY	21 B	EXTERIOR LTS-HAZARD	2 4 S B	SOUND SYSTEM 24V FEEDING	3 8 C	INTERIOR LTS-24V FLUORESCENT
12 E	FR JCT BOX 12V DISC SW	21 C	EXTERIOR LTS-CORNERING LH	2 4 S S	SOUND SYSTEM 24V FEEDING	3 8 D	INTERIOR LTS-24V FLUORESCENT
12 E	RR JCT BOX 12V DISC SW	21 H	EXTERIOR LTS-DIRECTIONNAL LH	2 4 T	RR JCT BOX 24V DISC SW	3 9	INTERIOR LTS-24V LH CONSOLE SW
12 F	BAT CPT 12V FJB & IC	21 K	EXTERIOR LTS-CORNERING	2 4 V 2	RR JCT BOX 24V DISC SW	3 9 A	INTERIOR LTS-DRIVER'S LTS
12 F	FR JCT BOX 12V DISC SW	21 N	EXTERIOR LTS-CORNERING LH	2 4 V 3	RR JCT BOX 24V DISC SW	4 1	A/C & HEAT SYSTEM-COND FAN MOT
12 F	RR JCT BOX 12V DISC SW	21 P	EXTERIOR LTS-CORNERING LH	2 4 V 4	RR JCT BOX 24V DISC SW	4 1 A	A/C & HEAT SYSTEM-COND FAN MOT
12 G	FR JCT BOX 12V DISC SW	23	EXTERIOR LTS-DIRECTIONNAL RH	2 4 V 5	RR JCT BOX 24V DISC SW	4 1 B	A/C & HEAT SYSTEM-COND FAN MOT
12 J	FR JCT BOX 12V DISC SW	23	EXTERIOR LTS-DIRECTIONNAL RH	2 4 V D	24V HOT WIRE DISTRIBUTION	4 2	A/C & HEAT SYSTEM-COND FAN MOT
12 I	12V IGNITION DISTRIBUTION	23 A	EXTERIOR LTS-DIRECTIONNAL RH	2 4 V F	BAT CPT 24V SW TO FJB & IC	4 2 A	A/C & HEAT SYSTEM-COND FAN MOT
12 I	RR JCT BOX 12V IGNITION	23 B	EXTERIOR LTS-DIRECTIONNAL RH	2 4 VA	BATTERY TO EQUALIZER 24V	4 4	EXTERIOR LTS-FOG
12 I A	12V IGNITION DISTRIBUTION	23 C	EXTERIOR LTS-CORNERING RH	2 4 V I	RR JCT BOX 24V IGNITION	4 4 A	EXTERIOR LTS-FOG
12 I A	FR JCT BOX 12V IGNITION	23 N	EXTERIOR LTS-CORNERING RH	2 4 V R	BAT CPT 24V DISC SW TO RJB	4 4 B	EXTERIOR LTS-FOG
12 I B	FR JCT BOX 12V IGNITION	23 P	EXTERIOR LTS-CORNERING RH	2 4 W	RR JCT BOX 24V DISC SW (WCL)	4 4 C	EXTERIOR LTS-FOG & HAZARD