

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
45 B	A/C & HEAT SYSTEM-HEAT SIGN	63 F	EXTERIOR LTS-MARKER BLINKER	86	ENGINE CTR-STARTER SOL SIGN	115 W	WORLD TRANSM-DO NOT SHIFT SIGN
45 D	A/C & HEAT SYSTEM-WATER VALVE	63 H	EXTERIOR LTS-TAIL	86 A	ENGINE CTR-STARTER SOL SIGN	116	WORLD TRANSM-LO SIGNAL SOL. HI
45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN	67	A/C & HEAT SYSTEM	88	ENGINE CTR-RR START SIGNAL	116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
45 G	A/C & HEAT SYSTEM-DRIVER'S HTR	67 A	A/C & HEAT SYSTEM	89	ENGINE CTR-RR START SIGNAL	117	WORLD TRANSM-SPARE INPUT (-)
45 H	A/C & HEAT SYSTEM-DRIVER'S HTR	67 B	A/C & HEAT SYSTEM	90 B	A/C & HEAT SYSTEM-COND FAN MOT	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR	67 C	A/C & HEAT SYSTEM & HEAT WINDS.	90 B	ENGINE CTR-MAST KEY SW FEED	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
46	EXTERIOR LTS-MARKER	67 K	A/C & HEAT SYSTEM-COND FAN CTR	90 C	A/C & HEAT SYSTEM-COND FAN MOT	118	WORLD TRANSM-SPARE INPUT (+)
46 A	EXTERIOR LTS-MARKER	67 L	A/C & HEAT SYSTEM-COND FAN CTR	90 F	CHARG SYST-VOLTAGE REGUL. "B"	119	WORLD TRANSM-ENG BRK INPUT (+)
46 B	EXTERIOR LTS-MARKER	67 V	A/C & HEAT SYSTEM-WATER VALVE	90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	120	WORLD TRANSM-SOL. C1
46 B	EXTERIOR LTS-MARKER	70	INTERIOR LTS-HAT RACK & RR RUN.	90 J	A/C & HEAT SYSTEM-COND FAN MOT	121	WORLD TRANSM-SOL. GRD 2
46 C	EXTERIOR LTS-MARKER	72	SUN VISOR-FEEDING	91	PARKING BRAKE SW SIGNAL	122	A/C & HEAT SYSTEM-DRIVER'S HTR
47	A/C & HEAT SYSTEM-DRIVER'S HTR	72 A	SUN VISOR-RH	91 A	DDEC-FAST IDLE SIGNAL	122	A/C & HEAT SYSTEM-FRESH AIR
48	ENTRANCE DOOR (SEDAN)	72 B	SUN VISOR-RH	91 W	PARK, BRAKE SW SIGN (WCL)	122	WORLD TRANSM-SOL. GRD 4
48 A	ENTRANCE DOOR (SEDAN)	72 C	SUN VISOR-LH	92	BATTERY EQUALIZER-CHECK BALANCE	122 A	A/C & HEAT SYSTEM-FRESH AIR
49	ENTRANCE DOOR (SEDAN)	72 D	SUN VISOR-LH	93	BATTERY EQUALIZER-CHECK LO/HI	123	WORLD TRANSM-NEUTRAL START
49 A	ENTRANCE DOOR (SEDAN)	73	LAVATORY-FEEDING	95 A	ENGINE BRAKE & RETARDER SYSTEM	123 A	ALARM & SIGNAL-FIRE DETECTOR
50	AIR DRYER	74	INTERIOR LTS-READING RH	97	TACHOMETER (-)	123 B	ALARM & SIGNAL-FIRE DETECTOR
52	ALARM & SIGNAL-ELEC. HORN	74 A	INTERIOR LTS-READING RH	100	INTERIOR LTS-GENERAL	124	WORLD TRANSM-THROTTLE (HI)
52 A	ALARM & SIGNAL-ELEC. HORN	74 D	INTERIOR LTS-READING SIGNAL	100 A	INTERIOR LTS-GENERAL	125	WORLD TRANSM-RET. INDICATOR
53	ALARM & SIGNAL-ELEC. HORN	75	INTERIOR LTS-READING LH	100 B	INTERIOR LTS-GENERAL	125	GALLEY LAMP
53 A	WIPER & WASHER SYSTEM	75 A	INTERIOR LTS-READING LH	101	24V STARTER SOL FEEDING	125 T	GALLEY LAMP
53 B	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE	101	WORLD TRANSM-LO SIGN SOL. LO	125 W	WORLD TRANSM-RET. INDICATOR
53 C	WIPER & WASHER SYSTEM	76 B	LOW FUEL LT & ETHER COLD START	102	24V STARTER TO GENERATOR	126	KNEELING SYSTEM
53 E	WIPER & WASHER SYSTEM	76 C	LOW FUEL LT	102	WORLD TRANSM-SOL. GRD 1	126 A	KNEELING SYSTEM
53 J	WIPER & WASHER SYSTEM	76 P	FUEL PRIME PUMP	102	WORLD TRANSM-SOL. C3	126 B	KNEELING SYSTEM
55	EXTERIOR LTS-HI BEAM	76 M	FUEL PRIME PUMP	103	LOW BUOY	126 C	KNEELING SYSTEM
57	EXTERIOR LTS-HI BEAM	77	A/C & HEAT SYSTEM-HI PRESSURE	104	WORLD TRANSM-SOL. FORWARD	126 D	KNEELING SYSTEM
57 A	A/C & HEAT SYSTEM-WATER PUMP	77 A	A/C & HEAT SYSTEM-DRIVER'S HTR	105	WORLD TRANSM-RETARDER & SUMP	126 E	KNEELING SYSTEM
57 A	EXTERIOR LTS-HI BEAM	77 B	A/C & HEAT SYSTEM-COMPRESSOR	105 W	WORLD TRANSM-RETARDER & SUMP	126 F	KNEELING SYSTEM
57 B	A/C & HEAT SYSTEM-WATER PUMP	77 C	A/C & HEAT SYSTEM-COMPRESSOR	106	WORLD TRANSM-OIL LEVEL HI	126 G	KNEELING SYSTEM
57 C	PRE-HEAT WATER HEATER	77 H	A/C & HEAT SYSTEM-COMPRESSOR	107	CHARG SYST-VOLTAGE REGUL. "F"	126 H	KNEELING SYSTEM
57 CA	A/C & HEAT SYSTEM-HEAT SIGN	81	EXTERIOR LTS-STOP SW	107	WORLD TRANSM-LOCKUP SOL. HI	126 K	KNEELING SYSTEM
57 CC	A/C & HEAT SYSTEM-HEAT SIGN	82	EXTERIOR LTS-STOP SIGNAL	108	WORLD TRANSM-REM. PWR WAKE UP	126 P	KNEELING SYSTEM
58	EXTERIOR LTS-LO BEAM	82 A	EXTERIOR LTS-STOP SIGNAL	109	WORLD TRANSM-RET. SOL. LO	126 R	KNEELING SYSTEM
58 A	EXTERIOR LTS-LO BEAM	82 B	EXTERIOR LTS-STOP LTS	110	ALARM & SIGNAL-WATER TEMP	126 W	5 MPH N.C. SIGNAL (WCL)
58 B	EXTERIOR LTS-LO BEAM	82 K	EXTERIOR LTS-STOP PARK BRK	110	WORLD TRANSM-LOCKUP SOL. LO	126 S	KNEELING SYSTEM
58 E	EXTERIOR LTS-LO BEAM	82 L	EXTERIOR LTS-LH STOP	111	WORLD TRANSM-SOL. C6	126 T	KNEELING SYSTEM
59 A	JACOB BRAKE SYSTEM	82 R	EXTERIOR LTS-LH STOP	112	WORLD TRANSM-SPARE OUTPUT (+)	127	WORLD TRANSM-LUBE PRESS SW.
61	EXTERIOR LTS-24V FEED SW	83	ENGINE CTR-KEY SW ACCES SIGN	113	ALARM & SIGNAL-OIL PRESS	127	PRE-HEAT WATER HEATER
61 A	EXTERIOR LTS-HEAD SIGNAL	84	ENGINE CTR-KEY SW ACCES SIGN	113	WORLD TRANSM-REVERSE WARNING	127 A	PRE-HEAT WATER HEATER
62	LAVATORY-OCCUPIED LT	85	ENGINE CTR-KEY SWIGNITION SIGN	114	INTERIOR LTS-DASH LT REGUL.	127 B	PRE-HEAT WATER HEATER
62 A	LAVATORY-FLUOR LT	85	24V IGNITION SIGNAL	114	WORLD TRANSM-SPARE OUTPUT (-)	127	WORLD TRANSM-RETARDER FEED SOL.
62 B	LAVATORY-FLUOR LT	85 A	24V IGN DASH INSTRUMENTATION	114 A	INTERIOR LTS-DASH LT	127 S	PRE-HEAT WATER HEATER
62 E	LAVATORY-OCCUP & FLUOR LT	85 B	ENGINE CTR-24V IGNITION	114 B	INTERIOR LTS-DASH LT REGUL.	127 W	PRE-HEAT WATER HEATER
63	EXTERIOR LTS-CLEARANCE	85 C	PARKING BRAKE SWITCH	114 D	INTERIOR LTS-DASH LT REGUL.	128	PRE-HEAT WATER HEATER
63 A	EXTERIOR LTS-CLEARANCE	85 F	ENGINE CTR-ENGINE CTR SW IGN	114 E	INTERIOR LTS-DASH LT REGUL.	128 A	PRE-HEAT WATER HEATER
63 B	EXTERIOR LTS-CLEARANCE	85 F	LO AIR SONALERT	115	ALARM & SIGNAL-TAG PRESS	128 B	PRE-HEAT WATER HEATER
63 C	EXTERIOR LTS-MARKER SIGNAL	85 W	24V IGN ANTI SKID	115	DDEC III-COOLANT LEVEL	128 W	PRE-HEAT WATER HEATER
63 D	EXTERIOR LTS-MARKER & TAIL	85 X	24V IGN ANTI SKID	115	WORLD TRANSM-DO NOT SHIFT SIGN	128	WORLD TRANSM-SOL. C2
63 E	EXTERIOR LTS-CLEARANCE	85 Y	ANTI SKID-WARNING LT	115 C	DDEC III-COOLANT LEVEL	129	PRE-HEAT WATER HEATER