

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
C165	RR AXLE:AABS LH VALVE	WABCO	3	641098	C248	FR JCT BOX-WIPPER PULSE GEN	AMP FF	6	561108
C166	RR AXLE:AABS RH VALVE	DEUTSCH	3	641098	C251	LH SW PANEL-FAST IDLE	SWF	8	561107
C167	RR AXLE:AABS RH SENSOR	DEUTSCH	2	562466	642485	C252	LH SW PANEL-SWITCH LT	SWF	2	561837
C169	RR JCT BOX-SPD ATC	AMP HDP	4	561610	561611	C253	LH SW PANEL-ETHER	SWF	8	561107
C170	RR JCT BOX-FLASHER UNIT	AMP HDP	15	562012	C254	INST. PANEL-RH-ENTR,DOOR SW.	TORRILX	5	562110
C171	LH CONSOLE	TC	2	561840	C255	LH SW PANEL-JACOB	AMP FF	8	562383
C172	ENGINE COMPT-WATER TANK HEAT.	AMP CPC	37	561645	561646	C256	INSTUMENT PANEL-CENT-TACHO	AMP FF	8	561188
C173	LAV POTABL-EWATER TANK HEAT.	PED WP	2	561566	561690	C257	LH SW PANEL-MULTI FLUNC. SW	AMP FF	6	561696
C174	UNDER DASH RH-HTR MODULE	AMP MNL	2	560900	560998	C258	LH SW PANEL-MULTI FLUNC. SW	PED WP	6	561670	561667
C175	UNDER DASH RH-HTR MODULE	AMP MNL	9	561670	561668	C259	FR SERVICE CPT-LUG DOOR LCK	AMP MNL	9	561551	561668
C176	UNDER DASH RH-WIPER PULSE	AMP MNL	6	561670	561669	C260	UNDER DASH RH-DOOR MODULE	AMP MNL	4	561657	561550
C177	UNDER DASH RH-WIPER MOTOR	AMP FF	6	561188	C262	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561687	561550
C178	UNDER DASH RH-H FAN	AMP FF	5	561188	C263	UNDER DASH RH-DOOR MODULE	AMP MNL	3	561687	561550
C179	UNDER DASH RH-H FAN	TC	2	561030	560997	C264	UNDER DASH RH-DOOR MODULE	AMP MNL	15	562011	562012
C181	RR JCT BOX-DIGIDE CONNECTOR	AMP MNL	2	561030	561987	C265	UNDER DASH RH-DOOR MODULE	AMP CPC	24	561642	561552
C182	RR JCT BOX-COMPT.-WT VIM	AMP CPC	16	561639	561986	C267	UNDER DASH RH	AMP MNL	6	561552	561515
C183	FR SERVICE CPT-KNEELING PANL.	PED WP	4	561639	561611	C268	UNDER DASH RH-MIRROR	AMP MNL	6	562070	562069
C184	FR SERVICE CPT-KNEELING SW.	ITT SS	3	561610	561680	C270	RR MIRROR POST	MOLEX	6	562070	562070
C185	RR JCT BOX-COMPT.-WT VIM	PED	30	561111	561690	C271	RR MIRROR	SPARTAN	6	562069	990158
C186M	RR JCT BOX-CPT.-SPD SIGN. M/TR	PED WP	2	561566	561690	C273	RR MIRROR	SPARTAN	6	990158
C188W	RR JCT BOX-CPT.-SPD SIGN. M/TR	PED WP	2	561566	561690	C275	UNDER DASH RH-DOOR MODULE	AMP MNL	6	561670	561669
C187	RR JCT BOX-RPM RESISTOR CON.	AMP MNL	6	561552	561515	C276	UNDER DASH RH-LOCK SOL VALVE	AMP MNL	2	561248	561248
C189	ENGINE CPT RR DOOR BUJ LT	PED WP	2	561566	561690	C279	UNDER DASH CYLINDER READ SW.	AMP MNL	2	561248	561248
C190	ENGINE CPT RR DOOR TAIL LT	PED WP	2	561566	561690	C280	LH CONSOLE-UNLOAD TAG SW.	SWF	2	561247
C191	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C286	RR SW PANEL-A/C & HEAT	SWF	2	561107	561107
C192	ENGINE CPT RR DOOR RH DIR. LT	PED WP	2	561566	561247	C287	ENGINE COMPT-LTS SW	SWF	2	561566	561690
C193	FR SECT. LH HAT RACK-FLUOR.	AMP MNL	2	561566	561690	C288	RH SW PANEL-FRESH AIR	PED WP	2	561566	561690
C194	ENGINE CPT RR DOOR LH DIR. LT	PED WP	2	561566	561690	C289	RH SW PANEL-SWITCH LT	SWF	2	561837
C195	ENGINE CPT RR DOOR LH STOP LT	PED WP	2	561566	561690	C297	INSTUMENT PANEL RH-LTS	SWF	2	560900	560938
C196	ENGINE CPT RR DOOR CYCLOP LT	PED WP	2	561566	561690	C298	LH CONSOLE SW-GALLEY	AMP MNL	2	560900	560938
C199	ENGINE CPT RR DOOR LUCENCE LT	PED WP	2	561566	561690	C301	INSTUMENT PANEL CENT-TACHO	AMP MNL	4	560451	560452
C200	RH HAT RACK-FLUORESCENT	DOM AUTO	4	561551	561661	C308	LH CONSOLE SW-RHEOSTAT	AMP MNL	4	560451	560452
C201	RH HAT RACK-FLUORESCENT	AMP MNL	4	561551	561661	C309	DDEC ENGINE-ECM POWER CON.	TC	2	561030	560997
C202	RH HAT RACK-BALLAST	AMP MNL	4	560951	560952	C310	LH CONSOLE SW-LLUG. DOOR LCK	PED MP	5	562345	561107
C203	RH HAT RACK-BALLAST	AMP MNL	6	561552	561515	C311	LH CONSOLE SW-HOS & PAS CHIME	SWF	8	561107	561107
C204	RH HAT RACK-GENERAL LT	AMP MNL	3	561567	561662	C312	LH CONSOLE SW-READING LTS	SWF	8	561107
C205	FR SECT. -RH HAT RACK SPEAKER	AMP MNL	3	561661	560988	C313	LH CONSOLE SW-GEN & FLUOR LTS	SWF	8	561107
C206	RH HAT RACK-READING LT	AMP MNL	2	560900	560988	C314	LH CONSOLE SW-DR DEST. SIGN	SWF	8	561107
C207	LH HAT RACK-READING LT	AMP MNL	2	560900	560988	C315	LH CONSOLE SW-4H STORE	SWF	8	561107
C208	LH HAT RACK-BALLAST	AMP MNL	4	560951	560952	C316	LH CONSOLE SW-4H STORE	SWF	8	561107
C210	FR SECT. -LH HAT RACK SPEAKER	AMP MNL	4	561661	561662	C317	LH CONSOLE SPARE SWITCH	SWF	8	561107
C211	FR ROOF-STORE LH	AMP MNL	2	560988	560988	C318	LH CONSOLE SW-RH STORE	SWF	8	561107
C212	FR ROOF-STORE RH	AMP MNL	2	560988	560988	C320	LH CONSOLE SW-DRV WINDOW LIFT	SWF	8	561107
C213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560988	C322	LH CONSOLE SW-DRIVERS LTS.	SWF	8	561107
C220	RR JCT BOX-FUEL PRIME PUMP	AMP MNL	1	561073	561247	C323	LH CONSOLE CRUISE CTR SW PANL. AMP	PED PO	2	561636	561636
C225	FR SECT. RH HAT RACK-FLUOR.	AMP MNL	2	561248	562485	C325	LH CONSOLE CRUISE CTR SW PANL. AMP	CPC	2	561636	561636
C230	ENG.CPT. -FUEL PRIME PUMP FEED	DEUTSCH	2	562486	561566	C326	LH CONSOLE SW-KNEELING	SWF	8	561107
C231	ENG.CPT. -FUEL PRIME PUMP SW.	DEUTSCH	2	561566	561690	C325	LH CONSOLE SW-SPARE	SWF	8	561107
C232	ENG.CPT. -FUEL PRIME PUMP	PED WP	2	561566	561690	C327	ENGINE CONTROL	DEUTSCH	6	562383	562381
C233	INSTUMENT PANEL CENTER	PED WP	2	561566	561690	C328	GALLEY-LAMP	AMP MNL	2	561248	561247
C234	INSTUMENT PANEL CENTER	V.D.O.	4	562043	C329	ENGINE TACHO SIGNAL	PED WP	3	561791	561789
C235	INSTUMENT PANEL CENTER	V.D.O.	4	562043	C330	GALLEY MICROVAIVE SW	SWF	2	561837	561837
C236	INSTUMENT PANEL CENTER	V.D.O.	4	562044	C331	GALLEY MICROVAIVE SW	SWF	2	561837	561837
C237	RR JCT BOX-DIGIDE CONNECTOR	AMP MNL	3	560851	560852	C332	GALLEY RH CONTAINER SW LT	SWF	2	561107	561107
C238	RR JCT BOX-DIGIDE CONNECTOR	AMP MNL	3	561111	560852	C333	GALLEY RH CONTAINER SW RT	SWF	2	561107	561107
C239	FR SERVICE CPT-HI BUDY VALVE	PED WP	2	561670	561669	C334	GALLEY LH CONTAINER SW	SWF	2	561107	561107
C240	FR SERVICE CPT-HI BUDY VALVE	PED WP	2	561566	561690	C335	GALLEY LH CONTAINER SW LT	SWF	2	561107	561107
C241	FR SERVICE CPT-FOG RESISTOR	AMP CPC	3	561847	561862	C337	INST. PANEL LH-UP WIPER SW	SWF	8	561107
C242	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080	C338	INST. PANEL LH-UP WIPER SW	SWF	8	561107
C243	FR SERVICE CPT-HEADLAMPS	ITT SS	3	561111	561080	C339	INST. PANEL LH-UP DEFROST SW	SWF	8	561107
C244	FR SERVICE CPT-LH FOG LAMP	ITT SS	2	561813	561812	C340	FR JCT. BOX FIBRE PIEZO ALARM	SWF	2	560900	560898
C245	FR SERVICE CPT RH FOG LAMP	ITT SS	2	561813	561812	C341	INST. PANEL LH-HEAT MIRROR SW	AMP MNL	2	560900	560898
C246	FR SERVICE CPT-MARK & DIR LT	ITT SS	3	561111	561080	C342	ENGINE RR START SW	SWF	2	562586	562585
		ITT SS	2	561111	561080	C343	INST. PANEL LH-HEADLAMP SW	SWF	8	561107

PREVOST

WIRING

DIAGRAM

D060882

PAGE: **G2**

REVISION: **00**

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET	NO	LOCATION	TYPE	CAVITY	#PIN	#SOCKET
C344	INSTR PANEL LH HAZARD LT SW	SWF	8	561107	561107	C426	ENGINE COMPT. CLUTCH CTR FAN	PED WP	3	561781	561782
C345	INSTR PANEL LH FOG LT SW	SWF	8	561107	561107	C428	ALARM JCT BOX COMPT.	AMP MNL	6	561592	561515
C346	INSTR PANEL LH SWITCH LTS	SWF	2	561837	561837	C430	LH CONSOLE-TIMER	AMP MNL	8	561188	561263
C347	INSTR PANEL LH-DASH LT SW	SWF	2	560990	560998	C431	LH CONSOLE-PRE HEAT.	AMP FC	1	561140	562363
C348	INSTR PANEL CENT-RACOR MODULE	MOLEX	6	562070	562066	C432	ENGINE CPT.-PHOX. SW. DOOR ALAR	TAB AMP	8	561540	561539
C350	RH CONSOLE-THERMOMETER	AMP MNL	6	561667	561550	C433	FR SERVICE CPT. KNEEL. PRESS. SW	DEUTSCH	4	562479	562477
C351	LH HAT RACK-FLOOR 110V	MOLEX	4	561476	561476	C434	FRONT JCT. BOX-DIODES	PED WP	4	561566	561590
C352	RH CONSOLE-DRV TEMP SENSOR	BURINDY	4	561104	561104	C435	FR SERVICE CPT.(RH) KNEEL. PIEZO	AMP MNL	15	561987	561986
C353	INSTR PANEL RH-DRV FAN RH-OST	AMP MNL	6	561532	561515	C436	RH HAT RACK-WCL CENTER ROOF ACC	AMP MNL	2	560900	560398
C354	INSTR PANEL RH-DRV TEMP CTR	AMP MNL	6	561552	561515	C437	RH HAT RACK-WCL CTR SECT.	AMP CPC	16	561639	561640
C355	INSTR PANEL RH-FR TEMP CTR	AMP MNL	6	561667	561550	C450	SOUND SYS. JCT. PANEL	AMP CPC	24	561642	561643
C357	INSTR PANEL RH-WATER TEMP GA	AMP MNL	3	561667	561550	C451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	4	562507	562503
C358	INSTR PANEL RH-FUEL LEVEL GA	AMP MNL	3	561667	561550	C452	WIRELESS MICRO-LH HAT RACK	MOLEX	2	562549	562548
C361	FR ROOF-WIPER MOTOR	AMP FC	6	561667	561550	C453	SOUND SYS. JCT. PANEL-FILT VCP	MOLEX	2	562550	562549
C362	FR ROOF-LAVATORY OCCUPIED LT	AMP FC	6	561248	561107	C454	WORLD TRANSM.-RETRARDER TEMP.	AMP FC	2	561566	561590
C363	FR ROOF-WATCH YOUR STEP LT	AMP MNL	2	561248	561247	C455	WORLD TRANSM.-RETRARDER ACCUM.	AMP FC	2	561566	561590
C364	FR ROOF-DESTINATION SIGN	AMP MNL	2	561667	561550	C456	WORLD TRANSM.-MAIN CONNECTOR	CINCH	2	562554	562554
C365	RH DASH PANEL-IGN & RED LEDS	AMP MNL	2	561667	561550	C457	WORLD TRANSM.-ENGINE SP SENS.	DEUTSCH	2	562572	562427
C366	ENGINE COMPT-DIF OIL T SENSOR	AMP MNL	3	560906	562006	C458	WORLD TRANSM.-ENGINE SP SENS.	AMP MNL	31	562536	562536
C367	FR ROOF-DEST. SIGN BALLAST	AMP MNL	2	561567	561567	C460	WORLD TRANSM.-SPEED SENSOR	AMP MNL	2	561987	561986
C368	FR ROOF-DEST. SIGN OPER. SW	AMP MNL	3	561667	561550	C461	WORLD TRANSM.-RETRARDER TEMP.	AMP MNL	2	561987	561986
C370	FR ROOF-DEST. SIGN FLOOR.	AMP MNL	2	560900	560998	C462	WORLD TRANSM.-RETRARDER TEMP.	AMP MNL	2	561566	561590
C371	FR ROOF-DEST. SIGN FLOOR.	AMP MNL	2	560900	560998	C463	WORLD TRANSM.-SENSOR CONN.	AMP MNL	2	562426	562426
C372	FR ROOF-DEST. SIGN SPEED SW	AMP MNL	2	561476	561476	C464	WORLD TRANSM.-SENSOR CONN.	AMP MNL	2	562570	562571
C373	FR ROOF-NO SMOKING LT	AMP MNL	4	561248	561247	C465	FR SERVICE CPT.-REISS. MOD.	AMP MNL	12	562574	562574
C374	LH SWITCH PANEL	AMP MNL	6	561515	561515	C466	FR SERVICE CPT.-REISS. MOD.	AMP MNL	10	562428	562428
C376	LH SWITCH PANEL	AMP CPC	37	561714	561714	C467	FR SERVICE CPT.-REISS. MOD.	AMP MNL	3	562428	562428
C377	LH SW PANEL-STOP ENG.OVERIDE	DEUTSCH	8	562360	561107	C468	FR JCT BOX-VIM MOD. W.T.	AMP MNL	18	561248	562573
C380	LH CONSOLE-DTR CONNECTOR	SWF	6	561861	561662	C470	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561248	561247
C386	RR JCT BOX (WCL)	AMP MNL	9	561861	561662	C471	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561566	561690
C389	WCL REAR DOOR	AMP MNL	12	561735	561735	C472	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	2	561566	561690
C390	LAVATORY WALL-WCL LAMP	MOLEX	4	561476	561476	C473	FR LH UPPER WHELL CPT-SILENT 1000	AMP MNL	3	561667	561590
C391	LAVATORY WALL-WCL LAMP	SWF	8	561107	561107	C474	LUGGAGE CPT.-TEMP. SENSOR	AMP MNL	2	561247	561248
C392	LAVATORY WALL-WCL SW. LT.	SWF	8	561107	561107	C475	RR JCT BOX-SPEED SIGN CONNECTOR	AMP MNL	2	561247	561248
C393	LAVATORY WALL-WCL REMOTE CTR	SWF	8	561107	561107	C475M	RR JCT BOX-SPEED SIGN MANUAL TR.	AMP MNL	2	561247	561248
C394	UNDER INSTR. PANEL. BIU MONITOR	AMP CPC	4	561686	561683	C476	RR JCT BOX-VIM WORLD TRANSM.	MOLEX	6	562070	562069
C395	DRIVER'S COMPT. - BIU MONITOR	AMP MNL	4	560851	560852	C477	RR JCT BOX-WORLD TR. SHFT.&RET.	AMP CPC	16	561639	561640
C396	ENGINE COMPT. CRADLE ACC.	MOLEX	5	562507	562503	C478	ELECTRONIC DESTINATION SIGN	AMP CPC	9	561639	561637
C400	ENGINE COMPT. BLOCK HEATER	DEUTSCH	40	562281	562284	C483	FR SERVICE CPT. (NOT USED)	AMP CPC	6	561637	561637
C402	RR DRIVE AXLE-FAIR DRYER	AMP MNL	2	561248	561247	C500	FR LH UPPER WHELL CPT.-PROPDRIVER	AMP CPC	2	562070	562069
C403	GALLEY FRIGO NORCOLD	AMP MNL	2	561248	561247	C501	FR LH UPPER WHELL CPT.-PROPDRIVER	AMP CPC	6	562070	562069
C404	GALLEY VAMP	AMP MNL	2	561248	561247	C502	LH CONSOLE-PRE HEATER SW.	AMP CPC	7	562070	562069
C406	FR JCT BOX COMPT.-ABS	AMP MNL	2	561248	561247	C503	LH CONSOLE-PRE HEATER SW.	AMP CPC	8	561188	561187
C407	ENGINE COMPT. -SIGNAL	AMP MNL	2	561248	561247	C504	LH CONSOLE-PRE HEATER SW.	AMP CPC	3	561188	561187
C408	ENGINE COMPT. -SIGNAL	AMP MNL	2	561248	561247	C505	LH CONSOLE-PRE HEATER SW.	AMP CPC	8	561188	561187
C409	ENGINE CPT. -LOW COOL. LEVEL	AMP MNL	2	561248	561247	C506	LH CONSOLE-ESPAN TIMER	AMP CPC	2	561685	561687
C410	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C507	FR JCT BOX CPT. DIGITAL CLOCK	AMP CPC	3	561685	561687
C411	FR JCT BOX-DIODE CONNECTOR	AMP MNL	15	561987	561986	C508	FR JCT BOX-FAN CLUTCH RETARDER	AMP CPC	4	561476	561476
C412	LH SW PANEL-MASTER SWITCH	AMP MNL	8	561670	561670	C509	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	6	561552	561515
C413	ENG CPT.-A/C HI UNLOAD PRS SW	AMP MNL	15	561987	561986	C510	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	16	562531	562531
C415	ENGINE CRADLE-FAN SIGNAL	AMP MNL	2	561566	561566	C511	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	9	562532	562532
C416	FRONT JCT BOX-DIODES	AMP MNL	8	561667	561107	C512	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	10	562533	562533
C418	INSTR. PANEL LH-HTR WINDSH.SW	AMP MNL	3	561670	561670	C514	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	3	561667	561667
C419	FR JCT BOX-RETARDER OR JACOB	AMP MNL	2	561597	561597	C515	FR LH UPPER WHELL CPT. -DATA LOGGER	AMP MNL	6	562433	562433
C420	ENGINE COMPT. WEBASTO WATTEI HTR	AMP MNL	2	561073	561550	C516	FR JCT BOX CPT.-INTERCOM.	AMP CPC	14	561585	562417
C421	ENGINE COMPT. WEBASTO WATTEI HTR	AMP MNL	2	561073	561550	C517	FR JCT BOX CPT.-INTERCOM.	AMP CPC	4	561477	561476
C422	ENGINE COMPT. WEBASTO WATTEI HTR	AMP MNL	2	561073	561550	C518	FR JCT BOX CPT.-INTERCOM.	AMP CPC	24	561642	561643
C424	UNDER INSTRUMENT PANEL CENTER	AMP MNL	3	561667	561550	C519	LAVATORY WALL-INTERCOM.	AMP CPC	24	562070	562069
C425	FR JCT BOX-DIODES	AMP MNL	15	561987	561986	C520	UNDER DASH RH-SEDAN DOOR	AMP CPC	6	562070	562069
						C521	UNDER DASH RH-SEDAN DOOR	HUMPHREY	2	561385	561385

PREVOST

WIRING

DIAGRAM

D060882

PAGE: G3

REVISION 00

CONNECTORS CODE

NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING	NO	LOCATION	TYPE	CAVITY	#PIN HOUSING	#SOCKET HOUSING
C 522	FR JCT BOX-DAYTIME LTR MODULE	BOSCH	5	561183						
C 523	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 524	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 525	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 526	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 527	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 528	FR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 529	FR JCT BOX-12V OUTLET	AMP MNL	2	562647	562646						
C 530	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 531	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 532	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 533	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 534	RR JCT BOX-FUSE BLOCK	PED	8	562647	562646						
C 535	RR JCT BOX-FIRE MODULE DETECT.	AMP MNL	3	562647	562646						
C 536	UNDER DASH RH-DRIVER'S HTR TEMP. CTR	AMP MNL	6	561667	561550						
C 537	BATT. CPT.-A/C PRESS. SIGN. RLY	AMP MNL	2	561248	561247						
C 538	FR SERVICE CPT.-OUTSIDE TEMP. SENSOR	AMP MNL	2	561248	561247						
C 539	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 540	RH DASH PANEL-THERMOMETER SOUND	AMP MNL	2	561248	561247						
C 541	RR JCT BOX-PARK BRAKE STOP LTR RESIS.	AMP MNL	2	561566	561690						
C 542	SOUND SYS. JCT PANEL-AUDIO SEAT SYS.	AMP MNL	3	561781	562428						
C 543	RH HAT HOOK-AUDIO SEAT SYS.	AMP MNL	3	561667	561550						
C 544	RH HAT HOOK-AUDIO SEAT SYS.	AMP MNL	3	561667	561550						
C 545	RH HAT HOOK-AUDIO SEAT SYS.	AMP MNL	3	561667	561550						
C 546	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 547	RH DASH PANEL-ACCESSORIES	AMP CPC	37	561645	561646						
C 548	LH DASH PANEL-T.I. LT. TEST SW.	SWF	8	561107						

PREVOST

WIRING DIAGRAM

D060882

PAGE: G4

REVISION 00