

FUSE CODE (F)

Page F :1

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
F1	6	10A	562407	RR JCT BOX	WORLD TRANSMISSION 12V BATTERY
F2	6	10A	562407	RR JCT BOX	WORLD TRANSMISSION 12V IGNITION

FUSE CODE (F)

Page F :1

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
-----	------	--------	----------	----------	----------