

RELAYS CODE (R)

Page 1 : 1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R1	1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R2	2	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R3	4	24V	561707	BATT. CPT.	FIELD RELAY
R4	4	24V	561005	BATT. CPT.	STARTING MOTOR
R5	5	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R6	11	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R7	5	24V	561707	FR JCT BOX	FAST IDLE
R8	6	24V	561707	RR JCT BOX	12V IGNITION WT
R9	11	24V	561707	RR JCT BOX	BACK-UP LTS
R11	5	24V	561707	RR JCT BOX	12V IGNITION DDEC3
R12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R13	11	24V	561707	FR JCT BOX	FOG LTS
R14	9	24V	561707	FR JCT BOX	BLINKER
R15	9	24V	561707	FR JCT BOX	FR MARKER LTS
R16	9	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R17	9	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R18	9	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R19	9	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R20	9	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R21	10	24V	561707	FR JCT BOX	L.H. DIRECTIONAL LT
R23	10	24V	561707	FR JCT BOX	R.H. DIRECTIONAL LT
R24	10	24V	561707	FR JCT BOX	R.H. CORNERING LT
R25	10	24V	561707	FR JCT BOX	L.H. CORNERING LT
R26	11	24V	561707	RR JCT BOX	STOP LTS
R27	14	24V	561707	RR JCT BOX	aisle & EMERG.EXIT - LTS
R28	14	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R29	15	24V	561707	RR JCT BOX	READING LTS R.H.
R30	15	24V	561707	RR JCT BOX	READING LTS L.H.
R31	15	24V	561707	RR JCT BOX	GENERAL LTS
R32	16	24V	561707	RR JCT BOX	24V FLUORESCENT
R33	18	12V	561538	FR JCT BOX	BLOWER CUT-IN RLY
R34	18	24V	561707	A/C JCT BOX	A/C LOGIC PANEL
R35	18	24V	561707	A/C JCT BOX	WATER PUMP
R36	18	24V	561707	A/C JCT BOX	A/C COMPRESSOR CLUTCH
R37	10	24V	561707	FR JCT BOX	KNEELING LT
R39	19	24V	560407	A/C JCT BOX	CONDENSER FAN MOTOR
R40	19	24V	561014	A/C JCT BOX	CONDENSER SPEED CTR HI
R41	19	24V	560407	A/C JCT BOX	CONDENSER SPEED CTR HI
R42	23	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT *** PRIOR R021
R43	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R44	24	24V	561707	FR JCT BOX	KNEELING SYSTEM
R47	30	24V	561707	INVERTER COMPT	GALLEY-LIQUID CONTAINERS
R48	30	24V	561707	INVERTER COMPT	COFFEE MAKER
R49	27	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R50	27	24V	561707	FR JCT BOX	ABS - VR2 RLY
R51	27	24V	561707	FR JCT BOX	ABS - WARNING RLY
R52	27	24V	561707	FR JCT BOX	ABS - VR1 RLY
R53	1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R54	1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R55	1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R57	9	24V	561707	FR JCT BOX	DAY'S BLINKER
R58	--	12V	562092	RR JCT BOX	HYD. TRANSM. MODULATOR CTR
R59	11	12V	562092	RR JCT BOX	DOCKING LTS
R60	9	12V	561538	FR JCT BOX	DAYTIME RUN LTS
R61	11	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R66	29	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R67	26	24V	561707	SS JCT PANEL	SOUND SYSTEM RADIO
R68	26	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R77	18	24V	561707	A/C JCT BOX	WATER VALVE-A/C
R78	1	12V	561538	FR JCT BOX	MASTER SWITCH

RELAYS CODE (R)

Page 1 : 1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R79	30	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R80	13	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R82	25	24V	561707	FR JCT BOX	RETARDER WT
R83	9	12V	561538	FR JCT BOX	DAYTIME RUN LTS
R84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R87	25	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R88	11	24V	561707	RR JCT BOX	DOCKING LTS WITH FLASHER (SPECIAL)
R89	28	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R90	28	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R91	28	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R92	28	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R93	33	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R94	32&35	24V	561707	RR JCT BOX	WCL - SYSTEM
R95	32&35	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R96	32&35	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R97	32&35	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R98	32&35	12V	561538	RR JCT BOX	WCL - RUN & PARK. BRAKE SIGN.
R99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
RF1	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
RF2	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
RF3	8	24V	560772	RR JCT BOX	TIME DELAY
RLA	22	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)
RLO	22	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)
RLT	22	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)
RLV	22	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)
VIMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
VIMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
VIM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
VIM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
VIM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
VIM4	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARDER ON SIGNAL