

No.	SYSTEM	No.	SYSTEM
0	GRD BATTERY A TO GRD STUD		
0	GRD BATTERY A1 TO GRD STUD		
0	GRD STARTER MOTOR TO GRD STUD	9	INTERIOR LTS-ENGINE CPT
0	FJP - GRD	9	INTERIOR LTS-RR JCT BOX
0	RJB - GRD	9	INTERIOR LTS-FR SERVICE CPT
0	BJP - GRD	9	INTERIOR LTS-FR SERVICE CPT
0A	RJB - GRD	9A	INTERIOR LTS-FR JCT PANEL
0A	FH SERV JCT BOX - GRD	9E	CHIME-PASSENGER & HOSTESS
0B	FJP - GRD	10	A/C & HEAT SYSTEM-LO PRES.
0B	RJB - GRD	10	INTERIOR LTS-LUGGAGE CPT
0B	BOOSTER BLK TO GRD STUD	10A	INTERIOR LTS-LUGGAGE CPT
0BE	OV BATTERY MONITOR	10A	A/C AUXILIARY-CLUTCH
0C	RJB - GRD	10B	INTERIOR LTS-LUGGAGE CPT
0S	AMPLI - GRD	10C	INTERIOR LTS-LUGGAGE CPT
0CR	24V DISC. SW RLY GRD SIGNAL	10D	INTERIOR LTS-LUGGAGE CPT
0DS	PAR DISC SW RLY GRD SIGNAL	11	FR. DESTINATION SIGN
0D	RJB - GRD	11A	FR. DESTINATION SIGN
0E	RJB - GRD	11B	FR. DESTINATION SIGN
0F	RJB - GRD	11C	FR. DESTINATION SIGN
0H	FJP - GRD	11D	FR. DESTINATION SIGN
0M	BACK-UP MONITOR	11E	FR. DESTINATION SIGN
0P	RJB - GRD	11K	FR. DESTINATION SIGN
0MR	24V DISC. SW RLY GRD SIGNAL	11P	FR. DESTINATION SIGN
0MS	24V DISC. SW RLY GRD SIGNAL	12	12V BATTERY TO JCT BLOCK
0SA	FJB - BATTERY GRD-SOUND SYS.	12	12V VIDEO SYSTEM
0SE	FJB - BATTERY GRD-SOUND SYS.	12A	FR JCT PANEL 12V DISC SW
0SF	FJB - BATTERY GRD-SOUND SYS.	12A	RR JCT BOX 12V DISC SW
0SS	FJB - BATTERY GRD-SOUND SYS.	12B	FR JCT PANEL 12V DISC SW
0T	FJP - GRD	12B	FR JCT PANEL 12V DISC SW
0T	FR SERVICE CPT-GRD	12BE	12V BATTERY MONITOR
0V	FJP - GRD	12C	RR JCT BOX 12V DISC SW
0VA	GRD STUD TO BAT. EQUALIZER	12D	FR & RR JCT PANEL 12V HOT WIRE
0W	FJP - GRD	12E	FR JCT PANEL 12V DISC SW
0W	WORLD TRANSM. VIM CHASSIS GRD	12F	RR JCT BOX 12V DISC SW
0WA	PRE_HEAT WATER HEATER WEBASTO	12G	FR JCT PANEL 12V DISC SW
0WB	PRE_HEAT WATER HEATER WEBASTO	12I	FR JCT PANEL 12V IGNITION
0X	RJB - GRD	12IF	FR JCT PANEL 12V IGNITION
0Y	ABS SYSTEM-GRD	12IM	BACK-UP MONITOR
0Y1	ABS SYSTEM-GRD	12P	FR & RR JCT PANEL 12V DISC SW
2	A/C & HEAT SYSTEM-CONDENSER	12P	12V VIDEO SYSTEM
2A	A/C & HEAT SYSTEM-CONDENSER	12SA	12V BATTERY-SOUND SYSTEM
2C	A/C & HEAT SYSTEM-CONDENSER	12SB	12V BATTERY-SOUND SYSTEM
2D	A/C & HEAT SYSTEM-CONDENSER	12SC	12V BATTERY-SOUND SYSTEM
2E	A/C & HEAT SYSTEM-CONDENSER	12SE	12V BATTERY-SOUND SYSTEM
3	A/C & HEAT SYSTEM-EVAPORATOR	12SF	12V BATTERY-SOUND SYSTEM
3A	A/C & HEAT SYSTEM-EVAPORATOR	12SS	12V BATTERY-SOUND SYSTEM
3B	A/C & HEAT SYSTEM-EVAPORATOR	12T	RR JCT BOX 12V DISC SW
4	CHIME-PASSENGER & HOSTESS	12VD	FR & RR JCT BOX 12V HOT WIRE
4A	CHIME-PASSENGER & HOSTESS	12VD	12V BATTERY POST TO EQUALIZER
4B	CHIME-PASSENGER & HOSTESS	12VF	12V FR JCT PANEL
4C	CHIME-PASSENGER & HOSTESS	12VI	RR JCT BOX 12V IGNITION
4D	CHIME-PASSENGER & HOSTESS	12VR	RR JCT BOX 12V DISC SW
4E	CHIME-PASSENGER & HOSTESS	12W	12V HOT WIRE DDEC III FEED
5	INTERIOR LTS-EMERGENCY EXIT LTS	13A	ALARM & SIGNAL-LO AIR PRIM.
5A	INTERIOR LTS-EMERGENCY EXIT LTS	13B	ALARM & SIGNAL-LO AIR SEC.
5C	INTERIOR LTS-EMERGENCY EXIT LTS	14	LAVATORY-FLUSHING SW
6	INTERIOR LTS-AISLE LTS	15	EXTERIOR LTS-MULTI FUNC LEVEL
7	INTERIOR LTS-STEPWELL LTS	15	ALARM & SIGNAL-DIF. OIL TEMP
8A	INTERIOR LTS-AISLE & EMERG. LTS	15A	WIPER & WASHER SYSTEM
8B	INTERIOR LTS-AISLE & EMERG. LTS	16	ALARM & SIGNAL-DIF. OIL TEMP
		16T	SPEEDOMETER SIGNAL (+)
		17	SPEED SW SIGNAL IN (+)
			EXTERIOR LTS-FLASHER UNIT

No.	SYSTEM	No.	SYSTEM
17A	EXTERIOR LTS-FLASHER UNIT		
18	ETHER COLD START SYST.		
20	SPEEDOMETER SIGNAL (-)	32M	BACK-UP MONITOR
20T	SPEED SW SIGNAL IN (-)	34	A/C & HEAT SYSTEM-CONDENSER
21	EXTERIOR LTS-DIRECTIONNAL LH	34A	A/C & HEAT SYSTEM-CONDENSER
21A	EXTERIOR LTS-DIRECTIONNAL LH	34B	A/C & HEAT SYSTEM-CONDENSER
21B	EXTERIOR LTS-DIRECTIONNAL LH	34C	A/C & HEAT SYSTEM-CONDENSER
21H	EXTERIOR LTS-HAZARD SIGNAL	34D	A/C & HEAT SYSTEM-CONDENSER
23	EXTERIOR LTS-DIRECTIONNAL RH	34E	A/C & HEAT SYSTEM-CONDENSER
23A	EXTERIOR LTS-DIRECTIONNAL RH	34F	A/C & HEAT SYSTEM-CONDENSER
23B	EXTERIOR LTS-DIRECTIONNAL RH	34G	A/C & HEAT SYSTEM-CONDENSER
23E	KNEELING-RH EXT. FLASHING LTS	34H	A/C & HEAT SYSTEM-CONDENSER
23F	KNEELING-RH EXT. FLASHING LTS	34J	A/C & HEAT SYSTEM-CONDENSER
23H	EXTERIOR LTS-HAZARD SIGNAL	35	INTERIOR LTS-STEPWELL LTS
24	BATTERY TO 24V CUT OUT RLY	36	ENGINE BRAKE SYSTEM & RETARDER
24A	BOOSTER TO 24V DISC SW	36A	ENGINE BRAKE SYSTEM
24A	RR JCT BOX 24V DISC SW	36C	ENGINE BRAKE SYSTEM-ABS CANCEL
24A	FR JCT PANEL 24V DISC SW	37	LAVATORY-OCCUPIED LTS
24B	FR JCT PANEL 24V DISC SW	38	FUEL WATER FILTER
24BE	BATTERY MONITOR	38	INTERIOR LTS-24V FLUORESCENT
24C	FR JCT PANEL 24V DISC SW	38A	INTERIOR LTS-24V FLUORESCENT
24D	FR & RR JCT PANEL 24V HOT WIRE	38B	INTERIOR LTS-24V FLUORESCENT
24DA	A/C & HEAT. SYS.-WATER PUMP	38C	INTERIOR LTS-24V FLUORESCENT
24E	24V CUT OUT RLY TO 24V DIST.	38E	INTERIOR LTS-24V FLUORESCENT
24F	FR JCT PANEL 24V DISC SW	38F	INTERIOR LTS-24V FLUORESCENT
24I	FR JCT PANEL 24V IGNITION	39	INTERIOR LTS-DRIVER'S LTS
24I	RR JCT BOX 24V IGNITION	39A	INTERIOR LTS-DRIVER'S LTS
24IA	FR JCT PANEL 24V IGNITION	39B	INTERIOR LTS-DRIVER'S LTS
24IB	FR JCT PANEL 24V IGNITION	44	EXTERIOR LTS-FOG
24K	FR JCT PANEL 24V DISC SW	44A	EXTERIOR LTS-FOG
24P	FR JCT PANEL 24V DISC SW	44B	EXTERIOR LTS-FOG
24R	BATT. CPT TO START RLY	44C	EXTERIOR LTS-FOG & HAZARD SW
24S	RR JCT BOX 24V DISC SW	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
24T	RR JCT BOX 24V DISC SW	45	A/C & HEAT SYSTEM-WATER VALVE
24VA	24V BATTERY POST TO EQUALIZER	45A	A/C & HEAT SYSTEM-WATER VALVE
24VI	RR JCT BOX 24V IGNITION	45B	A/C & HEAT SYSTEM-WATER VALVE
24VIF	FR JCT PANEL 24V IGNITION	45E	A/C & HEAT SYSTEM-BYPASS VALVE
24VD	FR & RR JCT BOX 24V HOT WIRE	46	EXTERIOR LTS-MARKER
24VF	FR JCT PANEL 24V DISC SW	46A	EXTERIOR LTS-MARKER
24VR	RR JCT PANEL 24V DISC SW	46B	EXTERIOR LTS-MARKER
24X	24V SPEED SW & KNEELING	46C	EXTERIOR LTS-MARKER
25	12VAC GEN RLY ON SIGNAL	47	A/C & HEAT SYSTEM-DRIVER'S HTR
25A	NOT GENERATOR-WARNING LT	47	A/C & HEAT SYSTEM-FULL AIR
25B	EXTERIOR LTS-DAYTIME RUN LTS	48	INTERIOR LTS-STEPWELL LTS
25L	12VAC GEN RLY ON SIGNAL	50	AIR DRYER
27	LAVATORY-EMERGENCY BUZZER	51	INTERIOR LTS-READING LTS
28	A/C & HEAT SYSTEM-WARNING LT	52	ALARM & SIGNAL-ELEC. HORN
29	A/C & HEAT SYSTEM-DRIVER'S HTR	52A	ALARM & SIGNAL-ELEC. HORN
29A	A/C & HEAT SYSTEM-DRIVER'S HTR	53	ALARM & SIGNAL-ELEC. HORN
29B	A/C & HEAT SYSTEM-DRIVER'S HTR	53B	WIPER & WASHER SYSTEM
30	GALLEY SYSTEM	53C	WIPER & WASHER SYSTEM
30A	GALLEY SYSTEM	53E	WIPER & WASHER SYSTEM
31A	A/C & HEAT SYSTEM-PRESSURE SW	53F	WIPER & WASHER SYSTEM
31B	A/C & HEAT SYSTEM-PRESSURE SW	53J	WIPER & WASHER SYSTEM
31B	WIPER & WASHER SYSTEM	54	SPARE-F.J.B. TO FR ROOF
32	EXTERIOR LTS-BACK-UP	55	EXTERIOR LTS-HI BEAM
32D	BACK-UP MONITOR	56	TRANSM. OIL TEMP GAUGE
32B	EXTERIOR LTS-BACK-UP	57	EXTERIOR LTS-HI BEAM
32D	BACK-UP ALARM	57	A/C & HEAT SYSTEM-WATER PUMP
		57A	EXTERIOR LTS-HI BEAM

No.	SYSTEM	No.	SYSTEM
57A	A/C & HEAT SYSTEM-WATER PUMP	82A	EXTERIOR LTS-STOP SIGNAL
57B	A/C & HEAT SYSTEM-WATER PUMP	82B	EXTERIOR LTS-STOP LTS
57C	PRE-HEAT WATER HEATER	82K	EXTERIOR LTS-STOP RETARDER
57D	PRE-HEAT WATER HEATER	82L	EXTERIOR LTS-STOP LTS
57E	PRE-HEAT WTR HTR PUMP	82R	EXTERIOR LTS-STOP LTS
57F	PRE-HEAT WATER HEATER	83	ENGINE CTR-MAST KEY SW ACCES
57W	PRE-HEAT WATER HEATER	84	ENGINE CTR-MAST KEY SW START
58	EXTERIOR LTS-LO BEAM	84A	ENGINE CTR-MAST KEY SW START
58A	EXTERIOR LTS-LO BEAM	85	ENGINE CTR-MAST KEY SW IGN
58B	EXTERIOR LTS-LO BEAM	85A	24V IGN DASH INSTRUMENTATION
58E	EXTERIOR LTS-LO BEAM	85B	24V IGN DASH INSTRUMENTATION
59A	ENGINE BRAKE SYSTEM	85C	ENGINE CTR-24V IGNITION
60	EXTERIOR LTS-RR & FR ROOF GRD	85C	PARKING BRAKE SWITCH
61	EXTERIOR LTS-24V FEED SW	85F	LO AIR SONALERT
61A	EXTERIOR LTS-HEAD SIGNAL	85W	ABS-24V IGN
62	LAVATORY-OCCUPIED LTS	85X	ABS-24V IGN
62B	LAVATORY-OCCUPIED LTS	85Y	ABS-WARNING LT
63	EXTERIOR LTS-CLEARANCE	86	ENGINE CTR-STARTER SOL SIGN
63A	EXTERIOR LTS-CLEARANCE	86A	ENGINE CTR-STARTER SOL SIGN
63B	EXTERIOR LTS-CLEARANCE	87B	ENGINE CTR-24V IGNITION
63C	EXTERIOR LTS-MARKER SIGNAL	88	ENGINE CTR-RR START SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL	89	ENGINE CTR-RR START SIGNAL
63E	EXTERIOR LTS-CLEARANCE	90	A/C & HEAT SYSTEM-WATER PUMP
63F	EXTERIOR LTS-MARKER BLINKER	90	GALLEY SYSTEM
63H	EXTERIOR LTS-TAIL	90	DIGITAL CLOCK
63K	EXTERIOR LTS-TAIL	90A	GALLEY SYSTEM
64	DIFFERENTIAL OIL TEMP GAUGE	90B	ENGINE CTR-MAST KEY SW FEED
65A	PRE-HEAT WATER HEATER	90B	GALLEY SYSTEM
66B	RR JCT BOX 12V HOT WIRE	90B	FR JCT PANEL 24V DISC SW
67	A/C & HEAT SYSTEM	90C	ALARM & SIGNAL-FIRE DETECTOR
67A	A/C & HEAT SYSTEM	90E	GALLEY SYSTEM
67B	A/C & HEAT SYSTEM	90F	GALLEY SYSTEM
67C	A/C & HEAT SYSTEM	91	PARKING BRAKE SW SIGNAL
69	RR JCT BOX 24V HOT WIRE	91A	PARKING BRAKE SW SIGNAL
70	INTERIOR LTS-HAT RACK LTS	91B	DDEC III-FAST IDLE SIGNAL
70A	INTERIOR LTS-HAT RACK LTS	91B	EXTERIOR LTS-RUN LTS CANCEL
70C	INTERIOR LTS-HAT RACK LTS	91C	PRE-HEAT WATER HEATER
71	A/C AUXILIARY-DASH SW	92	BATTERY MONITOR-CHECK BALANCE
71B	R J B GRD-BACK UP ALARM	92A	BATTERY MONITOR-CHECK BALANCE
71H	A/C AUXILIARY-DASH SW	93	BATTERY MONITOR-CHECK LO/HI
72A	A/C AUXILIARY-DASH SW	93A	BATTERY MONITOR-CHECK LO/HI
72H	A/C AUXILIARY-DASH SW	94	HIGH BUDY SYSTEM
73	LAVATORY-NIGHT LTS	94A	HIGH BUDY SYSTEM
74	INTERIOR LTS-READING LTS	95	ENGINE BRAKE & RETARDER SYSTEM
74A	INTERIOR LTS-READING LTS	95A	ENGINE BRAKE & RETARDER SYSTEM
74B	INTERIOR LTS-READING LTS	95B	ENGINE BRAKE & RETARDER SYSTEM
75	INTERIOR LTS-READING LTS	97	TACHOMETER (-)
76	FUEL TANK GAUGE	99	A/C AUXILIARY-DASH SW
76A	LOW FUEL LT	100	INTERIOR LTS-GENERAL LTS
76B	LOW FUEL LT	100A	INTERIOR LTS-GENERAL LTS
76C	LOW FUEL LT	100B	INTERIOR LTS-GENERAL LTS
76L	LOW FUEL LT	100C	INTERIOR LTS-GENERAL LTS
76M	FUEL PRIME PUMP	101	WORLD TRANSM-LO SIGNAL SOL. LO
76P	FUEL PRIME PUMP	102	A/C JCT BOX-24V DISC. SW
77H	A/C & HEAT SYSTEM-CLUTCH	102	24V STARTER TO GENERATOR
77B	A/C AUXILIARY-LIO. SOL.	102	WORLD TRANSM-SOL. GRD 1
77C	A/C AUXILIARY-LIO. SOL.	102	WORLD TRANSM-SOL. C3
77H	A/C & HEAT SYSTEM-FAN CLUTCH	102	WORLD TRANSM-SOL. FORWARD
80	WORLD TRANSM-NEUTRAL SIGNAL GRD	104	WORLD TRANSM-RETARDER & SUMP
81	EXTERIOR LTS-STOP SW	105	
82	EXTERIOR LTS-STOP SIGNAL		

No.	SYSTEM	No.	SYSTEM
105W	WORLD TRANSM-RETARDER & SUMP	126B	KNEELING SYSTEM
106	WORLD TRANSM-OIL LEVEL HI	126C	KNEELING SYSTEM
107	CHARG SYST-VOLTAGE REGUL. "F"	126G	KNEELING SYSTEM
107	WORLD TRANSM-LOCKUP SOL. HI	126H	KNEELING SYSTEM
108	WORLD TRANSM-REMOTE PWR WAKE UP	127	WORLD TRANSM-RETARDER FEED SOL.
108	24V DISC SW TO 24V SYSTEM	127	PRE-HEAT WATER HEATER
108A	CHARG SYST-VOLTAGE REGUL. "B"	127A	PRE-HEAT WATER HEATER
109	WORLD TRANSM-RET. SOL. LO	127B	PRE-HEAT WATER HEATER
110	ALARM & SIGNAL-WATER TEMP	127W	PRE-HEAT WATER HEATER
110	WORLD TRANSM-LOCKUP SOL. LO	127X	PRE-HEAT WATER HEATER
111	BATTERY GRD	128	WORLD TRANSM-SOL. C2
111	WORLD TRANSM-SOL. C6	128A	PRE-HEAT WATER HEATER
112	WORLD TRANSM-SPARE OUTPUT (+)	128B	PRE-HEAT WATER HEATER
113	ALARM & SIGNAL-OIL PRESS.	128C	PRE-HEAT WATER HEATER
113	WORLD TRANSM-REVERSE WARNING	128D	PRE-HEAT WATER HEATER
114	WORLD TRANSM-SPARE OUTPUT (-)	128E	PRE-HEAT WATER HEATER
114	INTERIOR LTS-DASH LT REGUL.	128F	PRE-HEAT WATER HEATER
114A	INTERIOR LTS-DASH LT	128W	PRE-HEAT WATER HEATER
114B	INTERIOR LTS-DASH LT REGUL.	128X	PRE-HEAT WATER HEATER
114C	INTERIOR LTS-DASH LT	129	WORLD TRANSM-SOL. C5
115	ALARM & SIGNAL-TAG PRESS	129	PRE-HEAT WATER HEATER
115	DDEC III-COOLANT LEVEL	129A	PRE-HEAT WATER HEATER
115	WORLD TRANSM-DO NOT SHIFT SIGNAL	129B	PRE-HEAT WATER HEATER
115A	ALARM & SIGNAL-TAG PRESS	130	WORLD TRANSM-SOL. GRD 3
115B	ALARM & SIGNAL-TAG PRESS	130A	A/C & HEAT SYSTEM-EVAPORATOR
115C	DDEC III-COOLANT LEVEL	130	A/C & HEAT SYSTEM-EVAPORATOR
115W	WORLD TRANSM-DO NOT SHIFT SIGNAL	131	24V DISC SW TO FR JCT PANEL
116	WORLD TRANSM-LO SIGNAL SOL. HI	131	WORLD TRANSM-SOL. C4
116	A/C & HEAT SYSTEM-DRIVER'S HTR	132	WORLD TRANSM-ENG BRK OUTPUT (-)
116A	A/C & HEAT SYSTEM-DRIVER'S HTR	132W	WORLD TRANSM-ENG BRK OUTPUT (-)
116B	A/C & HEAT SYSTEM-DRIVER'S HTR	133	WORLD TRANSM-RET. ACTUATOR HI
117	WORLD TRANSM-SPARE INPUT (-)	133	GALLEY SYSTEM-CONTAINER RH
117	ALARM & SIGNAL-TRANSM OIL TEMP	133A	GALLEY SYSTEM-CONTAINER RH
117A	ALARM & SIGNAL-TRANSM OIL TEMP	134	WORLD TRANSM-RET. APPLY SOL. HI
118	WORLD TRANSM-SPARE INPUT (+)	134	GALLEY SYSTEM-CONTAINER RH
119	CHIME-HOSTESS & PASSENGER	134A	GALLEY SYSTEM-CONTAINER RH
119	WORLD TRANSM-ENG BRK INPUT (+)	135	WORLD TRANSM-ANALOG GRD
119A	CHIME-HOSTESS & PASSENGER	135	A/C AUXILIARY-FAN
119B	CHIME-HOSTESS & PASSENGER	135A	A/C AUXILIARY-FAN
120	12V HOT WIRE	135B	A/C AUXILIARY-COIL SENSING
120	WORLD TRANSM-SOL. C1	135C	WORLD TRANSM-RETARDER TEMP
120D	12V HOT WIRE	135D	WORLD TRANSM-RETARDER RES MOD
120Y	VIDEO SYSTEM	136	GALLEY SYSTEM-LAMP
120Z	VIDEO SYSTEM	136	WORLD TRANSM-ECU POWER
121	WORLD TRANSM-SOL. GRD 2	136V	WORLD TRANSM-12V BATTERY
121	CIGAR LIGHTER	136W	WORLD TRANSM-12V BATTERY
122	A/C & HEAT SYSTEM-DRIVER'S HTR	136X	WORLD TRANSM-12V BATTERY
122	A/C & HEAT SYSTEM-FRESH AIR	137	WORLD TRANSM-RETARDER
122	WORLD TRANSM-SOL. GRD 4	137	RR VIEW MIRROR
123	WORLD TRANSM-NEUTRAL START	137A	RR VIEW MIRROR
123	ALARM & SIGNAL-FIRE DETECTOR	138	WORLD TRANSM-RETARDER TEMP
123	ALARM & SIGNAL-FIRE DETECTOR	138	ABS SYSTEM
123A	ALARM & SIGNAL-FIRE DETECTOR	138	A/C AUXILIARY-FAN
124	WORLD TRANSM-THROTTLE (HI)	138A	ABS SYSTEM
125	LAVATORY-FAN	138A	A/C AUXILIARY-FAN
125	WORLD TRANSM-RETARDER INDICATOR	139	ABS SYSTEM
125W	WORLD TRANSM-RETARDER INDICATOR	139	A/C AUXILIARY-FAN
126	WORLD TRANSM-LUBE PRESS SW.	139	ABS SYSTEM
126	KNEELING SYSTEM	139	A/C AUXILIARY-FAN
126A	KNEELING SYSTEM	139A	WORLD TRANSM-OUTPUT SPEED HI
			A/C AUXILIARY-FAN

No.	SYSTEM	No.	SYSTEM	No.	SYSTEM	No.	SYSTEM
140	A/C AUXILIARY-SHUTTER	165	WORLD TRANSM-OIL LEVEL SIGNAL	563	DDEC III-FAN CLUTCH SPEED# 2	SP12	SPARE
140	WORLD TRANSM-OUTPUT SPEED LO	168	WORLD TRANSM-SER. INTERFACE (+)	583	DDEC III-ENGINE BRAKE 4 CYL.	SP13	SPARE
140	ABS SYSTEM	170C	LUGGAGE DOOR LOCK	750	PRODRIVER-ILLUMINATION LIGHT	SP14	SPARE
141	ABS SYSTEM	170D	LUGGAGE DOOR LOCK	900	DDEC III-DATA LINK (+)	SP15	SPARE
141	WORLD TRANSM-ENGINE SPEED HI	170E	LUGGAGE DOOR LOCK	901	DDEC III-DATA LINK (-)	SP16	SPARE
142	WORLD TRANSM-SERIAL COM. A	170F	LUGGAGE DOOR LOCK	908	DDEC III-HYDRAULIC TRANSM. MOD.	SP20	SPARE
142	ABS SYSTEM	170G	LUGGAGE DOOR LOCK	916	DDEC III-SENSOR SUPPLY (5VDC)	SP21	SPARE
143	ABS SYSTEM	170H	LUGGAGE DOOR LOCK	952	DDEC III-SENSOR RETURN	SP22	SPARE
143A	ABS SYSTEM	170J	LUGGAGE DOOR LOCK	953	DDEC III-BATTERY GRD	SP23	SPARE
143	WORLD TRANSM-ECU BATTERY GRD	170L	LUGGAGE DOOR LOCK	953C	DDEC III-BATTERY GRD	SP30	SPARE
143W	WORLD TRANSM-BATTERY GRD	170M	LUGGAGE DOOR LOCK	979	DDEC III-ENGINE BRAKE 2 CYL.	SP31	SPARE
143X	WORLD TRANSM-BATTERY GRD	170N	LUGGAGE DOOR LOCK	A	A/C & HEAT SYSTEM-HI PRES.	SP32	SPARE
144	WORLD TRANSM-ECU CHASSIS GRD	170P	LUGGAGE DOOR LOCK	A1	A/C & HEAT SYSTEM-LO PRES.	SP33	SPARE
144	ABS SYSTEM	170R	LUGGAGE DOOR LOCK	A4	A/C & HEAT SYSTEM-CONTROL SW	SP34	SPARE
144A	ABS SYSTEM	170S	LUGGAGE DOOR LOCK	A5	A/C & HEAT SYSTEM-CONTROL SW	SP35	SPARE
145	ABS SYSTEM	170V	LUGGAGE DOOR LOCK	A6	A/C & HEAT SYSTEM-CONTROL SW	SP57	SPARE
146	ABS SYSTEM	170W	LUGGAGE DOOR LOCK	D1	SOUND SYSTEM-RH SPEAKER	SP60	SPARE
146	WORLD TRANSM-IGNITION SENSE	170X	LUGGAGE DOOR LOCK	D2	SOUND SYSTEM-RH SPEAKER	SP61	SPARE
146W	WORLD TRANSM-12V IGNITION	170Y	LUGGAGE DOOR LOCK	D3	SOUND SYSTEM-RH SPEAKER	SP62	SPARE
146X	WORLD TRANSM-12V IGNITION	170Z	LUGGAGE DOOR LOCK	D4	SOUND SYSTEM-RH SPEAKER	SP63	SPARE
147	WORLD TRANSM-OIL TEMP	182	PYROMETER	D5	SOUND SYSTEM-RH SPEAKER	SP69	SPARE
147	ABS SYSTEM	182A	PYROMETER	D6	SOUND SYSTEM-RH SPEAKER	SP70	SPARE
147	ETHER COLD START	197A	FUEL WATER FILTER	D7	SOUND SYSTEM-RH SPEAKER	V5	A/C & HEAT SYSTEM-DRIVER'S HTR
147A	ETHER COLD START	197B	FUEL WATER FILTER	D8	SOUND SYSTEM-RH SPEAKER	V7	A/C & HEAT SYSTEM-DRIVER'S HTR
148	ABS SYSTEM	201	WORLD TRANSM-SPARE	G1	SOUND SYSTEM-LH SPEAKER		
148	WORLD TRANSM-OUTPUT SPEED LO	202	WORLD TRANSM-SPARE	G2	SOUND SYSTEM-LH SPEAKER		
149	WORLD TRANSM-TURBINE SPEED HI	203	WORLD TRANSM-SPARE	G3	SOUND SYSTEM-LH SPEAKER		
149	ABS SYSTEM	204	WORLD TRANSM-SPARE	G4	SOUND SYSTEM-LH SPEAKER		
149A	ABS SYSTEM	205	WORLD TRANSM-SPARE	G5	SOUND SYSTEM-LH SPEAKER		
150	ABS SYSTEM-SPARE	206	WORLD TRANSM-SPARE	G6	SOUND SYSTEM-LH SPEAKER		
150	WORLD TRANSM-ENGINE SPEED LO	214	WORLD TRANSM-BACK UP SIGNAL	G7	SOUND SYSTEM-LH SPEAKER		
150	DDEC III-ECM BATTERY GRD	214A	BACK UP SIGNAL	G8	SOUND SYSTEM-LH SPEAKER		
150A	DDEC III-ECM BATTERY GRD	231	NEUTRAL SIGNAL GRD	J4	A/C & HEAT SYSTEM-DRIVER'S HTR		
151	DDEC III-ECM BATTERY GRD	240	DDEC III-ECM 12V FEEDING	L1	VIDEO SYSTEM- 110V		
151	DDEC III-ECM BATTERY GRD	241	DDEC III-ECM 12V FEEDING	L1	INTERIOR LTS-110V FLUORESCENT		
151	WORLD TRANSM-SERIAL COM. B	241	DDEC III-ECM 12V FEEDING	L1A	INTERIOR LTS-110V FLUORESCENT		
151	ABS SYSTEM-SPARE	251	PRODRIVER-12V HOT WIRE	L1C	INTERIOR LTS-110V FLUORESCENT		
152	ABS SYSTEM-SPARE	290	FAN CLUTCH RADIATOR	L2A	INTERIOR LTS-110V FLUORESCENT		
153	ABS SYSTEM	291	FAN CLUTCH RADIATOR SPD 1	L2C	INTERIOR LTS-110V FLUORESCENT		
153	WORLD TRANSM-SPARE INPUT (-)	292	FAN CLUTCH RADIATOR SPD 2	L8	ENG. BLK & WATER TANK-HAETER		
154	WORLD TRANSM-ABS RETARDER INPUT	417	DDEC III-LIMIT SPEED GOVERNOR	L9	ENG. BLK & WATER TANK-HAETER		
155	WORLD TRANSM-SPARE INPUT (-)	419	DDEC III-CHECK ENGINE LIGHT	N1	VIDEO SYSTEM- 110V		
155	ABS SYSTEM	439	DDEC III-12V IGNITION	N2	INTERIOR LTS-110V FLUORESCENT		
156	WORLD TRANSM-THROTTLE POS.	440	DDEC III-12V IGNITION	O3	A/C & HEAT SYSTEM-DRIVER'S HTR		
156	ABS SYSTEM	440A	DDEC III-12V IGNITION	R1	A/C & HEAT SYSTEM-DRIVER'S HTR		
156A	ABS SYSTEM	451	DDEC III-12V IGNITION	R6	A/C & HEAT SYSTEM-DRIVER'S HTR		
156C	ABS SYSTEM	505	DDEC III-A/C FAN CLUTCH	SH1	SHIELD WIRE GRD		
156W	ABS SYSTEM	509	DDEC III-TACHOMETER DRIVE	SH2	SHIELD WIRE GRD		
157	WORLD TRANSM-SPEEDOMETER SIGNAL	510	DDEC III-STOP ENGINE LIGHT	SH3	SHIELD WIRE GRD		
157	ABS SYSTEM	524	DDEC III-FAST IDLE SIGNAL	SP1	SPARE		
157A	ABS SYSTEM	525	DDEC III-ENGINE BRAKE DISABLE	SP2	SPARE		
157B	ABS SYSTEM	528	DDEC III-FAST IDLE SIGNAL	SP3	SPARE		
157C	ABS SYST.-CANCEL SEC. BRK	531	DDEC III-STOP ENG. OVERRIDE	SP4	SPARE		
158	WORLD TRANSM-DIMMER	541	DDEC III-CRUISE CLUTCH RELEASE	SP5	SPARE		
160	WORLD TRANSM-SER. INTERFACE (-)	543	DDEC III-CRUISE SET SW	SP10	SPARE		
161	WORLD TRANSM-SIGNAL GRD	544	DDEC III-CRUISE STOP SW CUT IN	SP11	SPARE		
161B	WORLD TRANSM-SIGNAL GRD	545	DDEC III-CRUISE ON/OFF SW				
162	WORLD TRANSM-PRESS. SW C3	555	DDEC III-CRUISE RESUME SW				
163	WORLD TRANSM-RETARDER ENABLE	556	DDEC III-FAN CLUTCH SPEED# 1				
164	WORLD TRANSM-RET. ACTUATOR SIGN	557	DDEC III-VEHICLE SPEED (+)				
			DDEC III-VEHICLE SPEED (-)				