

No.	SYSTEM	No.	SYSTEM
0	GRD BATTERY 1 TO BATTERY 2	10	INTERIOR LTS-LUGGAGE CPT
0	GRD BATTERY 1 TO GRD STUD	10A	INTERIOR LTS-LUGGAGE CPT
0	GRD STARTER MOTOR TO GRD STUD	10A	A/C & HEAT SYSTEM-HI PRES.
0	FJP - INSIDE GRD	10B	INTERIOR LTS-LUGGAGE CPT
0	RJB - INSIDE GRD	10D	INTERIOR LTS-LUGGAGE CPT
0	ATEC1 TEST SW GRD	10E	INTERIOR LTS-LUGGAGE CPT
0A	A/C - A/C JCT BOX GRD	12	12V CUT OUT SW TO BATTERY
0A	FJP - GRD	12	FR JCT PANEL 12V DISC SW
0A	RJB - GRD	12	ENTRANCE DOOR AIR LOCK
0AA	VOLTAGE REGULATOR GRD	12A	FR JCT PANEL 12V DISC SW
0B	FJP - GRD	12A	RR JCT BOX 12V DISC SW
0B	RJB - GRD	12A	ENTRANCE DOOR AIR LOCK
0BE	OV BATTERY MONITOR	12B	FR JCT PANEL 12V DISC SW
0C	FJP - GRD	12B	RR JCT BOX 12V DISC SW
0C	RJB - GRD	12BE	12V BATTERY MONITOR
0D	FJP - GRD	12C	FR JCT PANEL 12V DISC SW
0D	RJB - GRD	12C	RR JCT BOX 12V DISC SW
0E	FJP - GRD	12D	FR JCT PANEL 12V DISC SW
0E	RJB - GRD	12D	RR JCT BOX 12V DISC SW
0G	FJP - GRD	12E	FR JCT PANEL 12V DISC SW
0J	FJP - GRD	12E	RR JCT BOX 12V DISC SW
0P	RJB - GRD	12F	FR JCT PANEL 12V DISC SW
0S	FJB - SUN VISOR GRD	12G	FR JCT PANEL 12V DISC SW
0T	RJB - UNLOAD TAG GRD	12I	RR JCT BOX 12V IGNITION
0T	FR SERVICE CPT-GRD	12I	FR JCT PANEL 12V IGNITION
0VA	GRD BATTERY 2 TO BAT.EQUALIZER	12IA	FR JCT PANEL 12V IGNITION
0W	FJP - GRD	12IF	FR JCT PANEL 12V IGNITION
0W	WORLD TRANSM. VIM CHASSIS GRD	12T	RR JCT BOX 12V DISC SW
0WA	PRE-HEAT WATER HEATER	12T	RR JCT BOX 12V DISC SW
0WB	PRE-HEAT WATER HEATER	12V	RR JCT BOX 12V DISC SW
0X	DDEC II-COOLANT MODULE GRD	12VA	12V BATTERY POST TO EQUALIZER
0Y	ABS SYSTEM-GRD	12VD	12V HOT WIRE
0Y1	ABS SYSTEM-GRD	12VDF	12V HOT WIRE FJB
0Z	DDEC II-COOLANT MODULE GRD	12VDR	12V HOT WIRE RJB
00	BATTERY GRD	12VF	12V FR JCT PANEL
2	A/C & HEAT SYSTEM-CONSENSER	12VIF	FR JCT PANEL 12V IGNITION
2A	A/C & HEAT SYSTEM-CONSENSER	12VIR	RR JCT BOX 12V IGNITION
2D	A/C & HEAT SYSTEM-CONSENSER	12VR	12V RR JCT BOX
3	A/C & HEAT SYSTEM-EVAPORATOR	12W	12V HOT WIRE DDEC III FEED
3A	A/C & HEAT SYSTEM-CLUTCH SW	13A	ALARM & SIGNAL-LO AIR PRIM.
6	A/C & HEAT SYSTEM-EVAPORATOR	13B	ALARM & SIGNAL-LO AIR SEC.
6	EXTERIOR LTS-DOCKING	15	EXTERIOR LTS-MULTI FUNC LEVEL
6A	EXTERIOR LTS-CORNERING	15	ALARM & SIGNAL-DIF. OIL TEMP
6B	EXTERIOR LTS-CORNERING	15	WIPER & WASHER SYSTEM
6B1	EXTERIOR LTS-CORNERING RH	15A	ALARM & SIGNAL-DIF. OIL TEMP
6C	EXTERIOR LTS-CORNERING	16	SPEEDOMETER SIGNAL (+)
6C1	EXTERIOR LTS-CORNERING LH	16T	SPEED SW SIGNAL IN (+)
6D	EXTERIOR LTS-DOCKING	17	EXTERIOR LTS-FLASHER UNIT
6E2	EXTERIOR LTS-CORNERING LH	17A	EXTERIOR LTS-FLASHER UNIT
6F1	EXTERIOR LTS-CORNERING RH	18	ETHER COLD START SYST.
7	ENTRANCE DOOR	19	SPARE - RJB TO RR ROOF RH
8A	DDEC II-STP ENG. OVERRIDE	20	SPEEDOMETER SIGNAL (-)
9	INTERIOR LTS-ENGINE CPT	20T	SPEED SW SIGNAL IN (-)
9	INTERIOR LTS-RR JCT BOX	21	EXTERIOR LTS-DIRECTIONNAL LH
9	INTERIOR LTS-FR SERVICE CPT	21A	EXTERIOR LTS-DIRECTIONNAL LH
9A	INTERIOR LTS-FR JCT PANEL	21B	EXTERIOR LTS-DIRECTIONNAL LH
9B	INTERIOR LTS-FR JCT PANEL	21C	EXTERIOR LTS-DIRECTIONNAL LH
9C	INTERIOR LTS-FR SERVICE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
9E	INTERIOR LTS-LUGGAGE CPT	23	EXTERIOR LTS-DIRECTIONNAL RH
10	A/C & HEAT SYSTEM-LO PRES.		

No.	SYSTEM	No.	SYSTEM
23A	EXTERIOR LTS-DIRECTIONNAL RH	36C	ENGINE BRAKE SYSTEM
23B	EXTERIOR LTS-DIRECTIONNAL RH	38	FUEL WATER FILTER
23C	EXTERIOR LTS-DIRECTIONNAL RH	39	INTERIOR LTS-DRIVER'S LTS
23H	EXTERIOR LTS-HAZARD SIGNAL	39A	INTERIOR LTS-DRIVER'S LTS
24	BATTERY 3 TO BATTERY 4	39B	INTERIOR LTS-DRIVER'S LTS
24	BATTERY 4 TO 24V DISC SW	39C	INTERIOR LTS-DRIVER'S LTS
24A	RR JCT BOX 24V DISC SW	40	SPARE - F.J.PANEL TO F.SERV CPT
24A	FR JCT PANEL 24V DISC SW	43	A/C & HEAT SYSTEM-FULL AIR
24B	RR JCT BOX 24V DISC SW	44	EXTERIOR LTS-FOG
24B	FR JCT PANEL 24V DISC SW	44A	EXTERIOR LTS-FOG
24BE	BATTERY MONITOR	44B	EXTERIOR LTS-FOG
24C	RR JCT BOX 24V DISC SW	44C	EXTERIOR LTS-FOG & HAZARD SW
24C	FR JCT PANEL 24V DISC SW	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
24E	FR JCT PANEL 24V DISC SW	45	A/C & HEAT SYSTEM-FULL AIR
24E	RR JCT BOX 24V DISC SW	45A	A/C & HEAT SYSTEM-FULL AIR
24F	FR JCT PANEL 24V DISC SW	45G	A/C & HEAT SYSTEM-DRIVER'S HTR
24G	FR JCT PANEL 24V DISC SW	46	EXTERIOR LTS-MARKER
24I	FR JCT PANEL 24V IGNITION	46A	EXTERIOR LTS-MARKER
24I	RR JCT BOX 24V IGNITION	46B	EXTERIOR LTS-MARKER
24IA	FR JCT PANEL 24V IGNITION	46C	EXTERIOR LTS-MARKER
24IA	RR JCT BOX 24V IGNITION	47	A/C & HEAT SYSTEM-DRIVER'S HTR
24IB	FR JCT PANEL 24V IGNITION	47	A/C & HEAT SYSTEM-FULL AIR
24IB	RR JCT BOX 24V IGNITION	50	AIR DRYER
24IF	FR JCT PANEL 24V IGNITION	52	ALARM & SIGNAL-ELEC. HORN
24P	FR JCT PANEL 24V DISC SW	52A	ALARM & SIGNAL-ELEC. HORN
24R	24V RR JCT BLK TO STARTER	53	ALARM & SIGNAL-ELEC. HORN
24S	FJP 24V DISC SW-SUN VISOR	53B	WIPER & WASHER SYSTEM
24T	FR JCT PANEL 24V DISC SW	53C	WIPER & WASHER SYSTEM
24VA	24V BATTERY POST TO EQUALIZER	53E	WIPER & WASHER SYSTEM
24VI	FR JCT PANEL 24V IGNITION	53F	WIPER & WASHER SYSTEM
24VIF	FR JCT PANEL 24V IGNITION	53J	WIPER & WASHER SYSTEM
24VIR	RR JCT BOX 24V IGNITION	54	SPARE-F.J.B. TO FR ROOF
24VD	24V HOT WIRE	55	EXTERIOR LTS-HI BEAM
24VF	FR JCT PANEL 24V DISC SW	56	TRANSM. OIL TEMP GAUGE
24VR	RR JCT BOX 24V DISC SW	57	EXTERIOR LTS-HI BEAM
24X	24V SPEED SW & LEVEL LOW	57	A/C & HEAT SYSTEM-WATER PUMP
25	12VAC GEN RLY ON SIGNAL	57A	EXTERIOR LTS-HI BEAM
25A	NOT GENERATOR-WARNING LT	57B	A/C & HEAT SYSTEM-WATER PUMP
25B	EXTERIOR LTS-DAYTIME RUN LTS	57C	PRE-HEAT WATER HEATER
25C	12VAC GEN RLY ON SIGNAL	57C	A/C & HEAT SYSTEM-WATER PUMP
25K	12VAC GEN RLY ON SIGNAL	57D	PRE-HEAT WATER HEATER
25L	12VAC GEN RLY ON SIGNAL	57E	PRE-HEAT WTR HTR PUMP
26A	ATEC1-NEUTRAL SIGNAL	57F	PRE-HEAT WATER HEATER
28	A/C & HEAT SYSTEM-WARNING LT	58	EXTERIOR LTS-LO BEAM
28A	A/C & HEAT SYSTEM-WARNING LT	58A	EXTERIOR LTS-LO BEAM
29	A/C & HEAT SYSTEM-DRIVER'S HTR	58B	EXTERIOR LTS-LO BEAM
29A	A/C & HEAT SYSTEM-DRIVER'S HTR	58E	EXTERIOR LTS-LO BEAM
29B	A/C & HEAT SYSTEM-DRIVER'S HTR	59A	ENGINE BRAKE SYSTEM
31	A/C & HEAT SYSTEM-WARNING LT	60	EXTERIOR LTS-RR & FR ROOF GRD
31A	A/C & HEAT SYSTEM-WARNING LT	61	EXTERIOR LTS-24V FEED SW
31A	A/C & HEAT SYSTEM-PRESSURE SW	61A	EXTERIOR LTS-HEAD SIGNAL
31B	A/C & HEAT SYSTEM-PRESSURE SW	62	LEVEL-LOW SYSTEM
31B	WIPER & WASHER SYSTEM	63	EXTERIOR LTS-CLEARANCE
32	EXTERIOR LTS-BACK-UP	63A	EXTERIOR LTS-CLEARANCE
32B	EXTERIOR LTS-BACK-UP	63B	EXTERIOR LTS-CLEARANCE
32D	BACK-UP ALARM	63C	EXTERIOR LTS-MARKER SIGNAL
34	A/C & HEAT SYSTEM-CONDENSER	63D	EXTERIOR LTS-MARKER & TAIL
35	INTERIOR LTS-ENTRANCE DOOR	63E	EXTERIOR LTS-CLEARANCE
36	ENGINE BRAKE SYSTEM & RETARDER	63F	EXTERIOR LTS-MARKER BLINKER
36A	ENGINE BRAKE SYSTEM		

No.	SYSTEM	No.	SYSTEM
63H	EXTERIOR LTS-TAIL	90F	CHARG SYST-VOLTAGE REGUL. "B"
63K	EXTERIOR LTS-TAIL	91	PARKING BRAKE SW SIGNAL
64	DIFFERENTIAL OIL TEMP GAUGE	91A	PARKING BRAKE SW SIGNAL
65A	CENTER DOOR AIR LOCK	91B	DDEC III-FAST IDLE SIGNAL
65A	LOW FUEL T.T. LT.	91B	EXTERIOR LTS-RUN LTS CANCEL
67	A/C & HEAT SYSTEM	91M	PARKING BRAKE ALARM
67A	A/C & HEAT SYSTEM	91N	PARKING BRAKE ALARM
67B	A/C & HEAT SYSTEM	92	BATTERY EQUALIZER-CHECK BALANCE
67C	A/C & HEAT SYSTEM	93	BATTERY EQUALIZER-CHECK LO/HI
70B	ENGINE CONTROL SW - 24V IGN.	95	ENGINE BRAKE & RETARDER SYSTEM
71	BACK-UP CANCEL SW	95A	ENGINE BRAKE & RETARDER SYSTEM
71B	BACK-UP CANCEL SW	95B	ENGINE BRAKE & RETARDER SYSTEM
72	BACK-UP CANCEL SW	97	TACHOMETER-NOT USE
72	SPARE F.J.B. TO R.J.B.	99	UNLOAD TAG SYSTEM
72	SPARE F.J.B. TO R.J.B.	99A	FR SERVICE JCT BOX 12V HOT WIRE
72B	SUN VISOR	100B	BACK-UP CANCEL SW
72C	SUN VISOR	101	24V DISC SW TO STARTER
72D	SUN VISOR	101	WORLD TRANSM-LO SIGNAL SOL. LO
72E	SUN VISOR	102	24V STARTER TO GENERATOR
72S	SUN VISOR	102	24V DISC SW TO A/C JCT BOX
76	FUEL TANK GAUGE	102	WORLD TRANSM-SOL. GRD 1
76A	CENTER DOOR AJAR LT	102	WORLD TRANSM-SOL. C3
76L	LOW FUEL LT	104	LEVEL-LOW SYSTEM
76M	FUEL PRIME PUMP	104	WORLD TRANSM-SOL. FORWARD
76P	FUEL PRIME PUMP	105	WORLD TRANSM-RETARDER & SUMP
77	A/C & HEAT SYSTEM	106	WORLD TRANSM-OIL LEVEL HI
77B	A/C & HEAT SYSTEM	107	CHARG SYST-VOLTAGE REGUL. "F"
77C	A/C & HEAT SYSTEM-COMPRESSOR	107	WORLD TRANSM-LOCKUP SOL. HI
77H	A/C & HEAT SYSTEM-FAN CLUTCH	108	WORLD TRANSM-REMOTE PWR WAKE UP
80	WORLD TRANSM-NEUTRAL SIGNAL GRD	109	WORLD TRANSM-RET. SOL. LO
81	EXTERIOR LTS-STOP SW	110	ALARM & SIGNAL-WATER TEMP
82	EXTERIOR LTS-STOP SIGNAL	110	WORLD TRANSM-LOCKUP SOL. LO
82A	EXTERIOR LTS-STOP SIGNAL	111	BATTERY GRD
82B	EXTERIOR LTS-STOP LTS	111	WORLD TRANSM-SOL. C6
82K	EXTERIOR LTS-STOP RETARDER	112	WORLD TRANSM-SPARE OUTPUT (+)
82L	EXTERIOR LTS-STOP LTS	112	BACK-UP SIGNAL
82R	EXTERIOR LTS-STOP LTS	113	ALARM & SIGNAL-OIL PRESS
83	ENGINE CTR-MAST KEY SW ACCES	113	WORLD TRANSM-REVERSE WARNING
83A	DDEC II-COOLANT LEVEL PROBE	114	WORLD TRANSM-SPARE OUTPUT (-)
84	ENGINE CTR-MAST KEY SW START	114	INTERIOR LTS-DASH LT REGUL.
84A	ENGINE CTR-MAST KEY SW START	114A	INTERIOR LTS-DASH LT
85	ENGINE CTR-MAST KEY SW IGN	114B	INTERIOR LTS-DASH LT REGUL.
85A	24V IGN DASH INSTRUMENTATION	114C	INTERIOR LTS-DASH LT
85B	ENGINE CTR-24V IGNITION	115	ALARM & SIGNAL-TAG PRESS
85C	PARKING BRAKE SWITCH	115	DDEC III-COOLANT LEVEL
85F	LO AIR SONALERT	115	WORLD TRANSM-DO NOT SHIFT SIGNAL
85W	ABS-24V IGN	115A	ALARM & SIGNAL-TAG PRESS
85X	ABS-24V IGN	115B	ALARM & SIGNAL-TAG PRESS
85Y	ABS-WARNING LT	115C	DDEC III-COOLANT LEVEL
86	ENGINE CTR-STARTER SOL SIGN	116	WORLD TRANSM-LO SIGNAL SOL. HI
86A	ENGINE CTR-STARTER SOL SIGN	116A	A/C & HEAT SYSTEM-DRIVER'S HTR
87B	ENGINE CTR-24V IGNITION	116B	A/C & HEAT SYSTEM-DRIVER'S HTR
88	ENGINE CTR-RR START SIGNAL	117	WORLD TRANSM-SPARE INPUT (-)
89	ENGINE CTR-RR START SIGNAL	117	ALARM & SIGNAL-TRANSM OIL TEMP
90	A/C & HEAT SYSTEM-WATER PUMP	117A	ALARM & SIGNAL-TRANSM OIL TEMP
90A	ENGINE CTR-MAST KEY SW FEED	118	WORLD TRANSM-SPARE INPUT (+)
90B	A/C & HEAT SYSTEM-COND FAN MOT	118	DRIVER'S & CO-PILOT SEAT HTR
90B	ENGINE CTR-MAST KEY SW FEED	118A	DRIVER'S & CO-PILOT SEAT HTR
90B	FR JCT PANEL 24V DISC SW	119	WORLD TRANSM-ENGINE BRAKE
90C	ALARM & SIGNAL-FIRE DETECTOR		

No.	SYSTEM	No.	SYSTEM
120	12V HOT WIRE-DISC SW TO FJP	136X	WORLD TRANSM-12V BATTERY
120	WORLD TRANSM-SOL. C1	137	WORLD TRANSM-RETARDER
121	WORLD TRANSM-SOL. GRD 2	137	RR VIEW MIRROR
121	CIGAR LIGHTER	137	RR VIEW MIRROR
122	A/C & HEAT SYSTEM-DRIVER'S HTR	137A	RR VIEW MIRROR
122	A/C & HEAT SYSTEM-FRESH AIR	138	WORLD TRANSM-RETARDER TEMP
122	WORLD TRANSM-SOL. GRD 4	138	ABS SYSTEM
123	WORLD TRANSM-NEUTRAL START	138A	ABS SYSTEM
123	ALARM & SIGNAL-FIRE DETECTOR	139	ABS SYSTEM
123A	ALARM & SIGNAL-FIRE DETECTOR	139	WORLD TRANSM-OUTPUT SPEED HI
124	WORLD TRANSM-THROTTLE (HI)	140	WORLD TRANSM-OUTPUT SPEED LO
125	WORLD TRANSM-RETARDER INDICATOR	140	ABS SYSTEM
125W	WORLD TRANSM-RETARDER INDICATOR	141	ABS SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.	141	WORLD TRANSM-ENGINE SPEED HI
126	CENTER DOOR AIR LOCK	142	WORLD TRANSM-SERIAL COM. A
126	FR SERVICE JCT BOX 12V HOT WIRE	142	ABS SYSTEM
127	WORLD TRANSM-RETARDER FEED SOL.	142	ABS SYSTEM
127	PRE-HEAT WATER HEATER	143	ABS SYSTEM
127A	PRE-HEAT WATER HEATER	143A	ABS SYSTEM
127W	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD
127X	PRE-HEAT WATER HEATER	143W	WORLD TRANSM-BATTERY GRD
128	WORLD TRANSM-SOL. C2	143X	WORLD TRANSM-BATTERY GRD
128A	PRE-HEAT WATER HEATER	144	WORLD TRANSM-ECU CHASSIS GRD
128B	PRE-HEAT WATER HEATER	144	ABS SYSTEM
128C	PRE-HEAT WATER HEATER	144A	ABS SYSTEM
128D	PRE-HEAT WATER HEATER	145	ABS SYSTEM
128W	PRE-HEAT WATER HEATER	146	ABS SYSTEM
128X	PRE-HEAT WATER HEATER	146	WORLD TRANSM-IGNITION SENSE
129	WORLD TRANSM-SOL. C5	146W	WORLD TRANSM-12V IGNITION
129	PRE-HEAT WATER HEATER	146X	WORLD TRANSM-12V IGNITION
129A	PRE-HEAT WATER HEATER	147	WORLD TRANSM-OIL TEMP
129B	PRE-HEAT WATER HEATER	147	ABS SYSTEM
130	WORLD TRANSM-SOL. GRD 3	147	ETHER COLD START
130	A/C & HEAT SYSTEM-EVAPORATOR	147C	ETHER COLD START
131	24V DISC SW TO FR JCT PANEL	148	ABS SYSTEM
131	WORLD TRANSM-SOL. C4	148	WORLD TRANSM-OUTPUT SPEED LO
132	WORLD TRANSM-ENGINE BRAKE	149	WORLD TRANSM-TURBINE SPEED HI
132B	LEVEL-LOW SYSTEM	149	ABS SYSTEM
132C	LEVEL-LOW SYSTEM	149A	ABS SYSTEM
132D	LEVEL-LOW SYSTEM	150	ABS SYSTEM-SPARE
132E	LEVEL-LOW SYSTEM	150	WORLD TRANSM-ENGINE SPEED LO
132W	WORLD TRANSM-ENGINE BRAKE	150	DDEC III-ECM BATTERY GRD
132-1A	LEVEL-LOW SYSTEM	150A	DDEC III-ECM BATTERY GRD
132-1B	LEVEL-LOW SYSTEM	151	DDEC III-ECM BATTERY GRD
132-1C	LEVEL-LOW SYSTEM	151	WORLD TRANSM-SERIAL COM. B
132-2A	LEVEL-LOW SYSTEM	151	ABS SYSTEM-SPARE
132-2B	LEVEL-LOW SYSTEM	152	ABS SYSTEM-SPARE
132-2C	LEVEL-LOW SYSTEM	153	ABS SYSTEM
133	WORLD TRANSM-RET. ACTUATOR HI	153	ELECTRICAL DRIVER'S SEAT
134	WORLD TRANSM-RET. APPLY SOL. HI	153	WORLD TRANSM-SPARE INPUT (-)
135	WORLD TRANSM-ANALOG GRD	154	WORLD TRANSM-ABS INPUT
135A	A/C & HEAT SYSTEM-AIR SENSOR	155	WORLD TRANSM-SPARE INPUT (-)
135C	A/C & HEAT SYSTEM-AIR SENSOR	155	ABS SYSTEM
135D	A/C & HEAT SYSTEM-AIR SENSOR	156	WORLD TRANSM-THROTTLE POS. SIGNAL
135D	A/C & HEAT SYSTEM-AIR SENSOR	156	ABS SYSTEM
136	GALLEY-ACCESSORIES	156A	ABS SYSTEM
136	WORLD TRANSM-ECU POWER	156C	ABS SYSTEM
136V	WORLD TRANSM-12V BATTERY	156W	ABS SYSTEM
136W	WORLD TRANSM-12V BATTERY		

No.	SYSTEM	No.	SYSTEM	No.	SYSTEM	No.	SYSTEM
157	WORLD TRANSM-SPEEDOMETER SIGNAL	292	FAN CLUTCH RADIATOR SPD 2				
157	ABS SYSTEM	417	DDEC III-LIMIT SPEED GOVERNOR				
157A	ABS SYSTEM	419	DDEC III-CHECK ENGINE LIGHT				
157B	ABS SYSTEM	439	DDEC III-12V IGNITION				
157C	ABS SYST.-CANCEL SEC. BRK	440	DDEC III-12V IGNITION				
158	WORLD TRANSM-DIMMER	505	DDEC III-TACHOMETER DRIVE				
160	WORLD TRANSM-SER. INTERFACE (-)	505	DDEC III-TACHOMETER DRIVE				
161	WORLD TRANSM-SIGNAL GRD	509	DDEC III-STOP ENGINE LIGHT				
161	UNLOAD TAG SYSTEM	510	DDEC III-FAST IDLE SIGNAL				
161B	WORLD TRANSM-SIGNAL GRD	524	DDEC III-ENGINE BRAKE DISABLE				
162	WORLD TRANSM-PRESS. SW C3	525	DDEC III-FAST IDLE SIGNAL				
163	WORLD TRANSM-RETARDER ENABLE	528	DDEC III-STOP ENG. OVERRIDE				
164	WORLD TRANSM-RET. ACTUATOR SIGN	531	DDEC III-CRUISE CLUTCH CUT OUT				
165	WORLD TRANSM-OIL LEVEL SIGNAL	541	DDEC III-CRUISE SET SW				
168	WORLD TRANSM-SER. INTERFACE (+)	543	DDEC III-CRUISE STOP SW CUT OUT				
170C	LUGGAGE DOOR LOCK	544	DDEC III-CRUISE ON/OFF SW				
170D	LUGGAGE DOOR LOCK	545	DDEC III-CRUISE RESUME SW				
170E	LUGGAGE DOOR LOCK	555	DDEC III-CRUISE ANABLE LIGHT				
170F	LUGGAGE DOOR LOCK	556	DDEC III-VEHICLE SPEED (+)				
170G	LUGGAGE DOOR LOCK	557	DDEC III-VEHICLE SPEED (-)				
170H	LUGGAGE DOOR LOCK	565	DDEC III-ENGINE BRAKE ACTIVE				
170J	LUGGAGE DOOR LOCK	583	DDEC III-ENGINE BRAKE 4 CYL.				
170L	LUGGAGE DOOR LOCK	750	PRODRIVER-ILLUMINATION LTS				
170M	LUGGAGE DOOR LOCK	900	DDEC III-DATA LINK (+)				
170N	LUGGAGE DOOR LOCK	901	DDEC III-DATA LINK (-)				
170P	LUGGAGE DOOR LOCK	908	DDEC III-HYDRAULIC TRANSM. MODULATOR				
170R	LUGGAGE DOOR LOCK	916	DDEC III-SENSOR SUPPLY (5VDC)				
170S	LUGGAGE DOOR LOCK	952	DDEC III-SENSOR RETURN				
170V	LUGGAGE DOOR LOCK	953	DDEC III-BATTERY GRD				
170W	LUGGAGE DOOR LOCK	953C	DDEC III-BATTERY GRD				
170X	LUGGAGE DOOR LOCK	979	DDEC III-ENGINE BRAKE 2 CYL.				
170Y	LUGGAGE DOOR LOCK	A	LEVEL-LOW SYSTEM				
170Z	LUGGAGE DOOR LOCK	A	A/C & HEAT SYSTEM-HI PRES.				
182	PYROMETER	A1	A/C & HEAT SYSTEM-LD PRES.				
182A	PYROMETER	A2	INTERIOR LTS-DRIVER'S LTS				
185	UNLOAD TAG SYSTEM	B	LEVEL-LOW SYSTEM				
185A	UNLOAD TAG SYSTEM	B00	RR JCT BOX CPT BATT GRD				
186	UNLOAD TAG SYSTEM	B000	RR JCT BOX CPT BATT GRD				
186A	UNLOAD TAG SYSTEM	C	LEVEL-LOW SYSTEM				
187	UNLOAD TAG SYSTEM	J4	A/C & HEAT SYSTEM-DRIVER'S HTR				
187C	UNLOAD TAG SYSTEM	D3	A/C & HEAT SYSTEM-DRIVER'S HTR				
188	UNLOAD TAG SYSTEM	R1	A/C & HEAT SYSTEM-DRIVER'S HTR				
188A	UNLOAD TAG SYSTEM	R6	A/C & HEAT SYSTEM-DRIVER'S HTR				
188B	UNLOAD TAG SYSTEM	SH1	SHIELD WIRE GRD				
201	WORLD TRANSM-SPARE	SH2	SHIELD WIRE GRD				
202	WORLD TRANSM-SPARE	SH3	SHIELD WIRE GRD				
203	WORLD TRANSM-SPARE	V5	A/C & HEAT SYSTEM-DRIVER'S HTR				
204	WORLD TRANSM-SPARE	V7	A/C & HEAT SYSTEM-DRIVER'S HTR				
205	WORLD TRANSM-SPARE						
206	WORLD TRANSM-SPARE						
214	WORLD TRANSM-BACK UP SIGNAL						
214A	WORLD TRANSM-BACK UP SIGNAL						
231	WORLD TRANSM-NEUTRAL SIGNAL GRD						
240	DDEC III-ECM 12V FEEDING						
241	DDEC III-ECM 12V FEEDING						
251	PRODRIVER-12V HOT WIRE						
260	WINDOW AJAR						
290	FAN CLUTCH RADIATOR						
291	FAN CLUTCH RADIATOR SPD 1						