

No.	SYSTEM	No.	SYSTEM
0	IC - INVERTER CPT GRD	OT	RS - RR JCT BOX GRD
0	GALLEY GRD	OU	RR JCT BOX CPT GRD STUD
0	PB - POWER BOX GRD	OV	RR JCT BOX CPT GRD STUD
0	CONDENSER CPT GRD	OV1	RR JCT BOX CPT GRD STUD
0	RS - LUG. CPT ACCES. GRD	OW	FS - UNDER DASH CENT GRD
0	A/C - A/C JCT BOX GRD	OW	DDEC-COOL LEVEL PROBE GRD
0	GALLEY GRD	OX	FR JCT BOX CPT GRD STUD
0	FJB - FR JCT BOX GRD	OX	RJB - COOL. LVL BATT. GRD
0	GALLEY GRD	OY	RS - RR JCT BOX GRD
0	VIDEO GRD	OY	RS - DRIVE AXLE ACCES. GRD
OA	A/C - A/C JCT BOX GRD	OZ	FR JCT BOX CPT GRD STUD
OA	FRS - FR ROOF ACCES. GRD	OZ	RR JCT BOX CPT GRD STUD
OA	RS - LUG. CPT ACCES. GRD	OZ1	RR JCT BOX CPT GRD STUD
OA	AJB - ALARM JCT BOX GRD	00	RR JCT BOX CPT BATT. GRD
OA	FJB - FR JCT BOX GRD	00	RJB - CRUISE CTR BATT. GRD
OAA	RS - VOLTAGE REGULATOR GRD	1	TACHO SYSTEM
OAB	RS - RR JCT BOX GRD	2B	A/C & HEAT SYSTEM-COOL 1 SIGN
OB	EC - ENGINE GRD	2C	A/C & HEAT SYSTEM-LO PRESS SW
OB	FRS - FR ROOF HEAT WIND GRD	2D	A/C & HEAT SYSTEM-LO PRESS TT LT
OB	FS - FR ROOF ACCES. GRD	4	HOSTESS & PASSENGER CHIME
OB	RS - LUG. CPT ACCES. GRD	4A	HOSTESS & PASSENGER CHIME
OB	A/C - A/C JCT BOX GRD	4B	PASSENGER CHIME
OB	FJB - FR JCT BOX GRD	4C	HOSTESS CHIME
OBE	RJB - BAT. EQUAL. BAT GRD	5	INTERIOR LTS-AISLE & EMERG. EXIT
OC	EC - STARTER MOTOR GRD	5	UPPER WINDSHIELD DEFROSTER
OC	BAT. EQUALIZER GRD	5D	UPPER WINDSHIELD DEFROSTER
OC	FS - SERV. CPT ACCES. GRD	5E	UPPER WINDSHIELD DEFROSTER
OC	RS - ENGINE ACCES. GRD	5N	INTERIOR LTS-EMERGENCY EXIT
OC	RJB - SPEED SW. BATT. GRD	6	INTERIOR LTS-AISLE
OD	FS - SERV. CPT ACCES. GRD	7A	SPEED SW 5 MPH N/O
OD	RS - HAT RACK ACCES. LH GRD	7B	ENTRANCE DOOR (SEDAN)
OE	FS - FR LAMPS GRD	7C	ENTRANCE DOOR (SEDAN)
OE	RS - HAT RACK ACCES. LH GRD	7D	ENTRANCE DOOR (SEDAN)
OF	RS - HAT RACK ACCES. RH GRD	7DA	ENTRANCE DOOR (SEDAN)
OG	RS - HAT RACK ACCES. RH GRD	7DB	ENTRANCE DOOR (SEDAN)
OG	FS - INSTR. PANEL LH GRD	8	TACHOMETER GRD SHIELD
OH	FS - INSTR. PANEL CENT GRD	9	INTERIOR LTS-ENGINE CPT
OH	RS - LAVATORY ACCES. GRD	9A	INTERIOR LTS-ENGINE CPT
OI	FS - INSTR. PANEL RH GRD	9E	INTERIOR LTS-FR SERVICE CPT
OJ	FS - SW CONSOLE LH GRD	9F	INTERIOR LTS-FR SERVICE CPT
OJ	RS - RR ROOF ACCES. GRD	10	INTERIOR LTS-LUGGAGE CPT
OK	BAT. EQUALIZER GRD GRD	10A	INTERIOR LTS-LUGGAGE CPT
OK	RS - RR ROOF ACCES. GRD	10B	INTERIOR LTS-LUGGAGE CPT
OL	RS - ENGINE CPT ACCES. GRD	10D	INTERIOR LTS-LUGGAGE CPT
OL	FS - UNDER DASH RH GRD	10F	INTERIOR LTS-LUGGAGE CPT
OLA	ENTRANCE DOOR (SEDAN) GRD	10H	INTERIOR LTS-LUGGAGE CPT
OM	RS - ENGINE CPT ACCES. GRD	10K	INTERIOR LTS-LUGGAGE CPT
OM	FS - UNDER DASH RH GRD	10R	INTERIOR LTS-LUGGAGE DOOR AJAR
ON	FS - UNDER DASH RH GRD	11	FR DESTINATION SIGN
ON	RS - ENGINE CPT ACCES. GRD	11A	FR DESTINATION SIGN
OP	FS - ALARM JCT BOX GRD	11B	FR DESTINATION SIGN
OP	RS - ENGINE CPT ACCES. GRD	11C	FR DESTINATION SIGN
OR	FS - UNDER DASH LH GRD	11D	FR DESTINATION SIGN
OR	RS - ENGINE CPT ACCES. GRD	11E	FR DESTINATION SIGN
OS	RS - RR JCT BOX GRD	11K	FR DESTINATION SIGN
OSS	SOUNDS SYSTEM BATT. GRD	12	BAT DRAWER 12V BATTERY
OST	RS - START. SUPPRESSOR GRD	12	FR JCT BOX 12V DISC SW
OSA	SOUND SYSTEM BATT. GRD	12A	FR JCT BOX 12V DISC SW
OT	FS - LUG. CPT ACCES. GRD	12A	RR JCT BOX 12V DISC SW

No.	SYSTEM	No.	SYSTEM
12B	FR JCT BOX 12V DISC SW	23B	EXTERIOR LTS-DIRECTIONNAL RH
12BE	BAT. EQUALIZER MONITOR	23C	EXTERIOR LTS-CORNERING RH
12C	12V BAT. EQUALIZER	23N	EXTERIOR LTS-CORNERING RH
12C	FR JCT BOX 12V DISC SW	23P	EXTERIOR LTS-CORNERING RH
12C	RR JCT BOX 12V DISC SW	24	BAT DRAWER 24V BATTERY
12C	RR JCT BOX 12V DISC SW	24	BOOSTER BLOCK 24V DISC SW
12D	FR JCT BOX 12V HOT WIRE	24	ENGINE WALL 24V DISC SW
12D	PWR DRAWER 12V BATTERY	24	FR JCT BOX 24V DISC SW
12E	PWR DRAWER 12V DISC SW	24A	FR JCT BOX 24V DISC SW
12E	FR JCT BOX 12V DISC SW	24A	FR JCT BOX 24V DISC SW
12E	RR JCT BOX 12V DISC SW	24A	FR JCT BOX 24V DISC SW
12E	RR JCT BOX 12V DISC SW	24B	RR JCT BOX 24V DISC SW
12F	FR JCT BOX 12V DISC SW	24B	FR JCT BOX 24V DISC SW
12F	RR JCT BOX 12V DISC SW	24BE	RJB CPT-BAT EQ MONITOR HOT WIRE
12G	RR JCT BOX 12V DISC SW	24C	RR JCT BOX 24V DISC SW
12G	RR JCT BOX 12V DISC SW	24C	FR JCT BOX 24V DISC SW
12I	RR JCT BOX 12V IGNITION	24C	24V BAT. EQUALIZER
12I	FR JCT BOX 12V IGNITION	24C	BAT DRAWER 24V HOT WIRE
12IA	FR JCT BOX 12V IGNITION	24D	FR JCT BOX 24V HOT WIRE
12K	12V BAT. EQUALIZER	24D	RR JCT BOX 24V DISC SW
12K	FR JCT BOX 12V IGNITION	24D	A/C JCT BOX 24V HOT WIRE
12P	FR JCT BOX 12V IGNITION	24D	BAT DRAWER 24V DISC SW
12PV	INVERTER CPT 12V DISC SW	24D	FR JCT BOX 24V DISC SW
12SS	FJB TO BAT 12V HOT WIRE	24E	FR JCT BOX 24V DISC SW
12T	RR JCT BOX 12V DISC SW	24E	RR JCT BOX 24V DISC SW
12T	RR JCT BOX 12V DISC SW	24E	RR JCT BOX 24V DISC SW
12V	RR JCT BOX 12V DISC SW	24E	BAT DRAWER 24V DISC SW
12V2	RR JCT BOX 12V DISC SW	24F	FR JCT BOX 24V DISC SW
12V3	RR JCT BOX 12V DISC SW	24F	FR JCT BOX 24V DISC SW
12VD	FJB TO BAT 12V HOT WIRE	24G	RR JCT BOX 24V DISC SW
12VF	PWR DRAWER 12V FJB & IC	24G	FR JCT BOX 24V DISC SW
12VIR	RR JCT BOX 12V IGNITION	24H	FR JCT BOX 24V DISC SW
12VR	PWR DRAWER 12V TO RJB	24H	RR JCT BOX 24V DISC SW
12W	ENTRANCE DOOR (SEDAN)	24H	STARTER SOL. 24V DISC SW
12WA	ENTRANCE DOOR (SEDAN)	24H	FR JCT BOX 24V IGNITION
12X	FR JCT BOX 12V DISC SW	24I	RR JCT BOX 24V IGNITION
12X1	FR JCT BOX 12V DISC SW	24I	FR JCT BOX 24V IGNITION
12Y	FR JCT BOX 12V DISC SW	24IA	RR JCT BOX 24V IGNITION
13A	ALARM & SIGNAL-LO AIR PRIM.	24IA	FR JCT BOX 24V IGNITION
13B	ALARM & SIGNAL-LO AIR SEC.	24IB	RR JCT BOX 24V IGNITION
14	LAVATORY-FLUSHING PUMP	24IB	FR JCT BOX 24V IGNITION
14A	LAVATORY-FLUSHING PUMP	24IC	RR JCT BOX 24V IGNITION
15	EXTERIOR LTS-MULTI FUNC LEVEL	24IC	FR JCT BOX 24V IGNITION
15A	WIPER & WASHER UPPER WINDSHIELD	24ID	FR JCT BOX 24V IGNITION
16	SPEEDO - SIGN	24IF	FR JCT BOX 24V IGNITION
16S	SPEEDO - TRANSMITTER	24J	FR JCT BOX 24V DISC SW
16T	SPEEDO - TRANSMITTER	24K	FR JCT BOX 24V DISC SW
17	EXTERIOR LTS-FLASHER UNIT	24K	24V BAT. EQUALIZER
17A	EXTERIOR LTS-FLASHER UNIT	24P	FR JCT BOX 24V DISC SW
19	DIFFERENTIAL OIL TEMP	24PS	GALLEY FRIGO 24V HOT WIRE
20	SPEEDO - NEGATIVE SIGN	24PV	INVERTER CPT 24V DISC SW
20T	SPEEDO - NEGATIVE SIGN	24T	RR JCT BOX 24V DISC SW
21	EXTERIOR LTS-DIRECTIONNAL LH	24V	RR JCT BOX 24V DISC SW
21A	EXTERIOR LTS-DIRECTIONNAL LH	24V1	RR JCT BOX 24V DISC SW
21B	EXTERIOR LTS-HAZARD	24V2	RR JCT BOX 24V DISC SW
21C	EXTERIOR LTS-CORNERING LH	24V3	RR JCT BOX 24V DISC SW
21H	EXTERIOR LTS-DIRECTIONNAL LH	24V4	RR JCT BOX 24V DISC SW
21K	EXTERIOR LTS-CORNERING	24VF	BAT DRAWER 24V SW TO FJB & IC
21N	EXTERIOR LTS-CORNERING LH	24VF	INVERTER CPT 24V DISC SW
21P	EXTERIOR LTS-CORNERING LH	24VR	BAT DRAWER 24V DISC SW TO RJB
23	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL
23	EXTERIOR LTS-DIRECTIONNAL RH	25A	NOT GENERATOR-WARNING LT
23A	EXTERIOR LTS-DIRECTIONNAL RH	25B	EXTERIOR LTS-DAYTIME RUN LTS
		26	DRIVER'S WINDOW LIFTER
		26	CIGAR LIGHTER

No.	SYSTEM	No.	SYSTEM
26B	DRIVER'S WINDOW LIFTER	52	ALARM & SIGNAL-ELEC. HORN
26C	DRIVER'S WINDOW LIFTER	52A	ALARM & SIGNAL-ELEC. HORN
27	LAVATORY-EMERGENCY SONALERT	53	ALARM & SIGNAL-ELEC. HORN
28A	A/C & HEAT SYSTEM-HI PRESSURE	53A	WIPER & WASHER SYSTEM
29	A/C & HEAT SYSTEM-DRIVER'S HTR	53B	WIPER & WASHER SYSTEM
29A	A/C & HEAT SYSTEM-DRIVER'S HTR	53C	WIPER & WASHER SYSTEM
29B	A/C & HEAT SYSTEM-DRIVER'S HTR	53E	WIPER & WASHER SYSTEM
30A	GALLEY	53J	WIPER & WASHER SYSTEM
31A	A/C & HEAT SYSTEM-UNLOADER	55	EXTERIOR LTS-HI BEAM
31B	A/C & HEAT SYSTEM-UNLOADER	57	EXTERIOR LTS-HI BEAM
31B	WIPER & WASHER SYSTEM	57A	EXTERIOR LTS-HI BEAM
31C	WIPER & WASHER SYSTEM	57A	A/C & HEAT SYSTEM-WATER PUMP
31D	WIPER & WASHER SYSTEM	57B	A/C & HEAT SYSTEM-WATER PUMP
31E	WIPER & WASHER SYSTEM	57C	PRE-HEAT WATER HEATER
31J	WIPER & WASHER SYSTEM	58	EXTERIOR LTS-LO BEAM
31X	WIPER & WASHER SYSTEM	58A	EXTERIOR LTS-LO BEAM
32	EXTERIOR LTS-BACK-UP	58B	EXTERIOR LTS-LO BEAM
32B	EXTERIOR LTS-BACK-UP	58E	EXTERIOR LTS-LO BEAM
32C	BACK-UP PWR & SIGNAL	59A	JACOB BRAKE SYSTEM
32D	BACK-UP ALARM	61	EXTERIOR LTS-24V FEED SW
32E	BACK-UP ALARM	61A	EXTERIOR LTS-HEAD SIGNAL
32F	BACK-UP MONITOR	62	LAVATORY-OCCUPIED LT
35	ENTRANCE DOOR (SEDAN)	62A	LAVATORY-FLUOR LT
35B	ENTRANCE DOOR (SEDAN)	62B	LAVATORY-FLUOR LT
35BB	ENTRANCE DOOR (SEDAN)	62E	LAVATORY-OCCUP & FLUOR LT
35D	ENTRANCE DOOR (SEDAN)	63	EXTERIOR LTS-CLEARANCE
36	JACOB BRAKE SYSREM	63A	EXTERIOR LTS-CLEARANCE
36A	JACOB BRAKE SYSREM	63B	EXTERIOR LTS-CLEARANCE
38	INTERIOR LTS-24V FLUORESCENT	63C	EXTERIOR LTS-MARKER SIGNAL
38A	INTERIOR LTS-24V FLUORESCENT	63D	EXTERIOR LTS-MARKER & TAIL
38C	INTERIOR LTS-24V FLUORESCENT	63E	EXTERIOR LTS-CLEARANCE
38D	INTERIOR LTS-24V FLUORESCENT	63F	EXTERIOR LTS-MARKER BLINKER
39	INTERIOR LTS-24V LH CONSOLE SW	63H	EXTERIOR LTS-TAIL
39A	INTERIOR LTS-DRIVER'S LTS	67	A/C & HEAT SYSTEM
41	A/C & HEAT SYSTEM-COND FAN MOT	67A	A/C & HEAT SYSTEM
41A	A/C & HEAT SYSTEM-COND FAN MOT	67B	A/C & HEAT SYSTEM
41B	A/C & HEAT SYSTEM-COND FAN MOT	67C	A/C & HEAT SYSTEM & HEAT WINDS.
42	A/C & HEAT SYSTEM-COND FAN MOT	67K	A/C & HEAT SYSTEM-COND FAN CTR
42A	A/C & HEAT SYSTEM-COND FAN MOT	67L	A/C & HEAT SYSTEM-COND FAN CTR
44	EXTERIOR LTS-FOG	67V	A/C & HEAT SYSTEM-WATER VALVE
44A	EXTERIOR LTS-FOG	68	DDEC-COOLANT LEVEL PROBE
44B	EXTERIOR LTS-FOG	70	INTERIOR LTS-HAT RACK & RR RUN.
44C	EXTERIOR LTS-FOG & HAZARD	72	SUN VISOR-FEEDING
45B	A/C & HEAT SYSTEM-HEAT 3 SIGN	72A	SUN VISOR-RH
45D	A/C & HEAT SYSTEM-WATER VALVE	72B	SUN VISOR-RH
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN	72C	SUN VISOR-LH
45G	A/C & HEAT SYSTEM-DRIVER'S HTR	72D	SUN VISOR-LH
45H	A/C & HEAT SYSTEM-DRIVER'S HTR	73	LAVATORY-FEEDING
45W	A/C & HEAT SYSTEM-DRIVER'S HTR	74	INTERIOR LTS-READING RH
46	EXTERIOR LTS-MARKER	74A	INTERIOR LTS-READING RH
46A	EXTERIOR LTS-MARKER	74D	INTERIOR LTS-READING SIGNAL
46B	EXTERIOR LTS-MARKER	75	INTERIOR LTS-READING LH
46B	EXTERIOR LTS-MARKER	75A	INTERIOR LTS-READING LH
46C	EXTERIOR LTS-MARKER	76	FUEL TANK GAUGE
47	A/C & HEAT SYSTEM-DRIVER'S HTR	76B	LOW FUEL LT & ETHER COLD START
48	ENTRANCE DOOR (SEDAN)	76C	LOW FUEL LT
49	ENTRANCE DOOR (SEDAN)	77	A/C & HEAT SYSTEM-HI PRESSURE
50	AIR DRYER	77A	A/C & HEAT SYSTEM-DRIVER'S HTR
		77B	A/C & HEAT SYSTEM-COMPRESSOR

No.	SYSTEM	No.	SYSTEM
77C	A/C & HEAT SYSTEM-COMPRESSOR	112	ATEC TRANSM-SPEED SENSOR
77H	A/C & HEAT SYSTEM-COMPRESSOR	113	ATEC TRANSM-SPEED SENSOR
81	EXTERIOR LTS-STOP SW	113	ALARM & SIGNAL-OIL PRESS
81A	EXTERIOR LTS-STOP & ABS	114	ATEC TRANSM-TO ECU
82	EXTERIOR LTS-STOP SIGNAL	114	INTERIOR LTS-DASH LT REGUL.
82A	EXTERIOR LTS-STOP SIGNAL	114A	INTERIOR LTS-DASH LT
82B	EXTERIOR LTS-STOP LTS	114B	INTERIOR LTS-DASH LT REGUL.
82C	EXTERIOR LTS-STOP & ABS	114D	INTERIOR LTS-DASH LT REGUL.
82D	EXTERIOR LTS-STOP SW	114E	INTERIOR LTS-DASH LT REGUL.
82E	EXTERIOR LTS-STOP & ABS	115	ATEC TRANSM-TO ECU
82H	EXTERIOR LTS-STOP LTS	115	DDEC-COOLANT LEVEL MODULE
82J	EXTERIOR LTS-STOP LTS	116	ATEC TRANSM-TO ECU
82K	EXTERIOR LTS-STOP PARK BRK	116B	A/C & HEAT SYSTEM-DRIVER'S HTR
82W	EXTERIOR LTS-STOP & ABS	117	ATEC TRANSM-TO ECU
83	ENGINE CTR-KEY SW ACCES SIGN	117A	ALARM & SIGNAL-TRANSM OIL TEMP
84	ENGINE CTR-KEY SW START SIGN	118	ATEC TRANSM-TO ECU
85	ENGINE CTR-KEY SW IGNITION SIGN	119	ATEC TRANSM-TO ECU
85	24V IGNITION SIGNAL	120	ATEC TRANSM-TO ECU
85A	24V IGN DASH INSTRUMENTATION	121	ATEC TRANSM-TO ECU
85B	ENGINE CTR-24V IGNITION	122	ATEC TRANSM-TO ECU
85C	PARKING BRAKE SWITCH	122	A/C & HEAT SYSTEM-DRIVER'S HTR
85F	LO AIR SONALERT	122	A/C & HEAT SYSTEM-FRESH AIR
85W	24V IGN ANTI SKID	122A	A/C & HEAT SYSTEM-FRESH AIR
85X	24V IGN ANTI SKID	123	ATEC TRANSM-TO ECU
85Y	ANTI SKID-WARNING LT	123A	ALARM & SIGNAL-FIRE DETECTOR
86	ENGINE CTR-STARTER SOL SIGN	123B	ALARM & SIGNAL-FIRE DETECTOR
86A	ENGINE CTR-STARTER SOL SIGN	124	ATEC DDEC INTERFACE
88	ENGINE CTR-RR START SIGNAL	125	LAVATORY-FAN
89	ENGINE CTR-RR START SIGNAL	125	GALLEY-LAMP
90A	A/C & HEAT SYSTEM-COND FAN MOT	126	KNEELING SYSTEM
90B	A/C & HEAT SYSTEM-COND FAN MOT	126A	KNEELING SYSTEM
90B	ENGINE CTR-MAST KEY SW FEED	126B	KNEELING SYSTEM
90C	A/C & HEAT SYSTEM-COND FAN MOT	126C	KNEELING SYSTEM
90D	A/C & HEAT SYSTEM-EVAP FAN MOT	126D	KNEELING SYSTEM
90F	CHARG SYST-VOLTAGE REGUL. "B"	126F	KNEELING SYSTEM
90G	A/C & HEAT SYSTEM-COND FAN MOT	126G	KNEELING SYSTEM
90H	A/C & HEAT SYSTEM-EVAP FAN MOT	126K	KNEELING SYSTEM
90J	A/C & HEAT SYSTEM-COND FAN MOT	126R	KNEELING SYSTEM
91	PARKING BRAKE SW SIGNAL	126T	KNEELING SYSTEM
91A	DDEC-FAST IDLE SIGNAL	127	PRE-HEAT WATER HEATER
92	BATTERY EQUALIZER-CHECK BALANCE	127A	PRE-HEAT WATER HEATER
93	BATTERY EQUALIZER-CHECK LO/HI	127W	PRE-HEAT WATER HEATER
95A	JACOB BRAKE SYSTEM	128	PRE-HEAT WATER HEATER
97	TACHOMETER-NOT USE	128A	PRE-HEAT WATER HEATER
100	INTERIOR LTS-GENERAL	128B	PRE-HEAT WATER HEATER
100A	INTERIOR LTS-GENERAL	128W	PRE-HEAT WATER HEATER
100B	INTERIOR LTS-GENERAL	129	PRE-HEAT WATER HEATER
101	ATEC TRANSM-TO ECU	133	GALLEY-HEAT CONTAINERS
103	LOW BUOY	133A	GALLEY-HEAT CONTAINERS
104	ATEC DDEC INTERFACE	133B	GALLEY-HEAT CONTAINERS
105	ATEC TRANSM-TO ECU	133C	GALLEY-HEAT CONTAINERS
106A	ATEC DDEC INTERFACE	134	GALLEY-HEAT CONTAINERS
107	ATEC TRANSM-TO ECU	134A	GALLEY-HEAT CONTAINERS
107	CHARG SYST-VOLTAGE REGUL. "F"	135	A/C & HEAT SYSTEM-AIR SENSOR
108	ATEC TRANSM-TO ECU	135A	A/C & HEAT SYSTEM-AIR SENSOR
109	ATEC TRANSM-TO ECU	135C	A/C & HEAT SYSTEM-AIR SENSOR
110	ATEC TRANSM-TO ECU	135D	A/C & HEAT SYSTEM-AIR SENSOR
110	ALARM & SIGNAL-WATER TEMP	136	GALLEY-ACCESSORIES
111	ATEC TRANSM-TO ECU	137	RR VIEW MIRROR (SPARTAN)

No.	SYSTEM	No.	SYSTEM
137A	RR VIEW MIRROR (SPARTAN)	175B	BACK-UP MONITOR
137B	RR VIEW MIRROR (SPARTAN)	175C	BACK-UP MONITOR
137C	RR VIEW MIRROR (SPARTAN)	180	DRIVER'S SEAT HEATER
137D	RR VIEW MIRROR (SPARTAN)	180	DIGITAL THERMOMETER
137E	RR VIEW MIRROR (SPARTAN)	180A	DRIVER'S SEAT HEATER
137F	RR VIEW MIRROR (SPARTAN)	181	DIGITAL THERMOMETER
137G	RR VIEW MIRROR (SPARTAN)	182	TWIN PYROMETER
138	ABS SYSTEM	182A	TWIN PYROMETER
138A	ABS SYSTEM	183	TWIN PYROMETER
139	ABS SYSTEM	183A	TWIN PYROMETER
140	ABS SYSTEM	197	FUEL WATER FILTER
141	ABS SYSTEM	197A	FUEL WATER FILTER
142	ABS SYSTEM	197B	FUEL WATER FILTER
143	ABS SYSTEM	201	ATEC TRANSM-CHASSIS GRD
143A	ABS SYSTEM	202	12V HOT WIRE
144	ABS SYSTEM	203	ATEC TRANSM-MEMORY
144A	ABS SYSTEM	204	ATEC TRANSM-TO SHIFTER
145	ABS SYSTEM	205	ATEC TRANSM-SPEED SIGNAL
146	ABS SYSTEM	206	ATEC TRANSM-TO SHIFTER
147	ABS SYSTEM	207	ATEC TRANSM-TO DDL DATA
147	ETHER COLD START	208	ATEC TRANSM-BATT GRD
147C	ETHER COLD START	209	ATEC TRANSM-BATT GRD
148	ABS SYSTEM	210	ATEC TRANSM-TO DDL GRD
149	ABS SYSTEM	211	ATEC TRANSM-RETARDER
149A	ABS SYSTEM	211A	ATEC TRANSM-RETARDER
150	DDEC ECM BATTERY GRD	211B	ATEC RET. & DDEC CRUISE-24V IGN
150A	DDEC ECM BATTERY GRD	211C	ATEC RET. & DDEC CRUISE-24V IGN
151	ABS SYSTEM	212	ATEC TRANSM-TO SHIFTER
151A	ABS SYSTEM	213	ATEC RETARDER SIGNAL GRD
152	ABS SYSTEM	214	ATEC OR SW-BACK UP SIGNAL GRD
152A	ABS SYSTEM	215	ATEC WARNING SIGNAL GRD
153	ABS SYSTEM	215A	ATEC CHECK TRANSM T.T.LT.
154	ABS SYSTEM	216	ATEC TRANSM-TO DDL TEST
156	ABS SYSTEM	218	ATEC TRANSM-TO SHIFTER
156A	ABS SYSTEM	219	ATEC TRANSM-TO SHIFTER
157	ABS SYSTEM	220	ATEC TRANSM-TO SHIFTER
157A	ABS SYSTEM	221	ATEC TRANSM-TO SHIFTER
157B	ABS SYSTEM	222	ATEC DDEC-THROTTLE INTERFACE
160	ALARM & SIGNAL-TAG PRESS SW	231	ATEC OR SW-NEUTRAL SIGNAL GRD
161	ATEC TRANSM-RETARDER	235	ATEC TRANSM-24V IGNITION
161A	ATEC TRANSM-RETARDER	240	DDEC-ECM 12V FEEDING
161B	ATEC TRANSM-RETARDER	241	DDEC-ECM 12V FEEDING
165	A/C & HEAT SYSTEM-TRANSMITER	250	VIDEO SYSTEM & TV RECEIVER
165A	A/C & HEAT SYSTEM-TRANSMITER	251	VIDEO SYSTEM & TV RECEIVER
165B	A/C & HEAT SYSTEM-TRANSMITER	252	VIDEO SYSTEM & TV RECEIVER
165C	A/C & HEAT SYSTEM-TRANSMITER	253	GALLEY-MICROWAVE
165D	A/C & HEAT SYSTEM-TRANSMITER	254	GALLEY-12V FRIGO NORCOLD
166B	A/C & HEAT SYSTEM-EVAP. MOD.	254A	GALLEY-FRIGO
167	A/C & HEAT SYSTEM-TEMP. CTR	255	GALLEY-COFFEEMAKER
167A	A/C & HEAT SYSTEM-TEMP. CTR	255A	GALLEY-COFFEEMAKER
168	A/C & HEAT SYSTEM-HUMIDISTAT	257	WINDSHIELD HEATED
168A	A/C & HEAT SYSTEM-HUMIDISTAT	257A	WINDSHIELD HEATED
170	LUGGAGE DOOR LOCK	257B	WINDSHIELD HEATED
170C	LUGGAGE DOOR LOCK	258	WINDSHIELD HEATED
170E	LUGGAGE DOOR LOCK	258A	WINDSHIELD HEATED
170H	LUGGAGE DOOR LOCK	259	WINDSHIELD HEATED
173	BACK-UP MONITOR	259A	WINDSHIELD HEATED
175	BACK-UP MONITOR	290	FAN CLUTCH
175A	BACK-UP MONITOR	291	FAN CLUTCH

No.	SYSTEM	No.	SYSTEM
292	FAN CLUTCH	L1	VIDEO SYSTEM-110V INVERTER
417	DDEC-PEDAL LIMIT. SPEED	L1A	INTERIOR LTS-110V FLUORESCENT
419	DDEC-CHECK ENG T.T.LT.	L1B	INTERIOR LTS-110V FLUORESCENT
439	DDEC-12V IGNITION	L2	INTERIOR LTS-110V FLUORESCENT
451	DDEC-DDL	L2A	INTERIOR LTS-110V FLUORESCENT
505	DDEC-TACHO DRIVE SIGNAL	L2B	INTERIOR LTS-110V FLUORESCENT
508	DDEC-JACOB SIGNAL GRD	L3A	GALLEY-110V FRIGO
508A	DDEC-JACOB SIGNAL GRD CLUTCH	L4	GALLEY-110V FRIGO
509	DDEC-STOP ENG T.T.LT.	LL0	110V RECEPTACLE
510	DDEC-FAST IDLE SIGNAL	LL1	110V RECEPTACLE
523	DDEC-SPEED GOVERNOR SIGN POS	LL2	110V RECEPTACLE
524	DDEC-ACCEL.ENABL SIGN GRD	LL3	GALLEY-110V FRIGO
525	DDEC-FAST IDLE SIGNAL	L7	GALLEY-110V MICROWAVE OVEN
528	DDEC-STOP ENG OVERRIDE	L8	ENG. BLK & WATER TANK-HEATER
531	DDEC-CRUISE CUT OUT	L9	ENG. BLK & WATER TANK-HEATER
538	DDEC-CRUISE MAINE	N1	VIDEO SYSTEM-110V INVERTER
538A	DDEC-CRUISE CANCEL SIGN	N7	GALLEY-110V MICROWAVE OVEN
538B	DDEC-CRUISE CANCEL SIGN	M1	SOUND SYSTEM-RADIO
541	DDEC-CRUISE SET SW	M2	SOUND SYSTEM-RADIO
542	DDEC-CRUISE SET SW	M3	SOUND SYSTEM-RADIO
543	DDEC-CRUISE CUT IN	M4	SOUND SYSTEM-SPEAKER CTR SW
544	DDEC-CRUISE RESUME SW	M5	SOUND SYSTEM-SPEAKER CTR SW
545	DDEC-CRUISE RESUME SW	M6	SOUND SYSTEM-RADIO
555	DDEC-CRUISE ANABLE T.T.LT.	M7	SOUND SYSTEM-RADIO
556	DDEC-SPEED SIGNAL POS	M8	SOUND SYSTEM-RADIO
557	DDEC-SPEED SIGNAL NEG	M9	SOUND SYSTEM-RADIO
900	DDEC-DDL SERIAL DATA LINK POS	M10	SOUND SYSTEM-MICRO OUTLET
901	DDEC-DDL SERIAL DATA LINK NEG	M11	SOUND SYSTEM-MICRO OUTLET
902	DDEC-DDL CRANK POSITION SIGNAL	M12	SOUND SYSTEM-MICRO OUTLET
903	DDEC-CRUISE SPEED SIGNAL	M13	SOUND SYSTEM-P.A. VOLUME
908	ATEC DDEC-THROTTLE INTERFACE	M14	SOUND SYSTEM-P.A. VOLUME
908A	DDEC-HYD. MODULATOR SOL. VALVE	M15	SOUND SYSTEM-P.A. VOLUME
908W	DDEC-HYD. MODULATOR SOL. VALVE	M20	SOUND SYSTEM-RADIO
916	DDEC-PEDAL SENSOR SUPPLY 5V	M21	SOUND SYSTEM-RADIO
952	DDEC-PEDAL SENSOR RETURN	M23	SOUND SYSTEM-RADIO
953	DDEC-SPEED GOVERNOR BATT GRD	M24	SOUND SYSTEM-RADIO
972	DDEC-TACHOMETER #2	M25	SOUND SYSTEM-RADIO
B00	RR JCT BOX CPT BATT GRD	RA	INTERIOR LTS-110V FLUORESCENT
B000	RR JCT BOX CPT BATT GRD	RB	INTERIOR LTS-110V FLUORESCENT
BA	INTERIOR LTS-110V FLUORESCENT	YC	INTERIOR LTS-110V FLUORESCENT
BB	INTERIOR LTS-110V FLUORESCENT	YD	INTERIOR LTS-110V FLUORESCENT
D1	SOUND SYSTEM-FR RH SPEAKER	WC	A/C & HEAT SYSTEM-EVAP CTR SIGN
D2	SOUND SYSTEM-FR RH SPEAKER	SH	VIDEO & TV RECEIVER-SHIELD GRD
D3	SOUND SYSTEM-FR RH SPEAKER	SH	SOUND SYSTEM-SHIELD GRD
D4	SOUND SYSTEM-RR RH SPEAKER	SH2	SPEEDOMETER-SHIELD GRD
D5	SOUND SYSTEM-RR RH SPEAKER	SH4	SPEEDOMETER-SHIELD GRD
D6	SOUND SYSTEM-RR RH SPEAKER	SP2	SPARE-FJB TO FR SERV CPT
D9	SOUND SYSTEM-DRIVER SPEAKER	SP3	SPARE-FJB TO CENTER DASH
D10	SOUND SYSTEM-DRIVER SPEAKER	SP4	SPARE-FJB TO CENTER DASH
G1	SOUND SYSTEM-FR LH SPEAKER	SP5	SPARE-RJB TO LUGG CPT #2
G2	SOUND SYSTEM-FR LH SPEAKER	SP6	SPARE-RJB TO LUGG CPT #1
G3	SOUND SYSTEM-FR LH SPEAKER	SP7	SPARE-RJB TO LUGG CPT #1
G4	SOUND SYSTEM-RR LH SPEAKER	SP8	SPARE-RJB TO LUGG CPT #1
G5	SOUND SYSTEM-RR LH SPEAKER	SP9	SPARE-RJB TO LUGG CPT #2
G6	SOUND SYSTEM-RR LH SPEAKER	SP10	SPARE-RJB TO LUGG CPT #1
G9	SOUND SYSTEM-DRIVER SPEAKER	SP11	SPARE-RJB TO ENGINE
G10	SOUND SYSTEM-DRIVER SPEAKER	SP12	SPARE-RJB TO ENGINE
LO	RS - ENGINE ACCES GRD.	SP13	SPARE-RJB TO ENGINE
LOA	RS - LAVATORY ACCES GRD.	SP14	SPARE-RJB TO ENGINE

No.	SYSTEM	No.	SYSTEM
SP15	SPARE-RJB TO ENGINE	SP94	SPARE-RJB TO RR ROOF
SP16	SPARE-RJB TO ENGINE	SP95	SPARE-RJB TO RR ROOF
SP17	SPARE-RJB TO ENGINE	SP96	SPARE-RJB TO LUGG CPT #2
SP18	SPARE-RJB TO ENGINE	SP97	SPARE-RJB TO LUGG CPT #3
SP20	SPARE-RJB TO ENGINE ECM	SP98	SPARE-RJB TO LUGG CPT #3
SP21	SPARE-RJB TO ENGINE ECM	SP99	SPARE-RJB TO LUGG CPT #3
SP23	SPARE-RJB TO ENGINE ECM	SP104	SPARE-RJB TO ENGINE CPT
SP24	SPARE-RJB TO LH HAT RACK	SP141	SPARE-RJB TO LH CONSOLE
SP25	SPARE-RJB TO LH HAT RACK		
SP26	SPARE-RJB TO LH HAT RACK		
SP27	SPARE-RJB TO LH HAT RACK		
SP28	SPARE-RJB TO LH HAT RACK		
SP31	SPARE-RJB TO RH HAT RACK		
SP32	SPARE-RJB TO RH HAT RACK		
SP33	SPARE-FJB TO RJB		
SP36	SPARE-RJB TO LH SW PANEL		
SP37	SPARE-ALARM JCT BOX		
SP38	SPARE-ALARM JCT BOX TO RJB		
SP39	SPARE-ALARM JCT BOX TO FJB		
SP40	SPARE-ALARM JCT BOX TO FJB		
SP43	SPARE-FJB TO RJB		
SP45	SPARE-FJB TO RJB		
SP46	SPARE-RJB TO LH FR ROOF		
SP47	SPARE-FR JCT BOX		
SP48	SPARE-RJB TO RH FR ROOF		
SP49	SPARE-FJB TO RJB		
SP52	SPARE-RJB TO ENGINE ECM		
SP54	SPARE-FJB TO CENTER DASH		
SP55	SPARE-RJB TO ATEC SHIFTER		
SP56	SPARE-FJB TO RH SW PANEL		
SP57	SPARE-FJB TO ENGINE		
SP58	SPARE-FJB TO ENGINE		
SP59	SPARE-FJB TO ENGINE		
SP61	SPARE-FJB TO RH CONSOLE		
SP64	SPARE-RJB TO ATEC SHIFTER		
SP65	SPARE-RJB TO ATEC SHIFTER		
SP68	SPARE-FJB TO ENGINE ECM		
SP69	SPARE-FJB TO FR AXLE		
SP70	SPARE-FJB TO FR AXLE		
SP71	SPARE-FJB TO RH SW PANEL		
SP72	SPARE-FJB TO FR SERV CPT		
SP74	SPARE-FJB TO LH CONSOLE		
SP77	SPARE-FJB TO A/C JB CPT		
SP78	SPARE-FJB TO A/C JCT BOX		
SP79	SPARE-FJB TO A/C JCT BOX		
SP80	SPARE-TO A/C JCT BOX CPT		
SP81	SPARE-FJB TO LH CONSOLE		
SP82	SPARE-FJB TO LH CONSOLE		
SP83	SPARE-FJB TO RH CONSOLE		
SP84	SPARE-FJB TO RH CONSOLE		
SP85	SPARE-FJB TO LH CONS & SW PAN		
SP86	SPARE-FJB TO LH CONS & SW PAN		
SP87	SPARE-RJB TO LH HAT RACK		
SP88	SPARE-RJB TO RH HAT RACK		
SP89	SPARE-FJB TO LH CONS & SW PAN		
SP90	SPARE-FJB TO LH CONS & SW PAN		
SP91	SPARE-FJB TO LH CONS & SW PAN		
SP92	SPARE-RJB TO A/C JCT BOX		
SP93	SPARE-RJB TO EVAPORATOR CPT		

No.	SYSTEM	No.	SYSTEM
-----	--------	-----	--------