

1

2

3

4

5

Front GND stud

Brigade Interface Connector

A

REFER TO P2.2(STD)
FOR ALL DETAILS

B

REFER TO P28.1(STD)
FOR ALL DETAILS

C

D

REFER TO P37.2(STD)
FOR ALL DETAILS

E

 

A

B


C

D

E

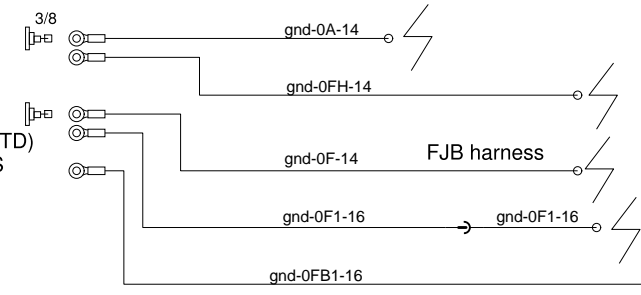


Back-up camera

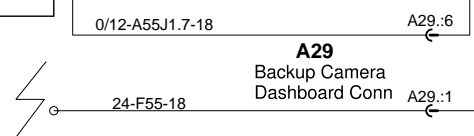


A29

Backup Camera
Dashboard Conn

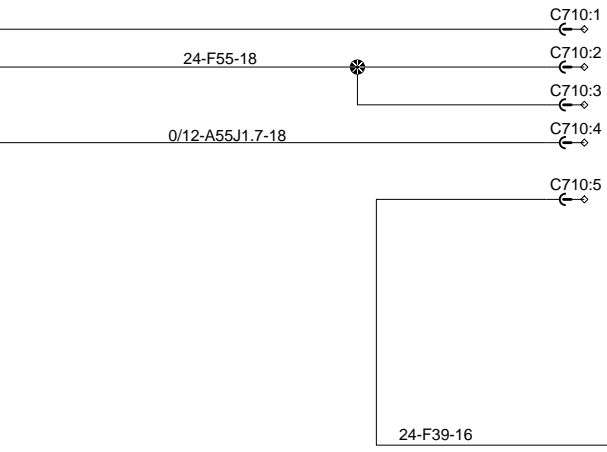


Terminals strip 5 pos. #10

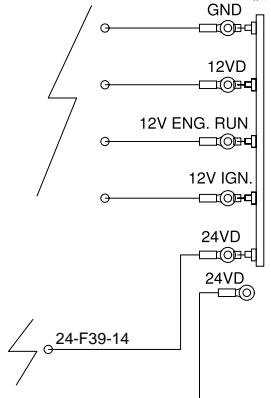


FJB
REFER TO P4.1(STD)
FOR ALL DETAILS

 AE46




Cornering Lights

 AE48



REFER TO P26.5(STD)
FOR ALL DETAILS

12-A48J1.4-18

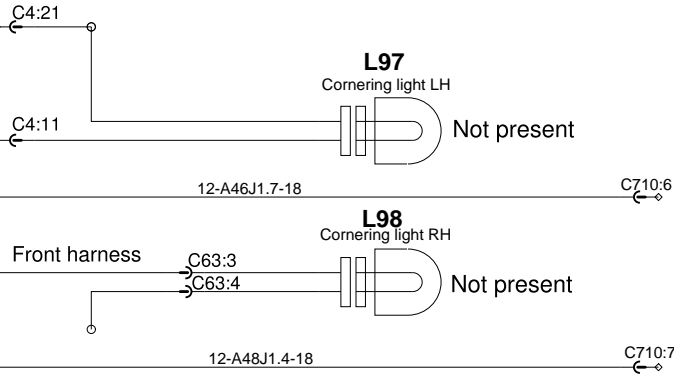

L97

Cornering light LH

Not present

L98

Cornering light RH

Not present

ZF Steering control

A27

Steering Ctrl Unit



1

2

3

4

5