

MULTIPLEX INPUT LIST

Module.Pin#	Signal name	Ignition Key switch	Page	Connected devices
.	I_A41_NormalMode			
.	I_A43_NormalMode			
.	I_A44_NormalMode			
.	I_A55_NormalMode			
.	I_A56NormalMode			
A36.JB:1	I_StartEna2		3.2	
A36.JB:13	I_BrakePedSec		12.1	
A36.JB:14	I_WebFireComp			
A36.JB:2	I_IgnKeySw	Ignition Key switch	3.2	
A36.JB:21	I_FireExt2ndAlm		38.1	
A36.JB:22	I_FrEngStaSw	Front Engine Start Switch	3.2	
A36.JB:23	I_FireExt1stAl		38.1	
A36.JB:4	I_HazardSw	Hazard Switch	26.1	
A36.JB:5	I_FireSensorA36	Fire Sensor On A36	38.1	
A36.JB:6	I_AccKeySw	Accessories Key switch	3.2	
A36.JB:9	I_ParkBrSe	Paking Brake Sensor	12.1	
A41.J2:11	I_FrSrvCptOpenSe			
A41.J2:4	I_LuggDrOpenSe	Luggages doors open sensor		
A42.J1:5	I_KneeSw			
A42.J2:1	I_KneeLevelSe			
A43.J2:5	I_LuggDrLkSe			
A44.J2:5	I_SunVisorDrv	sun visor drv sw		
A44.J2:6	I_SunVisorPass	sun visor pass sw		
A45.J1:21	I_CadecEngShtDw	Cadec Engine ShutDown		
A45.J2:5	I_CadecCrankDis	Cadec Crank Disable		
A46.J1:20	I_LHFfshSw	Left Hand Flasher Switch		
A46.J1:24	I_BatMonMod46			
A47.J1:20	I_LowWiperCam	Low wiper Cam		
A47.J1:21	I_EntDorClSe	Entrance Door Close Sensor		
A47.J1:24	I_BatMonMod47			
A47.J2:5	I_EntDorOpSw2			
A47.J2:8	I_EntDorClOutSw	Entrance Door Close Outside Switch		
A47.J2:9	I_EntDorOpSe	Entrance Door Open Sensor		
A48.J1:24	I_BatMonMod48			
A48.J2:5	I_RHFfshSw	Right Hand Flasher Switch		
A49.J1:20	I_AltSeLR			
A49.J1:24	I_BatMonMod49			
A49.J2:8	I_RJBLtSw	Rear Junction Light Switch		
A50.J1:20	I_RetdrSig	Retarder Signal		
A51.J1:20	I_LHFfshSwRrSig	LH FlasherSwitch Rear Signal		
A51.J1:21	I_BrakePedPri			
A51.J2:5	I_RHFfshSwRrSig	RH FlasherSwitch Rear Signal		
A52.J1:20	I_StartEna1			

MULTIPLEX INPUT LIST

Module.Pin#	Signal name	Ignition Key switch	Page	Connected devices
A52.J1:24	I_BatMonMod52			
A52.J2:5	I_EngStaRrSw	Engine Start Rear Switch		
A52.J2:6	I_EngDoorSe	Engine Door Sensor		
A52.J2:8	I_AltSeUR			
A52.J2:9	I_AltSeLL			
A53.J1:20	I_LavFlshSw	Lavatory Flushing Switch		
A53.J1:21	I_LavEmrgSw	Lavatory Emergency Switch		
A53.J1:24	I_BatMonMod53			
A53.J2:5	I_LavDorLockSe			
A54.J1:20	I_AcDorOpSe	Condensor Door Open Switch		
A54.J1:24	I_BatMonMod54			
A54.J2:8	I_AcPresHiSse	Ac Pressure High Side Sensor		
A54.J2:9	I_AcPresLoSse	Ac Pressure Low Side Sensor		
A55.J2:1	I_DrvLtSw	Driver Light Switch		
A55.J2:10	I_LwWipIntSw	Lower Wiper Intermitant Switch		
A55.J2:11	I_LwWshSw	Lower Wiper Washer Switch		
A55.J2:12	I_UpWipSw	Upper Wiper Switch		
A55.J2:13	I_UpWshSw	Upper Washer Wiper Switch		
A55.J2:3	I_InDirLtsSw	Passenger Indirect lightning Switch		
A55.J2:4	I_ReadLtsSw	Passenger Reading lights Switch		
A55.J2:5	I_ReadDockSw			
A55.J2:6	I_RetarderSel	Retarder Selected		
A55.J2:7	I_WclSw	Wheel Chair Lift Dash Switch		
A55.J2:8	I_UpperDefFanSw	Upper Defrost Dash Switch		
A55.J2:9	I_P RackFanSw	Parcel Rack Fan Switch		
A56.J1:17	I_HdLtPos1Sw	Head Light Switch Position Markers		
A56.J1:2	I_HeadLmpWshSw			
A56.J1:20	I_HiBeamCallSw	Hi/Low Beam Switch		
A56.J1:21	I_HdLtHiLowBmSw	Head Lights High and Low Beam Switch		
A56.J2:1	I_WdoOpenSe	Passenger Window Open Sensor		
A56.J2:10	I_DockingLtSw	Docking Lights Switch		
A56.J2:12	I_LHFlshSwLHom			
A56.J2:13	I_RHFlshSwLHom			
A56.J2:2	I_UpWipIntSw	Upper Wiper Intermitant Switch		
A56.J2:3	I_IntDorOpSw	Entrance Door Open Switch		
A56.J2:4	I_EntDorClnSw	Entrance Door Close Inside Switch		
A56.J2:5	I_FogLightSw	Fog Lights Switch		
A56.J2:6	I_CorneringLtSw	Cornering Light Switch		
A56.J2:7	I_HornSw	Horn Switch		
A56.J2:8	I_LuggDoorSw	Luggage Door Switch		
A56.J2:9	I_WdowDrvSw			
A57.J1:17	I_WCLLoDorSe	Wheel Chair Lift Lower Door Sensor		
A57.J1:2	I_WCLDoorLtch	WCL Door firts latch detection door open		

