

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	GNDBatteries	0RAD	GNDChassis	901	Networks
0A	12Voutlets	0RAD2	Fansdriveelectric	_00	GNDBatteries
00A	Entrancedoor	0RB6	Lav_smoke_detector	A1.11	TransmissionAlisson
00A1	Multiplexpower	0RGA	Rear_Galley	A1.12	TransmissionAlisson
00A2	Cust_Adaptations	0RGA2	Rear_Galley	A1.15	TransmissionAlisson
0AItL	GNDChassis	0SS	VSS_GND	A1.16	TransmissionAlisson
0AItLL	GNDChassis	0SS1	VSS	A1.18	TransmissionAlisson
0AItR	GNDChassis	0SS2	VSS	A1.19	TransmissionAlisson
0AItUL	GNDChassis	0SS2W	WiFi_Option	A1.24	TransmissionAlisson
0B	GNDChassis	0SS3	VSS	A1.25	TransmissionAlisson
0C	Ignition&enginestart	0SS5	Wifi_Chassis_Gnd	A1.31	TransmissionAlisson
0chgr	Preheat	0SW	Indirectlights	A1.33	TransmissionAlisson
0COND	CondensorfansGND	0SW1	Indirectlights	A1.36	TransmissionAlisson
0ECU	EngineECUVolvo	0TR.White	VECT	A1.37	TransmissionAlisson
0EV2	HVACpassengers	00VA	RJBelectronicGND	A1.51	TransmissionAlisson
0EVAP1	HVACpassengers	0W	WCLGND	A1.52	TransmissionAlisson
0EVAP2	HVACpassengers	0WC	GndWCLRemoteCTRL	A1.54	TransmissionAlisson
0F	GNDCustomer	12Ecu	12VECU	A1.55	TransmissionAlisson
00F	ELDITSGateway	12ISH	PwrI_Shift	A1.58	TransmissionAlisson
0F1	UpperwipersGND	12MEM	Mobile_DVR	A1.71	TransmissionAlisson
00F1	Multiplexpower	12SS2	Mobile_DVR	A1.74	TransmissionAlisson
00F2	Multiplexpower	12VA	Batteries	A1.76	TransmissionAlisson
00F6	Lightsswitch	12VD	Batteries	A1.77	TransmissionAlisson
0FB1	UpperwipersGND	12VD1	12VD	A2A.9	TransmissionAlisson
0FD	InvertersGND	12VD4	Unican_power_option	A2A.11	TransmissionAlisson
0FE	GNDstud	12Wup1	WiFi_Option	A3.1	TransmissionAlisson
0FH	Wipers&washer	24VA	Batteries	A3.2	TransmissionAlisson
00FH	FJBelectronicGND	24VD	Batteries	A3.3	TransmissionAlisson
00FH1	HVACdefroster	24VD1	Booster_Block	A3.5	TransmissionAlisson
00FH2	Multiplexpower	24VD2	Equalizer	A3.6	TransmissionAlisson
00FR	FJB-RJBjunction	24VD3	Ignition&enginestart	A3.7	TransmissionAlisson
0P	120VACoutlets	24VI	24WUP	A4B.8	TransmissionAlisson
0PA1	GNDstud	120V_In	120VAC_Outlets	A5.B	TransmissionAlisson
0PA2	GNDstud	120V_Out	120VAC_Outlets	A9CX1.2	Cluster
0PR	120VACoutlets	120V_Out_1	120VAC_Outlets	A9CX1.4	ESP
0PR1	120VACoutlets	120V_Out_2	120VAC_Outlets	A9CX1.5	ESP
0R	GNDChassis	120V_Out_3	120VAC_Outlets	A9CX1.6	Cluster
00R	Networks	400	CTGI_Gateway	A9CX2.1	ESP
00R1	RJBelectronicGND	401	CTGI_Gateway	A9CX2.2	ESP
00R2	Multiplexpower	402	CTGI_Gateway	A9CX2.3	ESP
00R3	Multiplexpower	403	Panic_Sw150	A9CX2.4	ESP
00R4	Multiplexpower	404	Panic_Sw150	A9CX2.6	ESP
00R5	RJBelectronicGND	900	Networks	A9CX2.7	ESP

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A9CX2.9	ESP	A34R.E3	Fansdriveelectric	A42J1.13	Kneeling
A9CX2.10	ESP	A34R.F3	Fansdriveelectric	A42J1.16	Kneeling
A9CX2.12	ESP	A34R.G3	Fansdriveelectric	A42J1.19	Kneeling
A9CX2.13	ESP	A34R.H3	Fansdriveelectric	A42J2.15	Kneeling
A9CX2.16	ESP	A36JA.10	Ignition&enginestart	A42RJ2.14	Kneeling
A9CX2.17	ESP	A36JA.11	Horn	A42RJ2.18	Kneeling
A9CX3.2	ESP	A36JA.15	Ignition&enginestart	A43J1.1	Lugg_door_lock
A9CX3.3	ESP	A36JA.17	Ignition&enginestart	A43J1.3	Lugg_door_lock
A9CX3.5	ESP	A36JA.18	Ignition&enginestart	A43J1.7	TPMS
A9CX3.7	ESP	A36JA.25	Brake	A43J1.10	Airdryer
A9CX3.9	ESP	A36JB.2	Ignition	A43J2.5	Lugg.lockpresssw.
A9CX3.10	ESP	A36JB.14	Firesuppression	A43J2.7	EngineECUVolvo
A9CX4.1	ESP	A39P101.1	Speakers	A43J2.10	EngineECUVolvo
A9CX4.4	ESP	A39P101.2	Speakers	A43RJ1.17	ACB
A9CX4.7	ESP	A39P101.3	Speakers	A43RJ1.18	Lugg.lockGND
A9CX4.8	ESP	A39P101.4	Speakers	A43RJ2.2	Airdryer
A9CX4.10	ESP	A39P101.5	Speakers	A44J1.1	Upperwipers
A9CX4.11	ESP	A39P101.6	Speakers	A44J1.3	Upperwipers
A10X3.4	Preheat	A39P101.8	Speakers	A44J1.4	Entrancedoor
A10X3.6	Preheat	A39P101.9	Speakers	A44J1.7	Wipers&washer
A11A.2	Preheat	A39P901.1	Speakers	A44J1.10	Wipers&washer
A14.A12	Cluster	A39P901.4	Speakers	A44J1.13	Upperdefrost
A14.B1	Cluster	A39P901.5	Speakers	A44J1.16	Horn
A14.B18	Cluster	A39P901.6	Speakers	A44J1.19	Engine&RJBcmpt.lights
A14.B20	Cluster	A41J1.1	Preheat	A44J2.1	Sunvisor
A14.B21	Cluster	A41J1.3	Steplights	A44J2.4	Sunvisor
A17.AC	Preheat	A41J1.4	Frontocc.lamp	A44J2.7	Driverlights
A27.30	ZFsteering	A41J1.6	Wipers&washer	A44J2.10	Sunvisor
A27.87A	ZFsteering	A41J1.7	Shutdown	A44J2.13	Sunvisor
A34.A5	Fansdriveelectric	A41J1.10	Kneeling	A44RJ1.17	Frflashers
A34.B5	Fansdriveelectric	A41J1.16	EngineECUVolvo	A44RJ1.18	Upperdefrost
A34.C5	Fansdriveelectric	A41J1.19	EngineECUVolvo	A44RJ2.2	Entrancedoor
A34.D5	Fansdriveelectric	A41J2.2	Wipers&washer	A44RJ2.3	WipersGND
A34.E5	Fansdriveelectric	A41J2.15	Wipers&washer	A45J1.1	HVACdefroster
A34.F5	Fansdriveelectric	A41RJ1.2	LightsGND	A45J1.3	HVACdefroster
A34.G5	Fansdriveelectric	A41RJ1.6	Kneeling	A45J1.4	ZFsteering
A34.H5	Fansdriveelectric	A41RJ1.18	LightsGND	A45J1.7	CTGI_Gateway
A34J.E	Fansdriveelectric	A41RJ2.14	Frontocc.lampGND	A45J1.16	Mirrors
A34J.F	Fansdriveelectric	A42J1.1	Kneeling	A45J2.1	HVACdefroster
A34R.A3	Fansdriveelectric	A42J1.3	Kneeling	A45J2.4	HVACdefroster
A34R.B3	Fansdriveelectric	A42J1.4	Kneeling	A45J2.7	Driverwindow
A34R.C3	Fansdriveelectric	A42J1.7	Kneeling	A45J2.13	Driverwindow
A34R.D3	Fansdriveelectric	A42J1.10	Kneeling	A45RJ1.17	Cornering&foglights

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A46J1.1	Horn	A50J2.1	Rrflashers	A53RJ1.17	Lavatory
A46J1.4	Frflashers	A50J2.7	Rrflashers	A53RJ1.18	Emergency&aislelights
A46J1.7	Cornering&foglights	A50J2.10	Back-upwarnings	A53Rj1.18	Emergency&aislelights
A46J1.10	Frflashers	A50RJ1.17	Rrflashers	A53RJ2.2	ParcelrackA/Csystem
A46J1.13	Frflashers	A50RJ1.18	Rrflashers	A53RJ2.3	Readinglamps&chime
A46J2.4	Frflashers	A50RJ2.2	Back-upwarnings	A54J1.1	HVACpassengers
A46J2.7	Frflashers	A50RJ2.3	Airdryer	A54J1.3	HVACpassengers
A46RJ1.17	Frflashers	A51J1.1	Dockinglights	A54J1.4	Preheat
A46RJ1.18	Frflashers	A51J1.3	Dockinglights	A54J1.7	HVACpassengers
A47J1.1	HVACdefroster	A51J1.4	Rrflashers	A54J1.10	Preheat
A47J1.3	HVACdefroster	A51J1.7	Lights	A54J1.16	HVACpassengers
A47J1.4	HVACdefroster	A51J1.10	Rrflashers	A54J1.19	HVACpassengers
A47J1.7	Wipers&washer	A51J1.13	Rrflashers	A54J2.1	ParcelrackA/Csystem
A47J1.10	Entrancedoor	A51J1.16	TransmissionAlisson	A54J2.4	HVACpassengers
A47J1.13	Entrancedoor	A51J1.19	WCL	A54J2.7	HVACpassengers
A47J1.16	Entrancedoor	A51J2.1	Rrflashers	A54J2.10	HVACpassengers
A47J1.19	Entrancedoor	A51J2.4	TransmissionAlisson	A54J2.13	HVACpassengers
A47J2.1	HVACdefroster	A51J2.7	Rrflashers	A54J2.15	HVACpassengers
A47J2.7	Entrancedoor	A51J2.10	Rrflashers	A54RJ1.6	HVACpassengers
A47RJ1.6	HVACdefroster	A51RJ1.17	Rrflashers	A54RJ1.17	HVACpassengers
A47RJ1.17	HVACdefroster	A51RJ1.18	WCL	A54RJ1.18	HVACGND
A47RJ1.18	Entrancedoor	A52J1.1	Fansdriveelectric	A54RJ2.2	HVACGND
A47RJ2.2	Entrancedoor	A52J1.3	Fansdriveelectric	A54RJ2.3	HVACpassengers
A47RJ2.3	Upperdef.waterpumpGND	A52J1.4	Lavatory	A55J1.1	Driverlights
A48J1.1	Cornering&foglights	A52J1.7	Engine&RJBcmpt.lights	A55J1.4	Cluster
A48J1.4	Cornering&foglights	A52J1.10	Ignition&enginestart	A55J1.7	Back-upcamera
A48J1.7	Frflashers	A52J2.1	Alternators	A55J2.15	Steering
A48J1.10	Frflashers	A52J2.4	Alternators	A55RJ1.18	Steering
A48J2.1	Frflashers	A52J2.13	Ignition&enginestart	A56J1.3	Cluster
A48J2.4	Frflashers	A52RJ1.17	Lavatory	A56J1.4	Cluster
A48J2.13	Frflashers	A52RJ1.18	Engine&RJBcmpt.lights	A56J1.7	Cluster
A48RJ1.17	Cornering&foglights	A53J1.1	ParcelrackA/Csystem	A56J1.10	Cluster
A48RJ1.18	Frflashers	A53J1.3	ParcelrackA/Csystem	A56J1.13	Multiplexpower
A48RJ2.2	Frflashers	A53J1.4	Lavatory	A56J1.19	12VISS
A49J1.1	Fansdriveelectric	A53J1.7	Curblights	A56J2.15	Lugg_door_lock
A49J1.3	Fansdriveelectric	A53J1.7/10	Curblights	A56RJ1.18	Windowsajar
A49J2.1	Alternators	A53J1.10	Curblights	A57J1.1	WCL
A49J2.10	Preheat	A53J1.13	Lavatory	A57J1.3	WCL
A49J2.13	Brake	A53J2.1	Indirectlights	A57J1.19	WCL
A49RJ2.2	Fansdriveelectric	A53J2.4	Readinglamps&chime	A57RJ1.18	WCL
A50J1.7	Back-upwarnings	A53J2.7	Lavatory	A60_Gnd	VSS
A50J1.13	Rrflashers	A53J2.10	Readinglamps&chime	A60_L+	VSS
A50J1.19	Rrflashers	A53J2.13	Emergency&aislelights	A60_R+	VSS

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A65_Gnd	VSS	A120A.5	VSS	A151B.2	USB_Gnd
A65_L+	VSS	A120B.3	VSS	A175.12	Alternators
A65_R+	VSS	A120B.4	VSS	A190GND	Wifi_Chassis_Gnd
A77.A	Equalizer	A120B.5	VSS	Alt_LL.2	Alternators
A77.H	Equalizer	A120B.6	VSS	Alt_LR.2	Alternators
A78.3	Equalizer	A120C.4	VSS	Alt_UR.2	Alternators
A78.4	Equalizer	A121A.18	VSS	AltL	Alternators
A79.3	Equalizer	A121B.16	VSS	AltLL	Alternators
A80.3	Equalizer	A121B.17	VSS	AltLR	Alternators
A80.4	Equalizer	A121C.7	VSS	AltR	Alternators
A81JB.4	EngineECUVolvo	A121C.11	VSS	AltUR	Alternators
A81JB.6	ZFsteering	A121C.12	VSS	Audio_Out_HDMI_L+	VSS
A81JB.10	EngineECUVolvo	A121C.13	VSS	Audio_Out_HDMI_R+	VSS
A81JB.15	Ignition&enginestart	A121C.15	VSS	Audio_Out_HDMI_R-L-	VSS
A81JB.16	EngineECUVolvo	A121D.7	VSS	AuxVideoGnd	VSS
A81JB.17	EngineECUVolvo	A130.3	Firesuppression	AuxVideoL	VSS
A81JB.19	EngineECUVolvo	A130.4	Firesuppression	AuxVideoR	VSS
A81JB.22	EngineECUVolvo	A130.6	Firesuppression	B85.2	Ureasystem
A81JB.23	EngineECUVolvo	A130.8	Firesuppression	B97.2	Ureasystem
A81JB.25	EngineECUVolvo	A130.11	Firesuppression	B98.2	Ureasystem
A81JB.26	EngineECUVolvo	A131A.C	Firesuppression	B99.2	Ureasystem
A96.8.Black	TPMS	A131B.A	Firesuppression	B115A.3	Ureasystem
A96.23.Red	TPMS	A131B.C	Firesuppression	BLACK	120VACoutlets
A96.24.Black	TPMS	A137A.4	Ureasystem	Black	Preheat
A96.25.Red	TPMS	A137A.7	Ureasystem	Black.1	Readinglamps&chime
A96.27.Black	TPMS	A137A.8	Ureasystem	Black.3	Readinglamps&chime
A96.28.Red	TPMS	A137A.24	Ureasystem	Black.4	Readinglamps&chime
A100.3.White	TPMS	A137A.28	Ureasystem	BLK1	VSS
A101.3.White	TPMS	A137A.40	Ureasystem	BLK2	VSS
A101.7.White	TPMS	A137A.44	Ureasystem	BussBar	12VDTOCB2
A102.3.White	TPMS	A137A.49	Ureasystem	C41.A	Preheat
A103.1	Steering	A137A.50	Ureasystem	Can_Hi	Can_Network
A103.3	Steering	A137A.51	Ureasystem	Can_Low	Can_Network
A103.5	Horn	A137A.54	Ureasystem	CB1	24WUP
A108.5	TransmissionI_Shift	A137A.56	Ureasystem	CB2	Ignition&enginestart
A108.7	TransmissionI_Shift	A137A.59	Ureasystem	CB3	HVACpassengers
A108.8	TransmissionI_Shift	A137A.62	Ureasystem	CB5	24WUP
A108.9	TransmissionI_Shift	A138.3	Ureasystem	CB6	24VD
A108.10	TransmissionI_Shift	A138.12	Ureasystem	CB8	12WUP
A109A.7	TransmissionI_Shift	A150.GND	VSS	CB9	Preheat
A109A.8	TransmissionI_Shift	A150.L	VSS	CB10	12WUP
A109A.9	TransmissionI_Shift	A150.R	VSS	CB11	VSS
A109A.10	TransmissionI_Shift	A151B.1	USB	CB13	120VACoutlets

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
CB48	Frfashers	EMS.EB29	Ignition&enginestart	F95	ELDITSGateway
CB128	24VD	F4	TransmissionI_Shift	F96	Ureasystem
CB201	Fansdriveelectric	F10	Cluster	F96AH	VSS
CB202	Fansdriveelectric	F11	Horn	F99	EngineECUVolvo
CB203	Fansdriveelectric	F13	Cust_Adapt_Interface	F100	EngineECUVolvo
CB204	Fansdriveelectric	F15	GTCG_Gateway	F101	R1toStarter
CB205	Fansdriveelectric	F16	12VEng.run	F106	Multiplexpower
CB206	Fansdriveelectric	F17	Multiplexpower	F107	Multiplexpower
CB207	Fansdriveelectric	F18	Multiplexpower	F108	Networks
CB208	Fansdriveelectric	F19	Multiplexpower	F109	Engine&RJBcmpt.lights
Cd1	Networks	F20	Multiplexpower	F110	TransmissionAlisson
CTS	Networks	F21	Multiplexpower	F112	Trailerinterface
Cts	Networks	F22	ELDITSGateway	F113	Trailerinterface
D1	Ignition&enginestart	F23	ESP	F117	SparesVECR
D3	Upperwipers	F24	Cust_Adapt_Interface	F121	CCust
D7	Entrancedoor	F25	12Voutlets	F122	Equalizer
D9	Preheat	F26	SparesVECF	F123	Preheat
D12	Horn	F27	SparesVECF	F124	Preheat
D13	Horn	F29	ECUignition	F126	HVACpassengers
D55	Lights	F30	Networks	F127	Preheat
DL0H	Spareswires	F33	Multiplexpower	F129	Preheat
DL0HS	Spareswires	F34	Multiplexpower	F130	Preheat
DL0L	Spareswires	F35	Multiplexpower	F131	CCust
DL0LS	Spareswires	F36	24VDEng.StartSw83	F132	Multiplexpower
DL1H	Networks	F37	Entrancedoor	F133	Multiplexpower
DL1L	Networks	F39	24VDcustomer	F134	Multiplexpower
DL2H	Network	F40	Firesuppression	F135	Multiplexpower
DL2L	Network	F42	TransmissionI_Shift	F136	Multiplexpower
DL3H	Networks	F43	TransmissionI_Shift	F138	Readinglamps&chime
DL3L	Networks	F44	Multiplexpower	F139	Alternators
DL7H	NetworksECU	F45	Multiplexpower	F141	HVACpassengers
DL7L	NetworksECU	F46	Multiplexpower	F142	HVACpassengers
DL9H	NetworksECU	F47	Multiplexpower	F143	HVACpassengers
DL9L	NetworksECU	F50	HVACdefroster	F144	HVACpassengers
DL10H	TPMS	F51	Destinationsigns	F147	CCust
DL10L	TPMS	F52	ELDITSGateway	F148	12VD
DL100H	J1939network	F53	Digitalclock	F152	SparesVECR
DL100L	J1939network	F54	Upperwipers	F156	Unican
DVD_Gnd	VSS	F55	Cust_Adapt_Interface	F199	Fansdriveelectric
DVD_L+	VSS	F57	Destination_Sign_Pwr	F200	VSS
DVD_R+	VSS	F73	EngineECUVolvo	F201	VSS
EI.7	Cluster	F90	Ureasystem	F202	VSS
EI.18	EngineECUVolvo	F91	EngineECUVolvo	F203	VSS

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
F243	HVACpassengers	Mo71.3	Fansdriveelectric	R-	VSS
F307.Blue	VECT	Mo72.3	Fansdriveelectric	R-12VISS	VSS
F612	DVRDigitalVideoRecorder	Mo73.3	Fansdriveelectric	R4.85	Firesuppression
F614	DVRDigitalVideoRecorder	N1	Networks	R4.87A	Preheat
gnd_1	Cantrack	N2	Networks	R5.87	Preheat
Gnd_2	Cantrack	N3	Networks	R12	HVACpassengers
GndA	Networks	N4	Networks	R12.2	HVACpassenger
GREEN	120VACoutlets	N5	Networks	R12VISS	VSS
Green	Preheat	N6	Networks	R20.87	Preheat
GRN1	VSS	N7	Networks	R21.87	RJBoutswitch
GRN2	VSS	N8	Networks	R21.B	Ignition&enginestart
GROUND	Rear_Galley	N9	Networks	R22.87	ECUignition
IN1	Unican_power_option	N10	Networks	R23.30	TransmissionAlisson
IN2	Unican_power_option	N11	Networks	R23A.87A	TransmissionI_Shift
IN3	Unican_power_option	N12	Networks	R25.87	24VIgnition
JMP6-10	Cust_Adaptation	N13	Networks	R26.30	HVACpassengers
JMP_C700	CTGI_Gateway	N14	Networks	R27.87A	Wipers&washer
L+	VSS	N15	Networks	R28.87A	Upperwipers
L-	VSS	N16	Networks	R29	EngineECUVolvo
L142.3	Lavatory	N17	Networks	R30.87	12VEngruncustomer
L207.1	WCL	N18	Networks	R31.87	12VIgncustomer
L207.2	WCLlightsplatform	N19	Networks	R34.30	12VECU
L207.3	WCL	N20	Networks	R36.87	Horn
L207.GND	WCL	N21	Networks	R37.30	Horn
L309	Inverters	N22	Networks	R38.87	12Voutlets
L309D	Inverters_Displays	N23	Networks	R40.87	TransmissionI_Shift
L310	Inverters	N24	Networks	R47.87	WCL
L310D	Inverters_Displays	N25	Networks	R52.87.Black	Trailerinterface
L350A.B2	EngineECUVolvo	N26	Networks	R53.87.Yellow	Trailerinterface
L400.G	Engineheateroutlet	N27	Networks	R54.87.Red	Trailerinterface
L400.L	Engineheateroutlet	N28	Networks	R55.87.Green	Trailerinterface
L400.N	Engineheateroutlet	N29	Networks	R56.87.Brown	Trailerinterface
LF+	VSS	N30	Networks	R_Starter	Ignition&enginestart
LF-	VSS	N31	Networks	Radio_Gnd	Audio
LR+	VSS	N56-1	Networks	Radio_L+	Audio
LR-	VSS	N56-2	Networks	Radio_R+	Audio
Mo62	Roof_Hatch_Fans	N57_1	Networks	Red	USB
Mo63	Roof_Hatch_Fans	N57_2	Networks	RED1	VSS
Mo65.3	Fansdriveelectric	Port1	Cornering & fog lights	RED2	VSS
Mo67.3	Fansdriveelectric	Pot1	Driverlights	Res8	UpperDefrostfan
Mo68.3	Fansdriveelectric	PP1	WCL	Res21	RJBCmpt.light
Mo69.3	Fansdriveelectric	Pull	Pullwire	Res22	Engine&RJBcmpt.lights
Mo70.3	Fansdriveelectric	R+	VSS	RF+	VSS

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
RF-	VSS	Se41	Cond.doorsw.	spare30	Spareswires
RR+	VSS	Se45.2	Wipers&washer	spare31	Spareswires
RR-	VSS	Se46.B	Trailerparkbrake	spare32	Spareswires
RTS	Networks	Se49.B	HVACpassengers	spare33	Spareswires
Rts	Networks	SE51.2	Cluster	spare34	Spareswires
RX	TPMS	Se51.Jmp	Jumper_Se51	spare35	Spareswires
Rx	Cantrack	Se53.C	Cluster	spare39	Spareswires
RxD	Networks	Se54.C	Cluster	spare40	Spareswires
RxTx	Networks	Se55.C	Cluster	spare41	Spareswires
Se2	TransmissionAlisson	Se56.4	WCLsystemGND	spare42	Spareswires
Se4.1	Windowsajar	Se63.1	ESP	spare43	Spareswires
Se11.Sig	Cluster	Se63.2	ESP	spare44	Spareswires
Se11.Wrn	Cluster	Se64.1	ESP	spare64	Spareswires
Se13.B	EngineECUVolvo	Se64.2	ESP	spare65	Spareswires
Se14A.B	EngineECUVolvo	Se67.C	ESP	spare72	Spareswires
Se14B.C	EngineECUVolvo	Se69.C	ESP	spare73	Spareswires
Se15.1	Entrancedoor	Se74.3	TransmissionAlisson	Spk1_L	Speakers
Se17.1	Entrancedoor	Se79.4	Kneeling	Spk1_R	Speakers
Se18.B	Brake	Se89.A	Engine_Ecu	Spk2_L	Speakers
Se19_P.D	Brake	Se94	WCL	Spk2_R	Speakers
Se19_S.D	Brake	Se100.4	WCL	Spk3_L	Speakers
Se20.B	Cluster	Shield_149	GNDstud	Spk3_R	Speakers
Se21.2	HVACdefroster	Shield_149A	GNDstud	Spk4_L	Speakers
Se23.C	HVACpassengers	SHL2	VSS	Spk4_R	Speakers
Se24.2	HVACpassengers	So9.B	HVACpassengers	Spk5_L	Speakers
Se24.3	HVACpassengers	spare10	Spareswires	Spk5_R	Speakers
Se25.2	HVACpassengers	spare11	Spareswires	Spk6_L	Speakers
Se30.A	Engine&RJBcmpt.lights	spare12	Spareswires	Spk6_R	Speakers
Se32.A	TransmissionAlisson	spare13	Spareswires	Spk9_L	Speakers
Se32.B	TransmissionAlisson	spare14	Spareswires	Spk9_R	Speakers
Se33.A	TransmissionAlisson	spare15	Spareswires	Spk10_L	Speakers
Se34.A	TransmissionAlisson	spare16	Spareswires	Spk10_R	Speakers
Se34.B	TransmissionAlisson	spare17	Spareswires	Spk11_L	Speakers
Se35.A	TransmissionAlisson	spare18	Spareswires	Spk11_R	Speakers
Se35.B	TransmissionAlisson	spare19	Spareswires	Spk12_L	Speakers
Se37.1	ESP	spare20	Spareswires	Spk12_R	Speakers
Se37.2	ESP	spare21	Spareswires	Spk13_L	Speakers
Se38.1	ESP	spare22	Spareswires	Spk13_R	Speakers
Se38.2	ESP	spare23	Spareswires	Spk14_L	Speakers
Se39.1	ESP	spare24	Spareswires	Spk14_R	Speakers
Se39.2	ESP	spare25	Spareswires	STO-LOCsolenoid	WCL
Se40.1	ESP	spare28	Spareswires	Sw1.5	Frflashers
Se40.2	ESP	spare29	Spareswires	Sw1C258.2	Wipers&washer

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Sw1C258.3	Wipers&washer	Sw32.3	Entrancedoor	Sw85.B4	Mirrors
Sw1C258.4	Wipers&washer	Sw33.3	Entrancedoor	Sw96.N3	Readinglamps&chime
Sw1C258.6	Wipers&washer	Sw34.1	Entrancedoor	Sw97.N1	Readinglamps&chime
Sw1C258.7	Wipers&washer	Sw34.4	Entrancedoor	Sw100.1	Dockingswith
Sw1C258.8	Frflashers	Sw35.3	EngineECUVolvo	Sw100.3	Cornering&foglights
Sw1C259.1	Frflashers	Sw35.8	EngineECUVolvo	Sw124.3	Destinationsigns
Sw1C259.2	Frflashers	Sw38.2B	Driverwindow	Sw125.B	Kneeling
Sw1C259.4	Frflashers	Sw39	Engine&RJBcmpt.lights	Sw149.2B	ReadinglampsCancelSw
Sw2.3	Frflashers	Sw40.B	Trailerparkbrake	Sw149.3	Readinglamps&chime
Sw2.6	Frflashers	Sw41.A1	Mirrors	Sw149.8	Readinglamps&chime
Sw3.3	Cornering&foglights	Sw41.A3	Mirrors	Sw152.B	Firesuppression
Sw3.8	Cornering&foglights	Sw41.B1	Mirrors	Sw156.1	Mirrors
Sw4.3	Frflashers	Sw41.B2	Mirrors	Sw156.6	Mirrors
Sw4.8	Frflashers	Sw41.B4	Mirrors	Sw156.8	Mirrors
Sw5.3	Upperwipersw.	Sw42.2	WCL	Sw157.2B	Sunvisor
Sw5.6	Upperwipersw.	Sw42.3	WCL	Sw158.2B	Sunvisor
Sw6.3	Upperwipersw.	Sw42.4	WCL	Sw629.3	Destinationsigns
Sw6.4	Wipers&washer	Sw42.5	WCL	Sw629.8	Destinationsigns
Sw10A.2B	Kneeling	Sw42.6	WCL	Sw660.3	Rear_Galley
Sw12.3	Destinationsigns	Sw42.7	WCL	Sw660.Jmp	Galley_Harness
Sw12.8	Destinationsigns	Sw43.B	Kneeling	Sw661.3	Rear_Galley
Sw14.3	EngineECUVolvo	Sw44	Engine&RJBcmpt.lights	Sw661.Jmp	Galley_Harness
Sw14.8	EngineECUVolvo	Sw45	Engine&RJBcmpt.lights	Sw662.3	Cust_Adaptation
Sw16.3	Brake	Sw46	Engine&RJBcmpt.lights	Sw663.3	Rear_Galley
Sw16.8	Brake	Sw55.1	Lavatory	Sw663.6	Rear_Galley
Sw17.3	EngineECUVolvo	Sw56.1	Lavatory	Sw670.8	Readinglamps&chime
Sw17.6	EngineECUVolvo	Sw58.2	Ignition&enginestart	SwPH.1	Driverwindow
Sw18A.2B	Lugg_door_lock	Sw58.3	Engineshutdownsw.	SwPH.2B	Driverwindow
Sw20.3	WCL	Sw58.5	Ignition&enginestart	SwPH.3	Driverwindow
Sw20.8	WCL	Sw58.7	Ignition&enginestart	TWU.3	WCL
Sw21.3	Upperdefrost	Sw59.3	Ignition&enginestart	TX	TPMS
Sw21.8	Upperdefrost	Sw63A.3	Horn	Tx	Cantrack
Sw24.3	Driverlights	Sw63A.4	Horn	TxD	Networks
Sw24.6	Driverlights	Sw64	Kneeling	ve+	Cantrack
Sw25.3	Lightswitch	Sw82.4	Masterrelay&12Vlgn	WHITE	120VACoutlets
Sw25.6	Readinglamps&chime	Sw82.5	Masterrelay&12Vlgn	White	Preheat
Sw26.3	Readinglamps&chime	Sw83.Acc	Ignition&enginestart	WHT1	VSS
Sw26.8	Readinglamps&chime	Sw83.lgn	Ignition&enginestart	WHT2	VSS
Sw27.3	ParcelrackA/Csystem	Sw83.St	Ignition&enginestart	YellowGreen	Readinglamps&chime
Sw27.8	ParcelrackA/Csystem	Sw85.A1	Mirrors		
Sw29.2	Readinglamps&chime	Sw85.A3	Mirrors		
Sw29.3	Readinglamps&chime	Sw85.B1	Mirrors		
Sw29.8	Readinglamps&chime	Sw85.B2	Mirrors		