

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F4	Fuse Box FJB	563280	Trans IShift & Volvo link	5 amp	4.2 Dist 24V FJB 2 B
F11	Fuse Box FJB	563282	Horn	20 amp	4.1 Dist 12V FJB 1 A
F12	Fuse Box FJB	563284	Spares VECF	15 amp	4.1 Dist 12V FJB 1 A
F13	Fuse Box FJB	563284	12VD Customer	15 amp	4.1 Dist 12V FJB 1 A
F14	Fuse Box FJB	563280	Spares VECF	5 amp	4.1 Dist 12V FJB 1 A
F15	Fuse Box FJB	563280	Spares VECF	5 amp	4.1 Dist 12V FJB 1 A
F16	Fuse Box FJB	563284	12V Eng. run	15 amp	4.1 Dist 12V FJB 1 A
F17	Fuse Box FJB	563165	Multiplex power	30 amp	4.1 Dist 12V FJB 1 A
F18	Fuse Box FJB	563165	Multiplex power	30 amp	4.1 Dist 12V FJB 1 A
F19	Fuse Box FJB	563165	Multiplex power	30 amp	4.1 Dist 12V FJB 1 B
F20	Fuse Box FJB	563280	Multiplex power	5 amp	4.1 Dist 12V FJB 1 B
F21	Fuse Box FJB	563165	Multiplex power	30 amp	4.1 Dist 12V FJB 1 B
F22	Fuse Box FJB	563280	Cadec	5 amp	4.1 Dist 12V FJB 1 B
F23	Fuse Box FJB	563165	ESP	30 amp	4.1 Dist 12V FJB 1 B
F24	Fuse Box FJB	563284	12V Ign	15 amp	4.1 Dist 12V FJB 1 B
F25	Fuse Box FJB	563284	12V outlets	15 amp	4.1 Dist 12V FJB 1 B
F26	Fuse Box FJB	563284	Spares VECF	15 amp	4.1 Dist 12V FJB 1 B
F27	Fuse Box FJB	563165	Spares VECF	30 amp	4.1 Dist 12V FJB 1 B
F29	Fuse Box FJB	563283	Networks	10 amp	4.1 Dist 12V FJB 1 C
F30	Fuse Box FJB	563280	Networks	5 amp	4.1 Dist 12V FJB 1 C
F33	Fuse Box FJB	563280	Multiplex power	5 amp	4.2 Dist 24V FJB 2 B
F34	Fuse Box FJB	563280	Multiplex power	5 amp	4.2 Dist 24V FJB 2 B
F35	Fuse Box FJB	563280	Multiplex power	5 amp	4.2 Dist 24V FJB 2 A
F36	Fuse Box FJB	563280	Start switch	5 amp	4.2 Dist 24V FJB 2 A
F37	Fuse Box FJB	563280	24 VD	5 amp	4.2 Dist 24V FJB 2 A
F39	Fuse Box FJB	563284	24 VD	15 amp	4.2 Dist 24V FJB 2 B
F40	Fuse Box FJB	563284	Fire suppression	15 amp	4.2 Dist 24V FJB 2 B
F41	Fuse Box FJB	563280	Spares VERF	5 amp	4.2 Dist 24V FJB 2 B
F42	Fuse Box FJB	563283	Transmission IShift	10 amp	4.1 Dist 12V FJB 1 D
F43	Fuse Box FJB	563282	Transmission IShift	20 amp	4.1 Dist 12V FJB 1 D

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F44	Fuse Box FJB	563165	Multiplex power	30 amp	4.2 Dist 24V FJB 2 B
F45	Fuse Box FJB	563165	Multiplex power	30 amp	4.2 Dist 24V FJB 2 B
F46	Fuse Box FJB	563280	Multiplex power	5 amp	4.2 Dist 24V FJB 2 B
F47	Fuse Box FJB	563280	Multiplex power	5 amp	4.2 Dist 24V FJB 2 B
F50	Fuse Box FJB	563165	HVAC defroster	30 amp	4.2 Dist 24V FJB 2 C
F51	Fuse Box FJB	563280	Destination signs	5 amp	4.2 Dist 24V FJB 2 C
F52	Fuse Box FJB	563280	Spares VERF	5 amp	4.2 Dist 24V FJB 2 C
F53	Fuse Box FJB	563283	Clock & VSS	10 amp	4.2 Dist 24V FJB 2 C
F54	Fuse Box FJB	563284	Spares VERF	15 amp	4.2 Dist 24V FJB 2 C
F55	Fuse Box FJB	563283	Spares VERF	10 amp	4.2 Dist 24V FJB 2 D
F56	Fuse Box FJB	563284	Spares VERF	15 amp	4.2 Dist 24V FJB 2 D
F57	Fuse Box FJB	563283	Spares VERF	10 amp	4.2 Dist 24V FJB 2 D
F58	Fuse Box FJB	563284	Spares VERF	15 amp	4.2 Dist 24V FJB 2 D
F73	Fuse Box RJB	563283	Engine ECU Volvo	20 amp	5.1 Dist RJB 2 B
F90	Fuse Box RJB	563282	Urea system	20 amp	5.1 Dist RJB 1 A
F91	Fuse Box RJB	563282	Engine ECU Volvo	20 amp	5.1 Dist RJB 2 A
F95	Fuse Box FJB	563280	Trans Alisson & Volvo link	5 amp	4.2 Dist 24V FJB 2 C
F96	Fuse Box RJB	563282	Urea system	20 amp	5.1 Dist RJB 1 C
F99	Fuse Box RJB	563165	Engine ECU Volvo	30 amp	5.1 Dist RJB 1 A
F100	Fuse Box RJB	563283	Engine ECU Volvo	10 amp	5.1 Dist RJB 2 A
F101	Fuse Box RJB	564520	Power for Master relay	300 amp	3.1 Main Disti 3 A
F105	Fuse Box RJB	563282	Spare VECR	20 amp	5.1 Dist RJB 2 A
F106	Fuse Box RJB	563153	Multiplex power	30 amp	5.1 Dist RJB 1 A
F107	Fuse Box RJB	563153	Multiplex power	30 amp	5.1 Dist RJB 2 B
F108	Fuse Box RJB	563280	Networks	5 amp	5.1 Dist RJB 1 B
F109	Fuse Box RJB	563280	Engine & RJB cmpt. lights	5 amp	5.1 Dist RJB 2 B
F110	Fuse Box RJB	563283	Transmission Alisson	10 amp	5.1 Dist RJB 1 B
F112	Fuse Box RJB	563165	Spares VECR	30 amp	5.1 Dist RJB 1 B
F113	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 B
F114	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 B

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F115	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 B
F116	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 B
F117	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 B
F118	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 B
F119	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 B
F120	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 B
F121	Fuse Box RJB	563284	Power for customer	15 amp	5.1 Dist RJB 2 B
F122	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 C
F123	Fuse Box RJB	563153	Pre-heat	25 amp	5.1 Dist RJB 1 C
F124	Fuse Box RJB	563153	Pre-heat	25 amp	5.1 Dist RJB 2 C
F126	Fuse Box RJB	563280	Engine ECU &HVAC	5 amp	5.1 Dist RJB 2 C
F127	Fuse Box RJB	563284	Pre-heat	15 amp	5.1 Dist RJB 1 C
F129	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 C
F130	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 2 C
F131	Fuse Box RJB	563280	Power for customer	5 amp	5.1 Dist RJB 1 C
F132	Fuse Box RJB	563280	Multiplex power	5 amp	5.1 Dist RJB 1 C
F133	Fuse Box RJB	563165	Multiplex power	30 amp	5.1 Dist RJB 2 D
F134	Fuse Box RJB	563165	Multiplex power	30 amp	5.1 Dist RJB 1 D
F135	Fuse Box RJB	563165	Multiplex power	30 amp	5.1 Dist RJB 2 D
F136	Fuse Box RJB	563165	Multiplex power	30 amp	5.1 Dist RJB 1 D
F137	Fuse Box RJB	563280	Equalizer	5 amp	5.1 Dist RJB 2 D
F138	Fuse Box RJB	563280	Reading lamps & chime	5 amp	5.1 Dist RJB 1 D
F139	Fuse Box RJB	563283	Alternators	10 amp	5.1 Dist RJB 2 D
F140	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 1 D
F141	Fuse Box RJB	563284	Evap Fan Mo7	15 amp	5.1 Dist RJB 2 D
F142	Fuse Box RJB	563284	Evap Fan Mo8	15 amp	5.1 Dist RJB 1 D
F143	Fuse Box RJB	563284	Evap Fan Mo27	15 amp	5.1 Dist RJB 2 D
F144	Fuse Box RJB	563284	Evap Fan Mo28	15 amp	5.1 Dist RJB 1 D
F145	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 2 D
F146	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 1 D

## Fuses list

Fuse ID	Location	Part No	Function	Rating	Page
F147	Fuse Box RJB	563284	Power for customer	15 amp	5.1 Dist RJB 2 D
F148	Fuse Box RJB	563165	VSS	30 amp	5.1 Dist RJB 2 E
F149	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 E
F150	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 E
F151	Fuse Box RJB	563284	Spare VECR	15 amp	5.1 Dist RJB 1 E
F152	Fuse Box RJB	563283	Spare VECR	10 amp	5.1 Dist RJB 2 E
F199	RJB	564520	Electric fans drive	300 amp	13.1 FanDriveElectric 1 B
F200	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6 VSS HDMI 4 G
F201	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6 VSS HDMI 4 G
F202	Parcel Rack LH 1st Cmpt	563284	VSS HDMI	15 amp	35.6 VSS HDMI 4 H
F203	Parcel Rack LH 1st Cmpt	563282	VSS HDMI	20 amp	35.6 VSS HDMI 4 H
F209	RJB	564174	Engine pre-heater power	150 amp	14.1 Engine Ecu 3 E
F243	RJB	560893	24V while Evap. relay powered	3 amp	18.2 HvacPass 4 C
F301	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 E
F302	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 B
F303	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 B
F304	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 C
F305	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 C
F306	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 D
F307	VECT	563284	VECT Trailer interface	15 amp	26.4 Trailer 2 A