

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
Ø	GRD BATTERY A TO GRD STUD	1Ø	INTERIOR LTS-LUGGAGE CPT	23B	EXTERIOR LTS-DIRECTIONNAL RH	38	INTERIOR LTS-24V FLUORESCENT
Ø	GRD BATTERY A1 TO GRD STUD	1ØA	INTERIOR LTS-LUGGAGE CPT	23E	KNEELING-RH EXT. FLASHING LTS	38A	INTERIOR LTS-24V FLUORESCENT
Ø	GRD STARTER MOTOR TO GRD STUD	1ØA	A/C AUXILIARY-CLUTCH	23F	KNEELING-RH EXT. FLASHING LTS	38B	INTERIOR LTS-24V FLUORESCENT
Ø	FJP - GRD	1ØB	INTERIOR LTS-LUGGAGE CPT	23H	EXTERIOR LTS-HAZARD SIGNAL	38C	INTERIOR LTS-24V FLUORESCENT
Ø	RJB - GRD	1ØC	INTERIOR LTS-LUGGAGE CPT	24	BATTERY B TO BATTERY B1	38E	INTERIOR LTS-24V FLUORESCENT
Ø	BJP - GRD	11	FR.DESTINATION SIGN	24	BOOSTER TO 24V DISC SW	38F	INTERIOR LTS-24V FLUORESCENT
ØA	RJB - GRD	11A	FR.DESTINATION SIGN	24A	RR JCT BOX 24V DISC SW	39	INTERIOR LTS-DRIVER'S LTS
ØA	FR SERV JCT BOX - GRD	11B	FR.DESTINATION SIGN	24A	FR JCT PANEL 24V DISC SW	39A	INTERIOR LTS-DRIVER'S LTS
ØB	FJP - GRD	11C	FR.DESTINATION SIGN	24B	FR JCT PANEL 24V DISC SW	39B	INTERIOR LTS-DRIVER'S LTS
ØB	RJB - GRD	11D	FR.DESTINATION SIGN	24BE	BATTERY MONITOR	44	EXTERIOR LTS-FOG
ØBE	ØV BATTERY MONITOR	11E	FR.DESTINATION SIGN	24C	FR JCT PANEL 24V DISC SW	44A	EXTERIOR LTS-FOG
ØC	RJB - GRD	11K	FR.DESTINATION SIGN	24F	FR JCT PANEL 24V DISC SW	44B	EXTERIOR LTS-FOG
ØD	FJP - GRD	11P	FR.DESTINATION SIGN	24I	FR JCT PANEL 24V IGNITION	44C	EXTERIOR LTS-FOG & HAZARD SW
ØD	RJB - GRD	12	12V BATTERY A1 TO BATTERY A	24I	RR JCT BOX 24V IGNITION	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
ØE	RJB - GRD	12	12V BATTERY B1 TO BATTERY A	24IA	FR JCT PANEL 24V IGNITION	45	A/C & HEAT SYSTEM-WATER VALVE
ØF	RJB - GRD	12	12V BATTERY B1 TO BATTERY B	24IB	FR JCT PANEL 24V IGNITION	45A	A/C & HEAT SYSTEM-WATER VALVE
ØH	FJP - GRD	12	12V VIDEO SYSTEM	24K	FR JCT PANEL 24V DISC SW	45B	A/C & HEAT SYSTEM-WATER VALVE
ØM	BACK-UP MONITOR	12A	FR JCT PANEL 12V DISC SW	24P	FR JCT PANEL 24V DISC SW	45E	A/C & HEAT SYSTEM-BYPASS VALVE
ØP	RJB - GRD	12A	RR JCT BOX 12V DISC SW	24R	RR JCT BOX 24V DISC SW	46	EXTERIOR LTS-MARKER
ØR	FJP - SOUND SYSTEM GRD	12B	FR JCT PANEL 12V DISC SW	24S	RR JCT BOX 24V DISC SW	46A	EXTERIOR LTS-MARKER
ØS2	RADIO- BATTERY GRD	12BE	12V BATTERY MONITOR	24S1	24V BATTERY-SOUND SYSTEM	46B	EXTERIOR LTS-MARKER
ØS3	VIDEO- BATTERY GRD	12C	RR JCT BOX 12V DISC SW	24S2	24V BATTERY-SOUND SYSTEM	46C	EXTERIOR LTS-MARKER
ØSS	SOUND SYSTEM - BATTERY GRD	12D	FR JCT PANEL 12V HOT WIRE	24S3	24V BATTERY-SOUND SYSTEM VIDEO	47	A/C & HEAT SYSTEM-DRIVER'S HTR
ØSSS	SOUND SYSTEM - BATTERY GRD	12E	FR JCT PANEL 12V DISC SW	24S4	24V BATTERY-SOUND SYSTEM VIDEO	47	A/C & HEAT SYSTEM-FULL AIR
ØT	FJP - GRD	12F	RR JCT BOX 12V DISC SW	24SB	24V BATTERY-SOUND SYSTEM	48	INTERIOR LTS-STEPWELL LTS
ØT	FR SERVICE CPT-GRD	12G	FR JCT PANEL 12V DISC SW	24SS	24V BATTERY-SOUND SYSTEM	51	INTERIOR LTS-READING LTS
ØV	FJP - GRD	12I	FR JCT PANEL 12V IGNITION	24T	RR JCT BOX 24V DISC SW	52	ALARM & SIGNAL-ELEC. HORN
ØVA	GRD STUD TO BAT.EQUALIZER	12IF	FR JCT PANEL 12V IGNITION	24VA	24V BATTERY POST TO EQUALIZER	52A	ALARM & SIGNAL-ELEC. HORN
ØW	FJP - GRD	12IM	BACK-UP MONITOR	24VI	RR JCT BOX 24V IGNITION	53	ALARM & SIGNAL-ELEC. HORN
ØW	WORLD TRANSM. VIM CHASSIS GRD	12P	FR JCT PANEL 12V DISC SW	24VIF	FR JCT PANEL 24V IGNITION	53B	WIPER & WASHER SYSTEM
ØWA	PRE_HEAT WATER HEATER WEBASTO	12S	12V BATTERY-SOUND SYSTEM RADIO	24VD	FR JCT PANEL 24V HOT WIRE	53C	WIPER & WASHER SYSTEM
ØWB	PRE_HEAT WATER HEATER WEBASTO	12S1	12V BATTERY-SOUND SYSTEM RADIO	24VD	RR JCT BOX 24V HOT WIRE	53E	WIPER & WASHER SYSTEM
ØX	RJB - GRD	12S2	12V BATTERY-SOUND SYSTEM RADIO	24VF	FR JCT PANEL 24V DISC SW	53F	WIPER & WASHER SYSTEM
ØY	ABS SYSTEM-GRD	12SB	12V BATTERY-SOUND SYSTEM	24X	24V SPEED SW & KNEELING	5ØJ	WIREBR&E WASHER SYSTEM
ØY1	ABS SYSTEM-GRD	12SS	12V BATTERY-SOUND SYSTEM	25	12VAC GEN RLY ON SIGNAL	54	SPARE-F.J.B. TO FR ROOF
2	A/C & HEAT SYSTEM-CONDENSER	12T	RR JCT BOX 12V DISC SW	25A	NOT GENERATOR-WARNING LT	55	EXTERIOR LTS-HI BEAM
2A	A/C & HEAT SYSTEM-CONDENSER	12VA	12V BATTERY POST TO EQUALIZER	25B	EXTERIOR LTS-DAYTIME RUN LTS	56	TRANSM. OIL TEMP GAUGE
2C	A/C & HEAT SYSTEM-CONDENSER	12VF	12V FR JCT PANEL	25L	12VAC GEN RLY ON SIGNAL	57	EXTERIOR LTS-HI BEAM
2D	A/C & HEAT SYSTEM-CONDENSER	12VI	RR JCT BOX 12V IGNITION	27	LAVATORY-EMERGENCY BUZZER	57	A/C & HEAT SYSTEM-WATER PUMP
3	A/C & HEAT SYSTEM-EVAPORATOR	12VR	RR JCT BOX 12V DISC SW	28	A/C & HEAT SYSTEM-WARNING LT	57A	EXTERIOR LTS-HI BEAM
3A	A/C & HEAT SYSTEM-EVAPORATOR	12W	12V HOT WIRE DDEC III FEED	29	A/C & HEAT SYSTEM-DRIVER'S HTR	57A	A/C & HEAT SYSTEM-WATER PUMP
3B	A/C & HEAT SYSTEM-EVAPORATOR	12WA	ALARM & SIGNAL-LO AIR PRIM.	29A	A/C & HEAT SYSTEM-DRIVER'S HTR	57B	A/C & HEAT SYSTEM-WATER PUMP
4	CHIME-PASSENGER & HOSTESS	12WB	ALARM & SIGNAL-LO AIR SEC.	29B	A/C & HEAT SYSTEM-DRIVER'S HTR	57C	PRE-HEAT WATER HEATER
4A	CHIME-PASSENGER & HOSTESS	13B	LAVATORY-FLUSHING SW	3Ø	GALLEY SYSTEM	57D	PRE-HEAT WATER HEATER
4B	CHIME-PASSENGER & HOSTESS	14	EXTERIOR LTS-MULTI FUNC LEVEL	3ØA	GALLEY SYSTEM	57E	PRE-HEAT WTR HTR PUMP
4C	CHIME-PASSENGER & HOSTESS	15	ALARM & SIGNAL-DIF. OIL TEMP	31A	A/C & HEAT SYSTEM-PRESSURE SW	57F	PRE-HEAT WATER HEATER
4D	CHIME-PASSENGER & HOSTESS	15	WIPER & WASHER SYSTEM	31B	A/C & HEAT SYSTEM-PRESSURE SW	57W	PRE-HEAT WATER HEATER
4E	CHIME-PASSENGER & HOSTESS	15A	ALARM & SIGNAL-DIF. OIL TEMP	31B	WIPER & WASHER SYSTEM	58	EXTERIOR LTS-LO BEAM
5	INTERIOR LTS-EMERGENCY EXIT LTS	16	SPEEDOMETER SIGNAL (·)	32	EXTERIOR LTS-BACK-UP	58A	EXTERIOR LTS-LO BEAM
5A	INTERIOR LTS-EMERGENCY EXIT LTS	16T	SPEED SW SIGNAL IN (·)	32A	BACK-UP MONITOR	58B	EXTERIOR LTS-LO BEAM
5C	INTERIOR LTS-EMERGENCY EXIT LTS	17	EXTERIOR LTS-FLASHER UNIT	32B	EXTERIOR LTS-BACK-UP	58E	EXTERIOR LTS-LO BEAM
6	INTERIOR LTS-AISLE LTS	17A	EXTERIOR LTS-FLASHER UNIT	32D	BACK-UP ALARM	59A	ENGINE BRAKE SYSTEM
7	INTERIOR LTS-STEPWELL LTS	18	ETHER COLD START SYST.	32M	BACK-UP MONITOR	6Ø	EXTERIOR LTS-RR & FR ROOF GRD
8A	INTERIOR LTS-AISLE & EMERG. LTS	2Ø	SPEEDOMETER SIGNAL (-)	34	A/C & HEAT SYSTEM-CONDENSER	61	EXTERIOR LTS-24V FEED SW
8B	INTERIOR LTS-AISLE & EMERG. LTS	2ØT	SPEED SW SIGNAL IN (-)	34A	A/C & HEAT SYSTEM-CONDENSER	61A	EXTERIOR LTS-HEAD SIGNAL
9	INTERIOR LTS-ENGINE CPT	21	EXTERIOR LTS-DIRECTIONNAL LH	35	INTERIOR LTS-STEPWELL LTS	62	LAVATORY-OCCUPIED LTS
9	INTERIOR LTS-RR JCT BOX	21A	EXTERIOR LTS-DIRECTIONNAL LH	36	ENGINE BRAKE SYSTEM & RETARDER	62B	LAVATORY-OCCUPIED LTS
9	INTERIOR LTS-FR SERVICE CPT	21B	EXTERIOR LTS-DIRECTIONNAL LH	36A	ENGINE BRAKE SYSTEM	63	EXTERIOR LTS-CLEARANCE
9A	INTERIOR LTS-FR JCT PANEL	21H	EXTERIOR LTS-HAZARD SIGNAL	36C	ENGINE BRAKE SYSTEM-ABS CANCEL	63A	EXTERIOR LTS-CLEARANCE
9E	CHIME-PASSENGER & HOSTESS	23	EXTERIOR LTS-DIRECTIONNAL RH	37	LAVATORY-OCCUPIED LTS	63B	EXTERIOR LTS-CLEARANCE
1Ø	A/C & HEAT SYSTEM-LO PRES.	23A	EXTERIOR LTS-DIRECTIONNAL RH	38	FUEL WATER FILTER		

NO.	SYSTEM	NO.	SYSTEM
63C	EXTERIOR LTS-MARKER SIGNAL	85Y	ABS-WARNING LT
63D	EXTERIOR LTS-MARKER & TAIL	86	ENGINE CTR-STARTER SOL SIGN
63E	EXTERIOR LTS-CLEARANCE	86A	ENGINE CTR-STARTER SOL SIGN
63F	EXTERIOR LTS-MARKER BLINKER	87B	ENGINE CTR-24V IGNITION
63H	EXTERIOR LTS-TAIL	88	ENGINE CTR-RR START SIGNAL
63K	EXTERIOR LTS-TAIL	89	ENGINE CTR-RR START SIGNAL
64	DIFFERENTIAL OIL TEMP GAUGE	90	A/C & HEAT SYSTEM-WATER PUMP
65A	PRE-HEAT WATER HEATER	90	GALLEY SYSTEM
66B	RR JCT BOX 12V HOT WIRE	90	DIGITAL CLOCK
67	A/C & HEAT SYSTEM	90A	GALLEY SYSTEM
67A	A/C & HEAT SYSTEM	90B	ENGINE CTR-MAST KEY SW FEED
67B	A/C & HEAT SYSTEM	90B	GALLEY SYSTEM
67C	A/C & HEAT SYSTEM	90B	FR JCT PANEL 24V DISC SW
69	RR JCT BOX 24V HOT WIRE	90C	ALARM & SIGNAL-FIRE DETECTOR
70	INTERIOR LTS-HAT RACK LTS	90E	GALLEY SYSTEM
70A	INTERIOR LTS-HAT RACK LTS	90F	GALLEY SYSTEM
70C	INTERIOR LTS-HAT RACK LTS	91	PARKING BRAKE SW SIGNAL
71	A/C AUXILIARY-DASH SW	91A	PARKING BRAKE SW SIGNAL
71B	R J B GRD-BACK UP ALARM	91B	DDEC III-FAST IDLE SIGNAL
71H	A/C AUXILIARY-DASH SW	91B	EXTERIOR LTS-RUN LTS CANCEL
72	A/C AUXILIARY-DASH SW	91C	PRE-HEAT WATER HEATER
72H	A/C AUXILIARY-DASH SW	92	BATTERY MONITOR-CHECK BALANCE
73	LAVATORY-NIGHT LTS	92A	BATTERY MONITOR-CHECK BALANCE
74	INTERIOR LTS-READING LTS	93	BATTERY MONITOR-CHECK LO/HI
74A	INTERIOR LTS-READING LTS	93A	BATTERY MONITOR-CHECK LO/HI
74B	INTERIOR LTS-READING LTS	94	HIGH BUOY SYSTEM
75	INTERIOR LTS-READING LTS	94A	HIGH BUOY SYSTEM
76	FUEL TANK GAUGE	95	ENGINE BRAKE & RETARDER SYSTEM
76C	LOW FUEL LT	95A	ENGINE BRAKE & RETARDER SYSTEM
76L	LOW FUEL LT	95B	ENGINE BRAKE & RETARDER SYSTEM
76M	FUEL PRIME PUMP	97	TACHOMETER (-)
76P	FUEL PRIME PUMP	99	A/C AUXILIARY-DASH SW
77H	A/C & HEAT SYSTEM-CLUTCH	100	INTERIOR LTS-GENERAL LTS
77B	A/C AUXILIARY-LIQ. SOL.	100A	INTERIOR LTS-GENERAL LTS
77C	A/C AUXILIARY-LIQ. SOL.	100B	INTERIOR LTS-GENERAL LTS
77H	A/C & HEAT SYSTEM-FAN CLUTCH	100C	INTERIOR LTS-GENERAL LTS
78	24V HOT WIRE	101	WORLD TRANSM-LO SIGNAL SOL. LO
78A	24V HOT WIRE	101A	24V DISC SW TO BATTERY
80	WORLD TRANSM-NEUTRAL SIGNAL GRD	102	24V STARTER TO GENERATOR
81	EXTERIOR LTS-STOP SW	102	WORLD TRANSM-SOL. GRD 1
82	EXTERIOR LTS-STOP SIGNAL	102	WORLD TRANSM-SOL. C3
82A	EXTERIOR LTS-STOP SIGNAL	104	WORLD TRANSM-SOL. FORWARD
82B	EXTERIOR LTS-STOP LTS	105	WORLD TRANSM-RETARDER & SUMP
82K	EXTERIOR LTS-STOP RETARDER	105W	WORLD TRANSM-RETARDER & SUMP
82L	EXTERIOR LTS-STOP LTS	106	WORLD TRANSM-OIL LEVEL HI
82R	EXTERIOR LTS-STOP LTS	107	CHARG SYST-VOLTAGE REGUL. "F"
83	ENGINE CTR-MAST KEY SW ACCES	107	WORLD TRANSM-LOCKUP SOL. HI
84	ENGINE CTR-MAST KEY SW START	108	WORLD TRANSM-REMOTE PWR WAKE UP
84A	ENGINE CTR-MAST KEY SW START	108	24V DISC SW TO 24V SYSTEM
85	ENGINE CTR-MAST KEY SW IGN	108A	CHARG SYST-VOLTAGE REGUL. "B"
85A	24V IGN DASH INSTRUMENTATION	109	WORLD TRANSM-RET. SOL. LO
85B	24V IGN DASH INSTRUMENTATION	110	ALARM & SIGNAL-WATER TEMP
85BE	BATTERY MONITOR 24V IGN	110	WORLD TRANSM-LOCKUP SOL. LO
85C	ENGINE CTR-24V IGNITION	111	BATTERY GRD
85C	PARKING BRAKE SWITCH	111	WORLD TRANSM-SOL. C6
85F	LO AIR SONALERT	112	WORLD TRANSM-SPARE OUTPUT (+)
85W	ABS-24V IGN	113	ALARM & SIGNAL-OIL PRESS
85X	ABS-24V IGN	113	WORLD TRANSM-REVERSE WARNING
		114	WORLD TRANSM-SPARE OUTPUT (-)
		114	INTERIOR LTS-DASH LT REGUL.
		114A	INTERIOR LTS-DASH LT

NO.	SYSTEM	NO.	SYSTEM
114B	INTERIOR LTS-DASH LT REGUL.	129	PRE-HEAT WATER HEATER
114C	INTERIOR LTS-DASH LT	129A	PRE-HEAT WATER HEATER
115	ALARM & SIGNAL-TAG PRESS	129B	PRE-HEAT WATER HEATER
115	DDEC III-COOLANT LEVEL	130	WORLD TRANSM-SOL. GRD 3
115	WORLD TRANSM-DO NOT SHIFT SIGNAL	130A	A/C & HEAT SYSTEM-EVAPORATOR
115A	ALARM & SIGNAL-TAG PRESS	130	A/C & HEAT SYSTEM-EVAPORATOR
115B	ALARM & SIGNAL-TAG PRESS	131	24V DISC SW TO FR JCT PANEL
115C	DDEC III-COOLANT LEVEL	131	WORLD TRANSM-SOL. C4
115W	WORLD TRANSM-DO NOT SHIFT SIGNAL	132	WORLD TRANSM-ENG BRK OUTPUT (-)
116	WORLD TRANSM-LO SIGNAL SOL. HI	132W	WORLD TRANSM-ENG BRK OUTPUT (-)
116	A/C & HEAT SYSTEM-DRIVER'S HTR	133	WORLD TRANSM-RET. ACTUATOR HI
116A	A/C & HEAT SYSTEM-DRIVER'S HTR	133	GALLEY SYSTEM-CONTAINER RH
116B	A/C & HEAT SYSTEM-DRIVER'S HTR	133A	GALLEY SYSTEM-CONTAINER RH
117	WORLD TRANSM-SPARE INPUT (-)	134	WORLD TRANSM-RET. APPLY SOL. HI
117	ALARM & SIGNAL-TRANSM OIL TEMP	134	GALLEY SYSTEM-CONTAINER RH
117A	ALARM & SIGNAL-TRANSM OIL TEMP	134A	GALLEY SYSTEM-CONTAINER RH
118	WORLD TRANSM-SPARE INPUT (+)	135	WORLD TRANSM-ANALOG GRD
119	CHIME-HOSTESS & PASSENGER	135	A/C AUXILIARY-FAN
119	WORLD TRANSM-ENG BRK INPUT (+)	135A	A/C AUXILIARY-FAN
119A	CHIME-HOSTESS & PASSENGER	135B	A/C AUXILIARY-COIL SENSING
119B	CHIME-HOSTESS & PASSENGER	135C	WORLD TRANSM-RETARDER TEMP
120	12V HOT WIRE	135D	WORLD TRANSM-RETARDER RES MOD
120	WORLD TRANSM-SOL. C1	136	GALLEY SYSTEM-LAMP
120D	12V HOT WIRE	136	WORLD TRANSM-ECU POWER
120Y	VIDEO SYSTEM	136V	WORLD TRANSM-12V BATTERY
120Z	VIDEO SYSTEM	136W	WORLD TRANSM-12V BATTERY
121	WORLD TRANSM-SOL. GRD 2	136X	WORLD TRANSM-12V BATTERY
121	CIGAR LIGHTER	137	WORLD TRANSM-RETARDER
122	A/C & HEAT SYSTEM-DRIVER'S HTR	137	RR VIEW MIRROR
122	A/C & HEAT SYSTEM-FRESH AIR	137A	RR VIEW MIRROR
122	WORLD TRANSM-SOL. GRD 4	138	WORLD TRANSM-RETARDER TEMP
123	WORLD TRANSM-NEUTRAL START	138	ABS SYSTEM
123	ALARM & SIGNAL-FIRE DETECTOR	138	A/C AUXILIARY-FAN
123A	ALARM & SIGNAL-FIRE DETECTOR	138A	ABS SYSTEM
124	WORLD TRANSM-THROTTLE (HI)	138A	ABS SYSTEM
125	LAVATORY-FAN	139	A/C AUXILIARY-FAN
125	WORLD TRANSM-RETARDER INDICATOR	139	A/C AUXILIARY-FAN
125W	WORLD TRANSM-RETARDER INDICATOR	139	WORLD TRANSM-OUTPUT SPEED HI
126	WORLD TRANSM-LUBE PRESS SW.	139A	A/C AUXILIARY-FAN
126	KNEELING SYSTEM	140	A/C AUXILIARY-SHUTTER
126A	KNEELING SYSTEM	140	WORLD TRANSM-OUTPUT SPEED LO
126B	KNEELING SYSTEM	140	ABS SYSTEM
126C	KNEELING SYSTEM	141	ABS SYSTEM
126G	KNEELING SYSTEM	141	WORLD TRANSM-ENGINE SPEED HI
126H	KNEELING SYSTEM	142	WORLD TRANSM-SERIAL COM. A
127	WORLD TRANSM-RETARDER FEED SOL.	142	ABS SYSTEM
127	PRE-HEAT WATER HEATER	143	ABS SYSTEM
127A	PRE-HEAT WATER HEATER	143A	ABS SYSTEM
127B	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD
127W	PRE-HEAT WATER HEATER	143W	WORLD TRANSM-BATTERY GRD
127X	PRE-HEAT WATER HEATER	143X	WORLD TRANSM-BATTERY GRD
128	WORLD TRANSM-SOL. C2	144	WORLD TRANSM-ECU CHASSIS GRD
128A	PRE-HEAT WATER HEATER	144	ABS SYSTEM
128B	PRE-HEAT WATER HEATER	144A	ABS SYSTEM
128C	PRE-HEAT WATER HEATER	145	ABS SYSTEM
128D	PRE-HEAT WATER HEATER	146	ABS SYSTEM
128E	PRE-HEAT WATER HEATER	146	WORLD TRANSM-IGNITION SENSE
128F	PRE-HEAT WATER HEATER	146W	WORLD TRANSM-12V IGNITION
128W	PRE-HEAT WATER HEATER	146X	WORLD TRANSM-12V IGNITION
128X	PRE-HEAT WATER HEATER		
129	WORLD TRANSM-SOL. C5		

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
147	WORLD TRANSM-OIL TEMP	197A	FUEL WATER FILTER	L9	ENG.BLK & WATER TANK-HEATER		
147	ABS SYSTEM	197B	FUEL WATER FILTER	N1	VIDEO SYSTEM- 110V		
147	ETHER COLD START	201	WORLD TRANSM-SPARE	N2	INTERIOR LTS-110V FLUORESCENT		
147A	ETHER COLD START	202	WORLD TRANSM-SPARE	J4	A/C & HEAT SYSTEM-DRIVER'S HTR		
148	ABS SYSTEM	203	WORLD TRANSM-SPARE	O3	A/C & HEAT SYSTEM-DRIVER'S HTR		
148	WORLD TRANSM-OUTPUT SPEED LO	204	WORLD TRANSM-SPARE	R1	A/C & HEAT SYSTEM-DRIVER'S HTR		
149	WORLD TRANSM-TURBINE SPEED HI	205	WORLD TRANSM-SPARE	R6	A/C & HEAT SYSTEM-DRIVER'S HTR		
149	ABS SYSTEM	206	WORLD TRANSM-SPARE	SH1	SHIELD WIRE GRD		
149A	ABS SYSTEM	214	WORLD TRANSM-BACK UP SIGNAL	SH2	SHIELD WIRE GRD		
150	ABS SYSTEM-SPARE	214A	BACK UP SIGNAL	SH3	SHIELD WIRE GRD		
150	WORLD TRANSM-ENGINE SPEED LO	214B	BACK UP SIGNAL	V5	A/C & HEAT SYSTEM-DRIVER'S HTR		
150	DDEC III-ECM BATTERY GRD	231	NEUTRAL SIGNAL GRD	V7	A/C & HEAT SYSTEM-DRIVER'S HTR		
150A	DDEC III-ECM BATTERY GRD	240	DDEC III-ECM 12V FEEDING				
151	DDEC III-ECM BATTERY GRD	241	DDEC III-ECM 12V FEEDING				
151	WORLD TRANSM-SERIAL COM. B	251	PRODRIVER-12V HOT WIRE				
151	ABS SYSTEM-SPARE	290	FAN CLUTCH RADIATOR				
152	ABS SYSTEM-SPARE	291	FAN CLUTCH RADIATOR SPD 1				
153	ABS SYSTEM	292	FAN CLUTCH RADIATOR SPD 2				
153	WORLD TRANSM-SPARE INPUT (-)	417	DDEC III-LIMIT SPEED GOVERNOR				
154	WORLD TRANSM-ABS RETARDER INPUT	419	DDEC III-CHECK ENGINE LIGHT				
155	WORLD TRANSM-SPARE INPUT (-)	439	DDEC III-12V IGNITION				
155	ABS SYSTEM	440	DDEC III-12V IGNITION				
156	WORLD TRANSM-THROTTLE POS.	440A	DDEC III-12V IGNITION				
156	ABS SYSTEM	451	DDEC III-A/C FAN CLUTCH				
156A	ABS SYSTEM	505	DDEC III-TACHOMETER DRIVE				
156C	ABS SYSTEM	509	DDEC III-STOP ENGINE LIGHT				
156W	ABS SYSTEM	510	DDEC III-FAST IDLE SIGNAL				
157	WORLD TRANSM-SPEEDOMETER SIGNAL	524	DDEC III-ENGINE BRAKE DISABLE				
157	ABS SYSTEM	525	DDEC III-FAST IDLE SIGNAL				
157A	ABS SYSTEM	528	DDEC III-STOP ENG. OVERRIDE				
157B	ABS SYSTEM	531	DDEC III-CRUISE CLUTCH RELEASE				
157C	ABS SYST.-CANCEL SEC. BRK	541	DDEC III-CRUISE SET SW				
158	WORLD TRANSM-DIMMER	543	DDEC III-CRUISE STOP SW CUT IN				
160	WORLD TRANSM-SER. INTERFACE (-)	544	DDEC III-CRUISE ON/OFF SW				
161	WORLD TRANSM-SIGNAL GRD	545	DDEC III-CRUISE RESUME SW				
161B	WORLD TRANSM-SIGNAL GRD	555	DDEC III-FAN CLUTCH SPEED* 1				
162	WORLD TRANSM-PRESS. SW C3	556	DDEC III-VEHICLE SPEED (*)				
163	WORLD TRANSM-RETARDER ENABLE	557	DDEC III-VEHICLE SPEED (-)				
164	WORLD TRANSM-RET. ACTUATOR SIGN	563	DDEC III-FAN CLUTCH SPEED* 2				
165	WORLD TRANSM-OIL LEVEL SIGNAL	583	DDEC III-ENGINE BRAKE 4 CYL.				
168	WORLD TRANSM-SER. INTERFACE (*)	750	PRODRIVER-ILLUMINATION LIGHT				
170C	LUGGAGE DOOR LOCK	900	DDEC III-DATA LINK (*)				
170D	LUGGAGE DOOR LOCK	901	DDEC III-DATA LINK (-)				
170E	LUGGAGE DOOR LOCK	908	DDEC III-HYDRAULIC TRANSM. MODUL.				
170F	LUGGAGE DOOR LOCK	916	DDEC III-SENSOR SUPPLY (5VDC)				
170G	LUGGAGE DOOR LOCK	952	DDEC III-SENSOR RETURN				
170H	LUGGAGE DOOR LOCK	953	DDEC III-BATTERY GRD				
170J	LUGGAGE DOOR LOCK	953C	DDEC III-BATTERY GRD				
170L	LUGGAGE DOOR LOCK	979	DDEC III-ENGINE BRAKE 2 CYL.				
170M	LUGGAGE DOOR LOCK	A	A/C & HEAT SYSTEM-HI PRES.				
170N	LUGGAGE DOOR LOCK	A1	A/C & HEAT SYSTEM-LO PRES.				
170P	LUGGAGE DOOR LOCK	A4	A/C & HEAT SYSTEM-CONTROL SW				
170R	LUGGAGE DOOR LOCK	A5	A/C & HEAT SYSTEM-CONTROL SW				
170S	LUGGAGE DOOR LOCK	A6	A/C & HEAT SYSTEM-CONTROL SW				
170V	LUGGAGE DOOR LOCK	L1	VIDEO SYSTEM- 110V				
170W	LUGGAGE DOOR LOCK	L1	INTERIOR LTS-110V FLUORESCENT				
170X	LUGGAGE DOOR LOCK	L1A	INTERIOR LTS-110V FLUORESCENT				
170Y	LUGGAGE DOOR LOCK	L1C	INTERIOR LTS-110V FLUORESCENT				
170Z	LUGGAGE DOOR LOCK	L2A	INTERIOR LTS-110V FLUORESCENT				
182	PYROMETER	L2C	INTERIOR LTS-110V FLUORESCENT				
182A	PYROMETER	L8	ENG.BLK & WATER TANK-HEATER				