

Electronic ground distribution

****Ground distribution:****
 0-Electric gnd
 00- Electronic Gnd

A-Dash - Lh console harness
 F-Front junction box harness
 FH-Front harness
 R-Rear junction box harness
 FR-Front to rear
 P-Parcel Rack
 RS-RJB to Rear Seat

