

Electronic ground distribution

Dash harness

Ground distribution:

- 0- Electric gnd
- 00- Electronic Gnd

- A-Dash - Lh console harness
- F-Front junction box harness
- FR-Front harness
- R-Rear junction box harness
- FR-Front to rear box

