

DIODES LIST

No	Location	Part #	Function	Page					
D1	FJB	561740	Accessoriesdiode	3.2					
D2	FJB	561740	Driverliquidsolenoiddiode	18.1					
D6	RJB	561740	FlybackdiodeMasterrelay	3.1					
D7	RH_Console	561740	Entracedooridiode	29.1					
D8	Evap_Cmpt	561740	Parcelrackliquidsolenoiddiode	18.3					
D9	Evap_Cmpt	561740	HVACdiode	17.1					
D10	Evap_Cmpt	561740	Pre-Heatdiode	17.1					
D11	Evap_Cmpt	561740	Passengersliquidsolenoiddiode	18.2					
D12	FJB	565973	Hornwhilefireextinguisherdiode	9.1					
D13	FJB	561740	Frontclearancelightsdiode	26.1					
D14	FJB	561740	FireExtinguisher	9.1					
D18	FJB	561740	5thluggagecompartementlightingdiode	25.1					
D29	RJB	561740	FlybackdiodeUnloader	18.2					
D30	Evap_Cmpt	561740	FlybackdiodeWaterpump	18.2					
D31	RJB	561740	FlybackdiodeA/Cclutch	18.2					
D32	Engine_Cmpt	561740	FlybackdiodeAirexhaust	11.1					
D33	RJB	561740	FlybackdiodeFlushingpump	11.1					
D41	FJB	561740	Avoidvoltagebackfeed	3.2					
D43	FJB	561740	Avoidvoltagebackfeed	3.2					
D44	FJB	561740	Ignitiondiode	3.2					
D60	RJB	560931	Offshoreheatingsystem	17.1					
D62.	Rear_Roof	561740	PeakRevdiode	18.5					
D63.	Rear_Roof	561740	PeakRevdiode	18.5					
D73	Evap_Cmpt	561740	Evaporatorrelaydiode	18.2					
D80	Evap_Cmpt	561740	Cutoffwaterpreheaterdiode	38.1					