

CONTROL VALVE OPT. "LOW-BUOY" , "A" OR "B" SETTING:

POSITION "A": VALVE IS OPEN, AIR FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS IN FUNCTION.

POSITION "B": VALVE CLOSED,

AIR DOES'NT FLOW BETWEEN SUPPLY (S) AND DELIVERY (D), LOW-BUOY IS NOT IN FUNCTION.

BALLOON	PIPE
*1	1/4" O.D. BLUE
*2	3/8" O.D. BLUE
*3	1/2" O.D. BLUE
* 4	1/4" O.D. BLACK
* 5	3/8" O.D. BLACK
*6	3/8" O.D. YELLOW

PREVOST®

DESCRIPTION:

H3 COACHES, WITH FRONT BEAM AXLE WITH KNEELING, LOW-BUOY & HIGH-COMBINATION

REV.: DATE: 2011/09

PAGE:

D140381 P6.1