

---

## TABLE OF CONTENTS

---

### STARTING AND STOPPING

#### PROCEDURES 4 - 1

General information.....	4 - 1
Detroit Diesel Electronic Control (DDEC).....	4 - 3
World Transmission WT Electronic Control System.....	4 - 4
Manual transmission.....	4 - 8
Cold weather starting.....	4 - 8
Daily inspection.....	4 - 9
Recommendations.....	4 - 10
Heating and air conditioning.....	4 - 11
Preheating systems.....	4 - 14
Windshield washer reservoir.....	4 - 15
Jump starting.....	4 - 16
Electric circuit protection.....	4 - 17
Tires.....	4 - 18
Towing.....	4 - 20
Jacking points.....	4 - 21
Retractable tag axle.....	4 - 21
Tag axle unloaded.....	4 - 21

#### TECHNICAL INFORMATION 5 - 1

Dimensions.....	5 - 1
Weights.....	5 - 2
Capacities.....	5 - 2
Fuel type.....	5 - 2
Wheels and tires.....	5 - 2
Belts.....	5 - 3
Engines.....	5 - 3
Transmissions.....	5 - 3
Drive axle ratio.....	5 - 3
Brakes.....	5 - 4
Steering.....	5 - 4
Electrical system.....	5 - 4
Sound system.....	5 - 4
Video system.....	5 - 4
Suspension.....	5 - 4

Alignment.....	5 - 5
Heating and air conditioning.....	5 - 5
Oil specifications.....	5 - 5
Antilock braking system (ABS).....	5 - 6
Preheating systems.....	5 - 6
Storage volume.....	5 - 6
Seats.....	5 - 7
DDEC III diagnostic codes.....	5 - 7
World transmission WT diagnostic codes.....	5 - 10
Light bulb data.....	5 - 25
Data plate and certification.....	5 - 27

#### CARE AND MAINTENANCE 6 - 1

Interior cleaning.....	6 - 1
Exterior cleaning.....	6 - 3
Oil verification.....	6 - 4
Air tanks.....	6 - 7
Coolant level verification.....	6 - 8
Water separator.....	6 - 8
Belt tensioners.....	6 - 8
A/C and heating air filters.....	6 - 10
Flexible hose maintenance.....	6 - 10
Lubrication.....	6 - 11
Fire extinguishers.....	6 - 11
110-120 volt in-station lighting.....	6 - 11
110-120 volt in-station connectors.....	6 - 11
Back-up camera.....	6 - 12
Filter restriction indicator.....	6 - 12
Lavatory maintenance.....	6 - 12
First service on new vehicle.....	6 - 14
Lubrication and servicing schedule.....	6 - 15

#### SERVICE LITERATURE 7 - 1

**P R E V O S T**

***XL Series Motorcoach  
SERVICE LITERATURE***

---

Additional copies of the following Service Literature are available upon request and at low cost.

**- Maintenance Manual**

**- Owner's Manual**

**- Parts Manual**

To order the desired Manual(s), please contact your local distributor or write to:

**PRÉVOST CAR INC.**

ATTN.: TECHNICAL PUBLICATIONS DEPARTMENT  
35 Gagnon Boulevard  
Sainte-Claire, Québec  
Canada, G0R 2V0  
Fax no.: (418) 883 - 4157

**Specify your vehicle's complete serial number. Allow 30 days for delivery.**

**PREVOST****XL Series Motorcoach  
INDEX****A**

A/C and heating air filters ..... 6 - 9  
 A/C compressor..... 6 - 6  
 Accelerator pedal ..... 2 - 25  
 Accessories ..... 2 - 38  
 Adjustable louver..... 2 - 5, 2 - 17, 2 - 40  
 Air filters, A/C & heating ..... 6 - 9  
 Air horn ..... 2 - 25, 3 - 5  
 Air system emergency fill valves..... 3 - 2  
 Air tanks ..... 6 - 7  
 Alarm, back up..... 3 - 3  
 Alarm system..... 3 - 6  
 Alignment..... 5 - 4  
 AM/FM stereo cassette ..... 2 - 17  
 Antilock braking system ..... 3 - 2, 5 - 6  
 Ashtray..... 2 - 17  
 Auxiliary sump tank draining ..... 6 - 12

**B**

Back-up alarm ..... 3 - 3  
 Back-up camera / TV monitor ..... 2 - 38, 6 - 11  
 Baggage compartment door locks..... 2 - 5  
 Battery disconnect switch, main ..... 2 - 2  
 Battery equalizers..... 4 - 18  
 Belts ..... 5 - 3  
 Belt tensioners..... 6 - 8  
 Blinds ..... 2 - 40  
 Brakes  
   ABS ..... 3 - 2, 5 - 6  
   Emergency and  
     parking brakes ..... 2 - 25, 3 - 1  
     Parking brake control..... 2 - 20, 3 - 1  
     Parking brake override ..... 2 - 20  
     Service brakes ..... 2 - 25, 3 - 1, 5 - 3  
 Breakers, main ..... 4 - 17

**C**

Capacities ..... 5 - 2  
 Card tables ..... 2 - 41  
  
 Care and maintenance ..... 6 - 1  
 Central A/C and heating controls ..... 2 - 17, 4 - 11  
 Changing wheels ..... 4 - 19  
 Chime, stop/service power switch ..... 2 - 5, 2 - 41  
 Cigarette lighter..... 2 - 17  
 Cleaning cabinet ..... 6 - 12  
 Cleaning, exterior ..... 6 - 3  
 Cleaning, interior ..... 6 - 1  
 Clutch pedal ..... 2 - 25  
 Coach final record ..... 5 - 28  
 Cold starting aid (Ether)..... 4 - 8  
 Compartments, exterior  
   A/C & heating ..... 2 - 36  
   Baggage ..... 2 - 35  
   Battery (XL-40) ..... 2 - 37  
   Condenser ..... 2 - 36  
   Engine..... 2 - 33, 2 - 34  
   Engine air intake ducts..... 2 - 33  
   Entrance door ..... 2 - 33  
   Fuel tank filling door ..... 2 - 33  
   L.H. side service (XL-45) ..... 2 - 36  
   Main power (XL-45)..... 2 - 36  
   Service doors ..... 2 - 36  
   Spare wheel and tire ..... 2 - 35  
   XL-40 (details) ..... 2 - 31  
   XL-45 (details) ..... 2 - 32  
 Compartments, interior  
   Lavatory ..... 2 - 37  
   Parcel racks..... 2 - 38  
   Safety equipment compartment..... 2 - 38  
 Controls and instrument panels..... 2 - 3  
 Coolant level verification..... 6 - 7  
 Cruise control switches..... 2 - 5, 2 - 6

**D**

Dashboard (without tachograph) ..... 2 - 9  
 Dashboard (with tachograph) ..... 2 - 10  
 Dashboard indicator/warning lights and instruments ..... 2 - 11  
 Daily inspection ..... 4 - 9  
 Daily walk-around inspection ..... 6 - 15  
 Data plate & certification ..... 5 - 27  
 Day time running lights ..... 3 - 5  
 Defensive driving ..... 3 - 8  
 DDEC III diagnostic codes ..... 5 - 7  
 Destination sign ..... 2 - 39  
 Detroit diesel electronic control (DDEC) ..... 4 - 3  
 Diagnostic data reader connector ..... 2 - 6  
 Dimensions ..... 5 - 1  
 Dome lights ..... 2 - 5  
 Door, entrance ..... 2 - 26  
 Door override ..... 2 - 20  
 DOT certification label ..... 5 - 28  
 Drive axle ratio ..... 5 - 3  
 Driver's A/C - heating system ctrls ..... 2 - 17, 4 - 12  
 Driver's coat hook ..... 2 - 39  
 Driver's fan ..... 2 - 39  
 Driver's light switch ..... 2 - 5  
 Driver's seat ..... 2 - 27  
 Driver's window ..... 2 - 38

**E**

Ether, cold starting aid ..... 4 - 8  
 Electrical system ..... 5 - 4  
 Electric circuit protection ..... 4 - 17  
 Electric horn ..... 2 - 24, 3 - 5  
 Emergency warning reflectors ..... 3 - 6  
 Engine  
     Block heater ..... 4 - 8  
     Compartment components ..... 2 - 31, 2 - 32  
     Data display and computer - Prodriver<sup>™</sup> ..... 2 - 18  
     DDEC ..... 4 - 3  
     DDEC III diagnostic codes ..... 5 - 7  
     Retarder (jacobs) ..... 2 - 5, 4 - 4  
     Starting (from driver's comp.) ..... 4 - 1  
     Starting (from engine comp.) ..... 4 - 2  
     Warm-up ..... 4 - 8

Engines ..... 5 - 3  
 EPA engine labels ..... 5 - 28  
 Exits, emergency  
     Entrance door ..... 3 - 4  
     Roof escape ..... 3 - 4  
     Side windows ..... 3 - 4  
 Exterior cleaning ..... 6 - 3  
 Exterior mirror heating switch ..... 2 - 5  
 Extinguishers, fire ..... 3 - 6, 6 - 10

**F**

Filter restriction indicator ..... 6 - 11  
 Fire extinguishers ..... 3 - 6, 6 - 10  
 Fire hatchet ..... 3 - 6  
 First aid kit ..... 3 - 6  
 First service on new vehicle ..... 6 - 13  
 Flexible hose maintenance ..... 6 - 9  
 Fluorescent lighting ..... 2 - 5  
 Fog lights switch ..... 2 - 16, 3 - 5  
 Foot-operated controls ..... 2 - 25  
 Fresh water reservoir draining ..... 6 - 11  
 Fresh water reservoir filling ..... 6 - 12  
 Fuel tank filling ..... 2 - 2  
 Fuel tank label ..... 5 - 29  
 Fuel type ..... 5 - 2  
 Fuses ..... 4 - 18

**G**

Galley ..... 2 - 41  
 Galley power switch ..... 2 - 6  
 General information ..... 4 - 1

**H**

Hatchet, fire ..... 3 - 6  
 Hazard flashers ..... 2 - 16  
 Heating and air conditioning  
     Central ..... 2 - 17, 4 - 11  
     Driver's ..... 2 - 17, 4 - 12  
     Ventilation ..... 4 - 11  
 Heating and air conditioning (tech. info) ..... 5 - 5  
 Horn, air ..... 2 - 25, 3 - 5  
 Horn, electric ..... 2 - 24, 3 - 5  
 Hose maintenance, flexible ..... 6 - 9

Hi-buoy / kneeling control switch ..... 2 - 5  
 Hi-buoy system..... 3 - 3  
 Hubodometer..... 2 - 41

**I**

Ignition switch ..... 2 - 15  
 In-station connectors (110 -120 volt) ..... 6 - 10  
 In-station lighting (110 -120 volt)..... 6 - 10  
 Interior cleaning..... 6 - 1  
 Interphone..... 2 - 39

**J**

Jacking points..... 4 - 21  
 Jack/tools..... 3 - 6  
 Jump starting ..... 4 - 16

**K**

Keys ..... 2 - 1  
 Kneeling / hi-buoy control switch ..... 2 - 5  
 Kneeling system ..... 3 - 3

**L**

Lavatory ..... 2 - 37  
 Lavatory maintenance..... 6 - 11  
 Lever, multifunction ..... 2 - 24  
 Lever, transmission retarder ..... 2 - 24  
 L.H. lower switch panel ..... 2 - 15  
 L.H. outside mirror control..... 2 - 6  
 L.H. side control panel..... 2 - 4  
 License holder ..... 2 - 39  
 Light bulb data ..... 5 - 25  
 Lighter, cigarette..... 2 - 17  
 Lighting, exterior ..... 2 - 16  
 Lighting, fluorescent ..... 2 - 5  
 Light switch, driver's ..... 2 - 5  
 Lights  
     Day time running..... 3 - 5  
     Fog ..... 3 - 5  
 Louver, adjustable ..... 2 - 5, 2 - 17, 2 - 40  
 Low-buoy system ..... 2 - 20, 3 - 3  
 Lubricant, part number specs ..... 6 - 21

Lubricant specifications ..... 6 - 20  
 Lubrication..... 6 - 10  
 Lubrication and servicing schedule ..... 6 - 14

**M**

Main battery disconnect switch ..... 2 - 2  
 Main breakers ..... 4 - 17  
 Main power compartment (XL-45)..... 2 - 36  
 Main sump tank draining ..... 6 - 12  
 Main sump tank filling ..... 6 - 12  
 Microphone jacks ..... 2 - 6, 2 - 17, 2 - 39  
 Mirrors  
     Exterior mirrors ..... 2 - 30  
     Heating switch ..... 2 - 5  
     Interior mirror ..... 2 - 29  
     L.H. outside mirror control..... 2 - 6  
     R.H. outside mirror control ..... 2 - 6  
 Mud flaps and splash guards ..... 2 - 40  
 Multifunction lever ..... 2 - 24

**N**

New vehicle, first service on ..... 6 - 13

**O**

Oil specification ..... 5 - 5  
 Oil verification  
     A/C compressor..... 6 - 6  
     Clutch pedal master cylinder ..... 6 - 6  
     Engine..... 6 - 4  
     Fan gearbox ..... 6 - 6  
     Power steering ..... 6 - 6  
     Transmission (automatic)..... 6 - 4  
     Transmission (manual) ..... 6 - 5  
     Wheel bearing ..... 6 - 6  
 Override, door ..... 2 - 20

**P**

PA system volume control ..... 2 - 17  
 Panels, control and instrument  
     Dashboard ..... 2 - 9, 2 - 10  
     L.H. lower switch panel ..... 2 - 15  
     L.H. side control panel ..... 2 - 4

R.H. console ..... 2 - 17  
 R.H. lower switch panel ..... 2 - 16  
 Parcel racks ..... 2 - 38  
 Parking brake control ..... 2 - 20, 2 - 25  
 Parking brake override ..... 2 - 20  
 Part number specifications (lubricants) ..... 6 - 21  
 Parts kit, spare ..... 2 - 42  
 Passenger seats ..... 2 - 29  
 Preheating systems  
   Espar ..... 2 - 20, 2 - 43, 4 - 14, 5 - 6  
   Webasto ..... 2 - 20, 2 - 44, 4 - 15, 5 - 6  
 Prodriver™ - Engine data  
 display and computer ..... 2 - 18

**Q**

"Quick Lounge" system ..... 2 - 41

**R**

Reading lamps ..... 2 - 5  
 Recommendations ..... 4 - 10  
 Reflectors, emergency warning ..... 3 - 6  
 Retractable tag axle ..... 4 - 21  
 R.H. console ..... 2 - 17  
 R.H. lateral console ..... 2 - 20  
 R.H. lower switch panel ..... 2 - 16  
 R.H. outside mirror control ..... 2 - 6

**S**

Safety attestation ..... 5 - 28  
 Safety equipment ..... 3 - 6  
 Safety equipment compartment ..... 2 - 38  
 Safety precautions ..... 3 - 7  
 Seat belts ..... 2 - 28  
 Seat, tour guide ..... 2 - 29  
 Seats ..... 2 - 27, 5 - 6  
 Seats, passenger ..... 2 - 29  
 Service literature ..... 7 - 1  
 Service, miscellaneous ..... 6 - 20  
 Service on new vehicle (first) ..... 6 - 13  
 Servicing and lubrication schedule ..... 6 - 14  
 Sound system ..... 5 - 4  
 Spare parts kit ..... 2 - 42  
 Speaker selector switch ..... 2 - 17  
 Splash guards and mud flaps ..... 2 - 40

Starting engine from driver's comp't ..... 4 - 1  
 Starting engine from engine comp't ..... 4 - 2  
 Steering ..... 5 - 4  
 Steering wheel and telescopic  
 column ..... 2 - 24, 2 - 26  
 Stereo receiver, AM/FM ..... 2 - 17  
 Stop/service chime power switch ..... 2 - 5, 2 - 41  
 Stop/service/reading lamp ..... 2 - 41  
 Storage volume ..... 5 - 6  
 Suspension ..... 5 - 4

**Switches**

Auxiliary A/C ..... 2 - 16  
 Baggage door lock ..... 2 - 5  
 Battery master switch ..... 2 - 15  
 Cruise control ..... 2 - 5, 2 - 6  
 Dome lights ..... 2 - 5  
 Ether cold starting aid ..... 2 - 15  
 Exterior lighting switch ..... 2 - 16  
 Fast idle ..... 2 - 15  
 Fluorescent lighting ..... 2 - 5  
 Fog lights ..... 2 - 16  
 Galley power ..... 2 - 6  
 Hazard flashers ..... 2 - 16  
 Ignition ..... 2 - 15  
 Kneeling/hi-buoy ..... 2 - 5  
 L.H. outside mirror control ..... 2 - 6  
 Light, driver's ..... 2 - 5  
 Mirror heating ..... 2 - 5  
 Reading lamps ..... 2 - 5  
 Retarder, engine ..... 2 - 5, 4 - 4  
 Retarder, transmission ..... 2 - 5, 4 - 4  
 R.H. outside mirror control ..... 2 - 6  
 "Stop Engine" override ..... 2 - 15  
 Stop/service chime ..... 2 - 5  
 Transmission  
 pushbutton shifter ..... 2 - 20, 2 - 21  
 Video power ..... 2 - 5  
 Video volume ..... 2 - 6

**T**

Tag axle, unloaded or retractable ..... 2 - 20, 4 - 21  
 Technical information  
   Alignment ..... 5 - 4  
   Belts ..... 5 - 3

- Brakes ..... 5 - 3  
Brakes (ABS) ..... 5 - 6  
Capacities ..... 5 - 2  
Coach final record ..... 5 - 28  
Data plate & certification ..... 5 - 27  
DDEC III diagnostic codes ..... 5 - 7  
Dimensions ..... 5 - 1  
DOT certification label ..... 5 - 28  
Drive axle ratio ..... 5 - 3  
Electrical system ..... 5 - 4  
Engines ..... 5 - 3  
EPA engine label ..... 5 - 28  
Fuel tank label ..... 5 - 29  
Fuel type ..... 5 - 2  
Heating and air conditioning ..... 5 - 5  
Light bulb data ..... 5 - 25  
Oil specifications ..... 5 - 5  
Preheating systems ..... 5 - 6  
Safety attestation ..... 5 - 28  
Seats ..... 5 - 6  
Sound system ..... 5 - 4  
Steering ..... 5 - 4  
Storage volume ..... 5 - 6  
Suspension ..... 5 - 4  
Transmissions ..... 5 - 3  
Transmission WT,  
diagnostic codes ..... 5 - 10  
Vehicle identification  
number (VIN) ..... 5 - 28  
Video system ..... 5 - 4  
Wheels and tires ..... 5 - 2  
Weight ..... 5 - 2  
Tires and wheels ..... 4 - 18, 5 - 2  
Tools/jack ..... 3 - 6  
Tour guide seat ..... 2 - 29  
Towing ..... 4 - 20  
Transmission  
Automatic ..... 2 - 21  
Clutch pedal ..... 2 - 25  
Cooler circuit ..... 4 - 5  
DDR, diagnostic data reader ..... 2 - 6, 4 - 6  
Diagnostic code list  
and description ..... 2 - 6, 4 - 6  
Diagnostic codes ..... 4 - 6, 5 - 10  
Diagnostic telltales ..... 4 - 6  
Electronic control system WT ..... 4 - 4  
Fill pipe protection ..... 4 - 7  
Importance of proper oil level ..... 4 - 7  
Lever, retarder ..... 2 - 24  
Light, do not shift ..... 4 - 6  
Manual ..... 2 - 23, 4 - 8  
Oil level sensor (OLS) codes ..... 4 - 7  
Oil level sensor, readout of ..... 4 - 7  
Operation (automatic) ..... 2 - 22  
Planetary gears & clutches ..... 4 - 5  
Pushbutton shifter ..... 2 - 20, 2 - 21  
Retarder, output ..... 2 - 5, 4 - 5  
Torque converter ..... 4 - 4  
Warm-up ..... 4 - 9  
Transmissions ..... 5 - 3
- V**
- Vehicle identification number (VIN) ..... 5 - 28  
Video system  
Power switch ..... 2 - 5  
Remote control ..... 2 - 7  
Technical information ..... 5 - 4  
Volume ..... 2 - 6
- W**
- Waste container ..... 2 - 39  
Water separator ..... 6 - 8  
Weight ..... 5 - 2  
Wheel bearing oil level ..... 6 - 6  
Wheels, changing ..... 4 - 19  
Wheels and tires ..... 5 - 2  
Windshield washer reservoir ..... 4 - 15

---

**P R E V O S T**

**XL Series Motorcoach  
NOTICE**

United States Operators please notice:

Effective with this publication, the National Highway Traffic Safety Administration has requested that the following statement be provided for your information.

*If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Prévost Car Inc..*

*If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Prévost Car Inc..*

*To contact NHTSA you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, DC area) or write to: NHTSA, U.S. Department of Transportation, Washington, DC 20590. You can also obtain other information about motor vehicle safety from the Hotline.*

---



**P R E V O S T**

***XL Series Motorcoach***  
**CHANGE OF ADDRESS OR OWNERSHIP**

Any change of address or ownership should be brought to the attention of the manufacturer by completing and mailing the attached card.

**CHANGE OF ADDRESS**

VEHICLE SERIAL NUMBER: 2P9 \_ 334 \_ \_ \_ 1001 \_ \_ \_

OLD ADDRESS→

NAME: \_\_\_\_\_  
 STREET NO./APT.: \_\_\_\_\_  
 CITY: \_\_\_\_\_  
 STATE/PROVINCE: \_\_\_\_\_  
 ZIP/POSTAL CODE: \_\_\_\_\_  
 TEL/FAX NO.: \_\_\_\_\_

NEW ADDRESS→

STREET NO./APT.: \_\_\_\_\_  
 CITY: \_\_\_\_\_  
 STATE/PROVINCE: \_\_\_\_\_  
 ZIP/POSTAL CODE: \_\_\_\_\_  
 TEL/FAX NO.: \_\_\_\_\_

CUT ON DOTTED LINES

**CHANGE OF OWNERSHIP**

VEHICLE SERIAL NUMBER: 2P9 \_ 334 \_ \_ \_ 1001 \_ \_ \_

The ownership of this vehicle is transferred

FROM→

NAME: \_\_\_\_\_  
 STREET NO./APT.: \_\_\_\_\_  
 CITY: \_\_\_\_\_  
 STATE/PROVINCE: \_\_\_\_\_  
 ZIP/POSTAL CODE: \_\_\_\_\_  
 TEL/FAX NO.: \_\_\_\_\_

TO→

NAME: \_\_\_\_\_  
 STREET NO./APT.: \_\_\_\_\_  
 CITY: \_\_\_\_\_  
 STATE/PROVINCE: \_\_\_\_\_  
 ZIP/POSTAL CODE: \_\_\_\_\_  
 TEL/FAX NO.: \_\_\_\_\_

CUT ON DOTTED LINES

affix  
stamp  
here

**P R E V O S T**

PRÉVOST CAR INC.  
35 Boul. Gagnon  
Ste Claire (Québec)  
CANADA, G0R 2V0

AFTER-SALES SERVICE DEPARTMENT

affix  
stamp  
here

**P R E V O S T**

PRÉVOST CAR INC.  
35 Boul. Gagnon  
Ste Claire (Québec)  
CANADA, G0R 2V0

AFTER-SALES SERVICE DEPARTMENT

---