

PREVOST

XL Series Motorcoach *TABLE OF CONTENTS*

FOREWORD	1 - 1	Exterior compartments (XL-45)	2 - 35
		Engine compartment doors	2 - 36
CONTROLS/INSTRUMENTS	2 - 1	Engine air intake ducts	2 - 36
Keys	2 - 1	Fuel tank filling door	2 - 36
Main battery disconnect switch	2 - 2	Entrance door	2 - 36
Fuel tank filling	2 - 2	Engine compartment components	2 - 37
Controls and instrument panels	2 - 3	Baggage compartment	2 - 38
L.H. side control panel	2 - 4	Spare wheel & tire compartment	2 - 38
Cruise control switches	2 - 5	A/C & heating and condenser compartment	
Dashboard (without tachograph)	2 - 7	doors	2 - 39
Dashboard (with tachograph)	2 - 8	Service doors	2 - 39
Dashboard indicator/warning lights	2 - 9	L.H. side rear service compartment and	
L.H. lower switch panel	2 - 14	main power compartment	2 - 39
R.H. lower switch panel	2 - 15	Battery compartment	2 - 40
R.H. console	2 - 15	Interior compartments	2 - 40
Audio/Video control unit.	2 - 16	Lavatory	2 - 40
Public address (P.A.)	2 - 18	Parcel racks	2 - 41
Video cassette player	2 - 19	Safety equipment compartment	2 - 41
TV tuner	2 - 19	Accessories	2 - 41
Detroit diesel PRODRIVER™ controls	2 - 20	Preheating system timers (auxiliary)	2 - 46
R.H. lateral console	2 - 22		
Automatic transmission	2 - 23	SAFETY	3 - 1
Manual transmission	2 - 25	Brakes	3 - 1
Steering column controls	2 - 26	Antilock braking system (ABS)	3 - 2
Foot-operated controls	2 - 27	Air system emergency fill valve	3 - 2
Tilt steering wheel and telescopic steering		Back up alarm	3 - 3
column	2 - 28	Kneeling system	3 - 3
Entrance door	2 - 28	Hi-buoy system	3 - 3
Seats	2 - 29	Low-buoy system	3 - 3
Driver's seat	2 - 29	Emergency exits	3 - 4
Seat belts	2 - 31	Day time running lights	3 - 5
Passenger seats	2 - 31	Fog lights	3 - 5
Tour guide seat	2 - 32	Horns	3 - 5
Mirrors	2 - 32	Alarm system	3 - 6
Exterior compartments (XL-40)	2 - 34	Safety equipment	3 - 6

TABLE OF CONTENTS

Safety precautions.....	3 - 7
Defensive driving.....	3 - 8

**STARTING AND STOPPING
PROCEDURES 4 - 1**

General information.....	4 - 1
Detroit Diesel Electronic Control (DDEC).....	4 - 2
World Transmission WT Electronic Control System.....	4 - 3
Manual transmission.....	4 - 7
Cold weather starting.....	4 - 7
Daily inspection.....	4 - 8
Recommendations.....	4 - 9
Heating and air conditioning.....	4 - 10
Preheating systems.....	4 - 13
Windshield washer reservoir.....	4 - 14
Jump starting.....	4 - 15
Electric circuit protection.....	4 - 16
Tires.....	4 - 18
Jacking points.....	4 - 20
Towing.....	4 - 20
Retractable tag axle.....	4 - 21
Tag axle unloaded.....	4 - 21

TECHNICAL INFORMATION 5 - 1

Dimensions.....	5 - 1
Weights.....	5 - 2
Capacities.....	5 - 2
Fuel type.....	5 - 2
Wheels and tires.....	5 - 2
Belts.....	5 - 3
Engines.....	5 - 3
Transmissions.....	5 - 3
Drive axle ratio.....	5 - 3
Brakes.....	5 - 4
Antilock braking system (ABS).....	5 - 4
Steering.....	5 - 4
Electrical system.....	5 - 4

Sound system.....	5 - 5
Video system.....	5 - 5
Suspension.....	5 - 5
Alignment.....	5 - 5
Heating and air conditioning.....	5 - 5
Oil specifications.....	5 - 6
Preheating systems.....	5 - 7
Storage volume.....	5 - 7
Seats.....	5 - 7
Data plate and certification.....	5 - 7
Light bulb data.....	5 - 10
DDEC III diagnostic codes.....	5 - 12
World transmission WT diagnostic codes.....	5 - 14

CARE AND MAINTENANCE 6 - 1

Interior cleaning.....	6 - 1
Exterior cleaning.....	6 - 3
Oil verification.....	6 - 4
Air tanks.....	6 - 7
Coolant level verification.....	6 - 7
Water separator.....	6 - 7
Belt tensioners.....	6 - 8
A/C and heating air filters.....	6 - 8
Flexible hose maintenance.....	6 - 9
Lubrication.....	6 - 9
Fire extinguishers.....	6 - 9
110-120 volt in-station lighting.....	6 - 9
110-120 volt in-station connectors.....	6 - 9
Back-up camera.....	6 - 10
Filter restriction indicator.....	6 - 10
Lavatory maintenance.....	6 - 10
First service on new vehicle.....	6 - 12
Lubrication and servicing schedule.....	6 - 13

SERVICE LITERATURE 7 - 1

PREVOST

XL Series Motorcoach **TABLE OF CONTENTS**

FOREWORD	1 - 1	Exterior compartments (XL-45)	2 - 35
		Engine compartment doors	2 - 36
CONTROLS/INSTRUMENTS	2 - 1	Engine air intake ducts	2 - 36
Keys	2 - 1	Fuel tank filling door	2 - 36
Main battery disconnect switch	2 - 2	Entrance door	2 - 36
Fuel tank filling	2 - 2	Engine compartment components	2 - 37
Controls and instrument panels	2 - 3	Baggage compartment	2 - 38
L.H. side control panel	2 - 4	Spare wheel & tire compartment	2 - 38
Cruise control switches	2 - 5	A/C & heating and condenser compartment doors	2 - 39
Dashboard (without tachograph)	2 - 7	Service doors	2 - 39
Dashboard (with tachograph)	2 - 8	L.H. side rear service compartment and main power compartment	2 - 39
Dashboard indicator/warning lights	2 - 9	Battery compartment	2 - 40
L.H. lower switch panel	2 - 14	Interior compartments	2 - 40
R.H. lower switch panel	2 - 15	Lavatory	2 - 40
R.H. console	2 - 15	Parcel racks	2 - 41
Audio/Video control unit	2 - 16	Safety equipment compartment	2 - 41
Public address (P.A.)	2 - 18	Accessories	2 - 41
Video cassette player	2 - 19	Preheating system timers (auxiliary)	2 - 46
TV tuner	2 - 19		
Detroit diesel PRODRIVER™ controls	2 - 20	SAFETY	3 - 1
R.H. lateral console	2 - 22	Brakes	3 - 1
Automatic transmission	2 - 23	Antilock braking system (ABS)	3 - 2
Manual transmission	2 - 25	Air system emergency fill valve	3 - 2
Steering column controls	2 - 26	Back up alarm	3 - 3
Foot-operated controls	2 - 27	Kneeling system	3 - 3
Tilt steering wheel and telescopic steering column	2 - 28	Hi-buoy system	3 - 3
Entrance door	2 - 28	Low-buoy system	3 - 3
Seats	2 - 29	Emergency exits	3 - 4
Driver's seat	2 - 29	Day time running lights	3 - 5
Seat belts	2 - 31	Fog lights	3 - 5
Passenger seats	2 - 31	Horns	3 - 5
Tour guide seat	2 - 32	Alarm system	3 - 6
Mirrors	2 - 32	Safety equipment	3 - 6
Exterior compartments (XL-40)	2 - 34		

The PRÉVOST "XL Motorcoach" Operator's Manual has been prepared to thoroughly acquaint you, the operator, with vehicle equipment and features in order to fully appreciate and safely enjoy your vehicle. Of course, you are anxious to drive your new coach and test its features, but first please read this publication carefully for enjoyable and trouble free operation, while ensuring optimum safety and passenger comfort.

This book should be kept inside the vehicle at all times for convenient reference. It is also suggested that it remain with the vehicle at the time of resale. Please notify PRÉVOST CAR INC. when the vehicle's ownership is transferred so that our records can be kept up to date. Do this by filling out the appropriate form at the end of this manual.

The specifications, descriptions and figures given are based on the latest information available at printing time. And because at PRÉVOST, we are constantly striving to better our product, we reserve the right to make changes at any time without notice and/or obligation on our part.

Please note that this publication applies only to XL Motorcoaches, manufactured by PRÉVOST CAR INC.. It describes and explains all the equipment and options available for installation in our factory. Therefore, there may be equipment described herein that is not installed on your vehicle.

This Manual encompasses both XL-40 & XL-45 models; therefore, variations between them are identified as such.

This manual, or portions thereof, cannot be reproduced in any form whatsoever, in whole or in part, without the written consent of PRÉVOST CAR INC.

The following words are used to emphasize particularly important information:

WARNING: *Identifies instructions which if not followed, could result in serious personal injury or loss of life.*

CAUTION: *Denotes instructions which if not followed, could cause serious damage to vehicle components.*

NOTE: *Indicates supplementary information needed to fully understand and complete an instruction.*

For your own safety and to ensure prolonged service life of your coach, heed our cautions, warnings and notes; Ignoring them could result in extensive damage and/or serious personal injury.