

## QUICK REFERENCE GUIDE

# SOUND SELECTOR, VR300 RADIO & GPS NAVIGATION SYSTEM

## VSS-04 SOUND SELECTOR



**Power switch:** there is no power button. The unit turns on automatically when the ignition switch is set to ACC or ON position and turns off when the ignition switch is set to OFF position. Start image shows "SOUND AND VISION".

**DRIVER:** press to adjust sound settings and select audio/video source for the driver's area. Driver's and passenger's systems are independent systems. RAD1 is default source.

**CABIN:** press to adjust sound settings and select audio/video source for the passenger's area.

**VOLUME/VALUE:** turn to adjust volume level or sound settings value for the selected audio/video source (RAD1 is default source). Each source has independent settings of volume, bass, treble, etc.

Press repeatedly to select sound settings. Settings will change as follow:



### NOTE

Some components like the standard radio, the satellite radio and the DVD Player have their own audio controls (volume, bass, treble, balance, fade, etc.). These audio controls should be adjusted once at the beginning and should not be changed after.

If volume level or sound quality adjustments are required, they should be made using the VSS-04 Sound Selector only.

#### Presets of the audio controls:

- Adjust each radio and DVD Player own volume level between 50% and 75% of their output range (DVD Player volume on remote control).
- Adjust radio's own bass, treble, balance and fade settings value to 0.

**CAM1:** press to turn on the optional panoramic view camera. The video monitors turn on automatically. Press a second time to turn off. This function can be selected simultaneously with an audio function like the radio, the driver or guide microphone or a CD player.

### NOTE

The back-up camera turns on automatically when the transmission selector is set to reverse "R".

**CAM2:** press to select an optional second panoramic view camera if equipped as current video source. Press a second time to cancel. This function can be selected simultaneously with an audio function like the radio, the driver or guide microphone or a CD.

**AUX1, AUX2:** press to select an auxiliary audio/video source like a second VHS.

**NAV:** press to select the navigation system display as current video source for the passenger's area. Press a second time to cancel.

**LOUD:** press to increase the low frequencies level of the selected audio/video source. Press a second time to cancel.

**REM:** press to enable use of the remote control to operate selection of sources, settings of volume, bass, treble, etc. Press a second time to cancel use of the remote control.

### NOTE

Point the remote control in direction of the Sound Selector.

**RAD1:** press to select the dashboard radio as current audio source for the chosen area.

**RAD2:** press to select an optional radio (satellite radio for example) as current audio source for the chosen area.

**D-MIC:** press to turn on driver microphone. A gong can be heard and the current audio source volume in the passenger's area is reduced. Press a second time to turn off. When the microphone is activated, turn VOLUME/VALUE button to adjust volume value between 18 and 20. Also, you can turn on the microphone simply by pressing its on/off switch.

### NOTE

#### Adjustment for background music

When microphone is activated, the current audio source volume will reduce to a certain level which as been set at the factory. To adjust it, proceed as follows:

- Press **AUX1** and **VOLUME/VALUE** at the same time.
- Turn **VOLUME/VALUE** knob to adjust the background music volume.
- Press **AUX1** and **VOLUME/VALUE** once again to save the setting.

#### Adjustment for gong sound

If desired, a gong will sound upon activating of the microphone. This gong will also sound when a passenger activates the service bell. Gong sound level can be adjusted as follows:

- Press **AUX2** and **VOLUME/VALUE** at the same time.
- Turn **VOLUME/VALUE** knob to adjust gong volume.
- Press **AUX2** and **VOLUME/VALUE** once again to save the setting.

The gong sound heard upon activating of the microphone can be disabled. To do so, press simultaneously **VOLUME/VALUE** and **D-MIC** repeatedly to enable/disable the gong sound. The controller will then display MGONG N (gong disabled) or MGONG Y (gong enabled).

**G-MIC:** press to turn on the guide microphone. Press a second time to turn off. When the microphone is activated, turn VOLUME/VALUE button to adjust volume value between 18 and 20. Also, you can turn on the microphone simply by pressing its on/off switch.


**CD1, CD2, CD3:** press to select up to 3 different remote CD players as current source.

**DVD1:** press to select DVD Player #1 as current source.

**DVD2:** press to select DVD Player #2 as current source.

**VHS:** press to select VHS as current source.

## VR300 RADIO

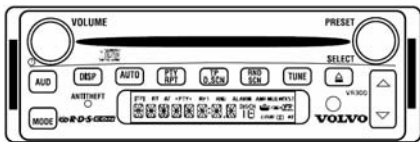


### POWER ON/OFF

Press  to turn ON/OFF

### CLOCK

#### Select a 12-hour or 24-hour style time display

Press  and hold for 3 seconds until 12/24 is displayed

The number shown beside 12/24 indicates which format is selected (12-hour or 24-hour). To change this number...

Press 

Selection will be saved after 5 seconds

#### Setting time of day

Press  and hold for 3 seconds

Turn  to display **TIMESET**

Press  and turn to correct hour

Press  until minutes flash and turn to correct minutes

Selection will be saved after 5 seconds



### AUDIO CONTROLS

#### Volume

Turn  to adjust volume between  and . Afterwards, use Sound Selector to adjust volume



#### Balance control

Press  repeatedly to display **BAL**

Turn  to adjust balance to . Afterwards, use Sound Selector to adjust balance

#### Fade control

Press  repeatedly to display **FADE**

Turn  to adjust fade to . Afterwards, use Sound Selector to adjust fade


#### Treble, Bass control

Press  repeatedly to display **TREB** or **BASS**

Turn  to adjust treble or bass to  (flat). Afterwards, use Sound Selector to adjust treble or bass

### TUNING THE RADIO

#### Band select


Press  repeatedly to display desired band (AM, FM, WX (weather), CD...)

#### Tune


Press 

Turn  to tune manually

#### Seek

Press  up or down to seek next higher or lower station


#### Scan

Press  and hold momentarily to scan for stations. To stop scan, press UP/DOWN rocker button.

### PRESETS (18 FM, 12 AM & 6 WX preset channels)

#### Storing preset stations


Tune to the desired station

Push  and release. **STORE** and a flashing preset number display

Turn  to change preset number


Push  to store station at that preset number

#### Accessing the preset stations

Turn  to choose preset station


#### Preset Scan

To scan through your presets

Press  to display **PSCN** and begin scanning presets. To stop the scan, press **SCN** button again.

#### Auto-Store preset

To automatically store 18 stations

Press  to scan for strongest signals and store as presets

Press **AUTO** button to cancel the Auto-Store function.

### COMPACT DISC (CD) PLAYER


#### CD select

Insert a CD in the radio's CD slot and it will automatically begin to play. If the radio is in another mode and a CD is already in the player...

Press  until CD is displayed

Press  up/down rocker button

#### Next/previous track

Turn  clockwise to skip forward or counterclockwise to skip backward to next track.

## GPS NAVIGATION SYSTEM

### QUICK START

Below you will find a quick reference guide which describes the process for entering a bus line company home base address and start guidance to bring the coach home after taking delivery at Prevost facility, in simple, brief steps.

As soon as the navigation system is operational, an instruction about using the system appears in the display. Read this instruction and confirm it by pressing the OK button on the remote control.

The start menu appears after you have confirmed the user instruction.



- Use the cursor buttons **◀, ▶, ▲, ▼** on the remote control to select "Navigation" menu (checked flag) in the "Start menu".



The "Navigation" menu appears.

If your destination is in a state other than the displayed state, first select the destination state from the list of available states.

- Use the cursor buttons **◀, ▶, ▲, ▼** to move the cursor (colored marking) to the state item.
- Press **OK** button.
- Use the cursor buttons **▲, ▼** to select the destination state from the list.
- Press **OK** button to confirm the selection.

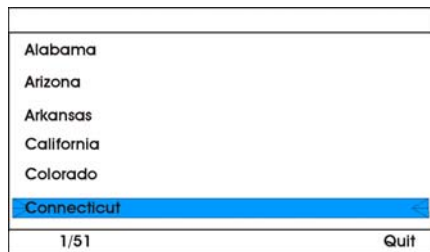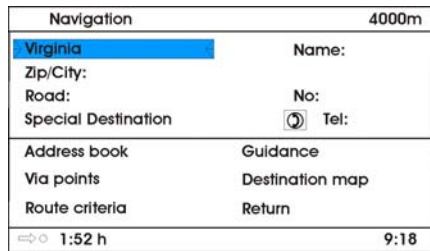


In the same manner, enter the destination address under "Zip/City" and "Road". To do so, highlight the relevant characters and then confirm with the **OK** button.

- Use the cursor buttons **◀, ▶, ▲, ▼** to move the cursor (colored marking).
- Press **OK** button to confirm the selection.




 Under "Name", you can give a free-text name to the address.

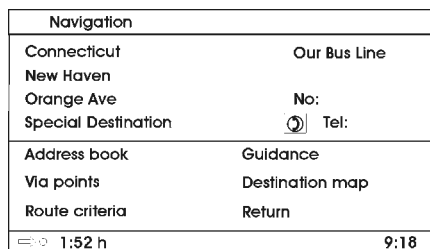

Because this is our home base address, we will store it in the address book under Home category.

- Use the cursor buttons to select "Address book" and press **OK** button.
- Select "Store address" and confirm with the **OK** button.

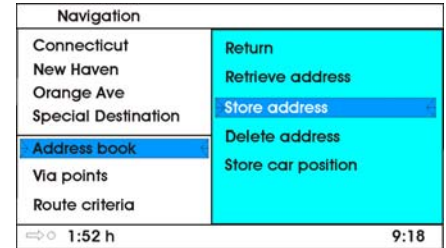


- Select the desired address-book category (home, work, private or business) and confirm with the **OK** button.

The displayed address is stored as Home address.



Select "Guidance" and press **OK** button to start guidance.

 You will be given the first guidance message after just a short time.

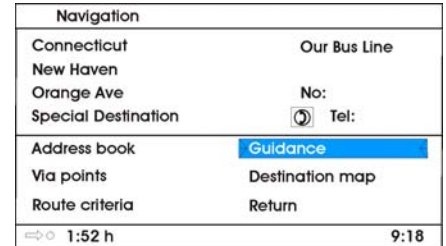


Press the Navigation button to switch between the various guidance screen types (symbol display, map display, split-screen display).

### Language


To change the screen display and voice guidance language:

English ↔ French, Spanish ↔ English

- In the Start menu, select the "Config. du système/Settings" menu icon  and press **OK** button.
- The "Config. du système/System settings" menu appears.
- Select "Réglages généraux/General settings" and press **OK** button.
- Select "Langue/Language" and press **OK** button.
- Select desired language and store with "Return".

## FURTHER DETAILS

### Remote control

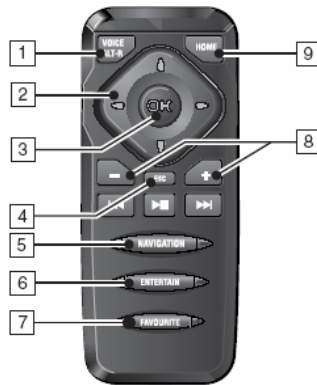

- ① **VOICE/ALT-R** *Press briefly: Calls up the current audible guidance message.  
Press and hold: Switches to "Alternative Route" menu.*
- ② **◀, ▶, ▲, ▼** *Cursor buttons. Move the cursor in the menus.*
- ③ **OK** *Confirms a selection.*
- ④ **ESC** *Press briefly: Jumps back to the previous menu.  
Press and hold: jumps directly to the Start menu.*
- ⑤ **NAVIGATION** *Press briefly: Switches the display type of the guidance screen.  
Press and hold: Moves directly to the Start menu.*
- ⑥ **ENTERTAIN** *Press briefly: calls up the previous used entertainment source.*
- ⑦ **FAVORITE** *Button freely programmable to provide direct access to selected functions.*
- ⑧ **-, +** *Volume setting. Press the + or - button once or several times to increase or decrease the volume of the audible messages.*
- ⑨ **HOME** *Press briefly: Adopts the address stored under "Home" in the directional guidance.  
Press and hold: Adopts the address stored under "Work" in the directional guidance.*

### Menu operation

The central elements for operating the menu are the cursor buttons ◀, ▶, ▲, ▼ and the OK button.

- Press the cursor buttons to move the cursor (colored marking) to the desired menu item.
- Press the OK button to confirm the selection and activate the function.
- Press the OK button to adopt the settings.
- Press the ESC button to quit the menu without adopting the set value or to move back a menu level.

### Switching on/off

The navigation computer is switched on and off together with the ignition.

As soon as the navigation system is operational, an instruction about using the system appears in the display. Read this instruction and confirm it by pressing the OK button on the remote control. The Start menu appears.

### Start menu

The Start menu appears after you have confirmed the user instruction. In the Start menu, the following menu options are available.



- Navigation** Calls up the main navigation menu (e.g. for destination input, guidance, address book, etc.).
- Map** Calls up the previous selected guidance screen.
- Travel info** Calls up the menu with the available C-IQ travel information products (e.g. travel guide, restaurant and hotel guide).
- Emergency** Display the Emergency menu with the current vehicle location and the national emergency telephone number. In addition, you can program a telephone number for a breakdown service.
- Info** Calls up the Info menu with TMC traffic information. Other information relating to the current route is available.
- Trip computer** Calls up the trip computer display with the trip data and the current GPS position.
- Telephone** Calls up the Telephone menu (this entry appears only if a relevant system upgrade is connected).
- Bluetooth** Calls up the Pairing menu (this entry appears only if a relevant system upgrade is connected).
- TV/Video** Switches to the connected TV/video source (e.g. TV tuner) (this entry appears only if a relevant system upgrade is connected).
- C-IQ** Calls up the C-IQ menu. Here, you can activate C-IQ products and manage your C-IQ products.
- Settings** For the individual adjustment of the navigation system.
- Stand-by** Switches the system into stand-by mode. Press the OK button to reactivate the system.