


Carrier® Compressor

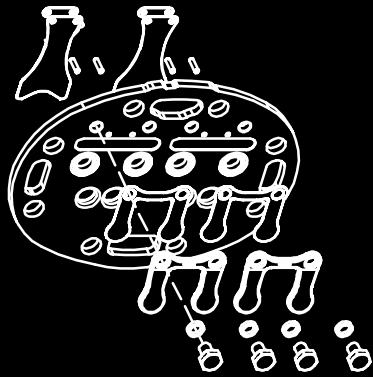

WORKSHOP MANUAL
for
**MODEL 05G TWIN PORT
COMPRESSOR**



TRANSICOLD

WORKSHOP MANUAL

MODEL 05G TWIN PORT

COMPRESSOR

SAFETY SUMMARY

GENERAL SAFETY NOTICES

The following general safety notices supplement the specific warnings and cautions appearing elsewhere in this manual. They are recommended precautions that must be understood and applied during maintenance of the equipment covered herein. The general safety notices are presented in the following three sections labeled: First Aid, Operating Precautions and Maintenance Precautions. A listing of the specific warnings and cautions appearing elsewhere in the manual follows the general safety notices.

FIRST AID

An injury, no matter how slight, should never go unattended. Always obtain first aid or medical attention immediately.

OPERATING PRECAUTIONS

Always wear safety glasses.

No work should be performed on the unit until all circuit breakers and start-stop switches are turned off, and power supply is disconnected.

Always work in pairs. Never work on the equipment alone.

MAINTENANCE PRECAUTIONS

Be sure power is turned off before working on motors, controllers, solenoid valves and electrical control switches. Tag circuit breaker and power supply to prevent accidental energizing of circuit.

Do not bypass any electrical safety devices, e.g. bridging an overload, or using any sort of jumper wires. Problems with the system should be diagnosed, and any necessary repairs performed, by qualified service personnel.

WARNING AND CAUTION STATEMENTS

To help identify the label hazards on the unit and explain the level of awareness each one carries, an explanation is given with the appropriate consequences:



DANGER - warns against an immediate hazard which **WILL** result in severe personal injury or death.



WARNING - warns against hazards or unsafe conditions which **COULD** result in severe personal injury or death.



CAUTION - warns against potential hazard or unsafe practice which could result in minor personal injury, or product or property damage.

NOTE

NOTE - gives helpful information that may help and avoid equipment and property damage.

SPECIFIC WARNING AND CAUTION STATEMENTS

The statements listed below are specifically applicable to this unit and appear elsewhere in this manual. These recommended precautions must be understood and applied during operation and maintenance of the equipment covered herein.



WARNING

Do not operate compressor unless suction and discharge service valves are open.



WARNING

Midseat service valves or by other means relieve pressure in replacement compressor before removing plugs.



WARNING

Do not unscrew capscrews all the way before breaking seal. Entrapped pressure could result in injury.



CAUTION

The high capacity oil pump must be set to rotate in the same direction as the crankshaft. (Refer to Section 3.5)



CAUTION

Ensure that thrust washer does not fall off dowel pins while installing oil pump.



CAUTION

Do not allow crankshaft to drop on connecting rods inside the crankcase when removing the crankshaft.



CAUTION

Do not allow crankshaft to drop on connecting rods inside the crankcase when installing the crankshaft.

TABLE OF CONTENTS

PARAGRAPH NUMBER	Page
SAFETY SUMMARY	Safety-1
GENERAL SAFETY NOTICES	Safety-1
FIRST AID	Safety-1
OPERATING PRECAUTIONS	Safety-1
MAINTENANCE PRECAUTIONS	Safety-1
WARNINGS AND CAUTIONS	Safety-1
SPECIFIC WARNINGS AND CAUTIONS	Safety-2
DESCRIPTION	1-1
1.1 INTRODUCTION	1-1
1.2 GENERAL DESCRIPTION	1-1
1.3 COMPRESSOR REFERENCE DATA	1-1
1.4 DETAILED DESCRIPTION	1-3
1.4.1 Service Valves	1-3
1.4.2 Suction And Discharge Valves	1-3
1.4.3 Lubrication System	1-3
1.4.4 Shaft Seal Reservoir	1-3
1.5 COMPRESSOR UNLOADERS	1-4
1.5.1 Electric-Controlled Unloaders	1-4
1.5.2 Pressure-Operated Unloaders	1-5
COMPRESSOR REPLACEMENT	2-1
2.1 COMPRESSOR REMOVAL	2-1
2.2 COMPRESSOR REPLACEMENT	2-1
2.2.1 Installing Compressor Unloaders	2-1
2.2.2 INSTALLING COMPRESSOR	2-2
COMPRESSOR MAINTENANCE	3-1
3.1 SHAFT SEAL RESERVOIR	3-1
3.2 INTRODUCTION	3-1
3.3 INSPECTION AND PREPARATION FOR REASSEMBLY	3-1
3.4 CYLINDER HEAD AND VALVE PLATE	3-1
3.4.1 Disassembly	3-1
3.4.2 Reassembly	3-1
3.5 OIL PUMP AND BEARING HEAD	3-2
3.5.1 Removal	3-3
3.5.2 Disassembly, & Inspection	3-3
3.5.3 Reassembly	3-3
3.6 SHAFT SEAL	3-3
3.6.1 Disassembly	3-3
3.6.2 Reassembly	3-4
3.7 COMPRESSOR RUNNING GEAR REMOVAL	3-4
3.7.1 Bottom Plate, Strainer, and Connecting Rod Caps	3-4
3.7.2 Crankshaft and Seal End Thrust Washer	3-5
3.7.3 Pistons, Rods, and Rings	3-5
3.7.4 Seal End Main Bearings	3-6

PARAGRAPH NUMBER	Page
3.8 COMPRESSOR RUNNING GEAR REASSEMBLY	3-6
3.8.1 Seal End Main Bearings	3-6
3.8.2 Pistons, Rods, and Rings	3-6
3.8.3 Crankshaft and Seal End Thrust Washer	3-7
3.8.4 Bottom Plate, Strainer, and Connecting Rod Caps	3-7
3.9 SUCTION STRAINER	3-7
3.10 ADDING OIL	3-7
3.11 INSTALLING COMPRESSOR	3-7

LIST OF ILLUSTRATIONS

FIGURE NUMBER	Page
Figure 1-1. Model 05G Compressor	1-2
Figure 1-2. Suction & Discharge Valve	1-3
Figure 1-3. Oil Pump	1-3
Figure 1-4. Shaft Seal Reservoir	1-3
Figure 1-5. Compressor Unloader	1-4
Figure 1-6. Electric-Operated Unloader-Unloaded Operation	1-4
Figure 1-7. Electric-Operated Unloader-Loaded Operation	1-5
Figure 1-8. Pressure-Operated Unloader Loaded Operation	1-5
Figure 1-9. Pressure-Operated Unloader -Unloaded Operation	1-5
Figure 2-1. Removal of Piston Plug	2-1
Figure 2-2. Oil Level in Sight Glass	2-2
Figure 3-1. Shaft Seal Reservoir	3-1
Figure 3-2. Cylinder Head & Valve Plate	3-2
Figure 3-3. Installing Suction Valves	3-2
Figure 3-4. Checking Suction Valve	3-2
Figure 3-5. Oil Pump and Bearing Head Assembly	3-3
Figure 3-6. Oil Pump	3-3
Figure 3-7. Shaft Seal	3-3
Figure 3-8. Shaft Seal Removal	3-4
Figure 3-9. TOP Orientation	3-4
Figure 3-10. Bottom Plate Removal	3-5
Figure 3-11. Bottom Plate and Oil Strainer Removed	3-5
Figure 3-12. Piston Rings Removed	3-5
Figure 3-13. Connecting Rod, Piston, and Pin	3-5
Figure 3-14. Seal End Main Bearings	3-6
Figure 3-15. Piston	3-6
Figure 3-16. Correct Piston in CylinderOrientation	3-6
Figure 3-17. Installing Piston Rod Assemblies and Seal End Thrust Washer	3-6
Figure 3-18. Piston Rings	3-7
Figure 3-19. Installing Pistons	3-7
Figure 3-20. Installing Suction Strainer	3-7
Figure 3-21. Piston Dimension (Wear Limits)	3-9

LIST OF TABLES

TABLE NUMBER	Page
Table 1-1. Compressor Reference Data	1-1
Table 1-2. Oils	1-1
Table 3-1. Torque Values	3-8
Table 3-2. Wear Limits	3-9

SECTION 1

DESCRIPTION

1.1 INTRODUCTION

This workshop manual covers the Carrier Transicold Model 05G Twin Port compressors. These compressors are designed for refrigeration (trailer) or air conditioning (bus & rail) applications. (See Figure 1-1) A detailed list of tools needed to service the 05G Twin Port compressor may be found in the Service Tool catalog 62-03213-. Replacement parts may be found in the Service Parts List for Model 05G Twin Port Compressor 62-11053-.

1.2 GENERAL DESCRIPTION

The 05G Twin Port compressors are of the open-drive reciprocating type. A crankshaft, connecting rods, pistons, and reed type valves accomplish vapor compression. Compressor wear is minimized by splash lubrication and by force feed lubrication. The oil pump is driven directly from the end of the compressor crankshaft. (See Figure 1-3)

The end of the crankshaft, which extends outside the crankcase, is adaptable to a variety of direct drive or belt-driven clutch mechanisms. A mechanical seal prevents refrigerant leakage where the rotating shaft passes through the crankcase. A shaft seal reservoir is provided to collect any oil seepage that might escape the seal.

The compressor is equipped with flanges for connecting suction and discharge service valves. Connections are also provided for pressure gauges and safety cutout switches. Sight glasses installed on both sides of the crankcase, provides a means for checking oil level in the compressor crankcase. A drain plug facilitates draining of oil from the crankcase and an oil fill plug enables addition of oil when necessary. A bottom plate provides access through the bottom of the crankcase for maintenance.



WARNING

Do not operate compressor unless suction and discharge service valves are open.

Capacity of the Model 05G Twin Port compressor is determined by piston displacement and clearance, suction and discharge valve size, compressor speed, suction and discharge pressure, type of refrigerant, and unloader valves.

1.3 COMPRESSOR REFERENCE DATA

Table 1-1. Compressor Reference Data

Model	05G-37CFM	05G-41CFM
Displacement	37CFM	41CFM
No. Cylinders	6	
Bore	50.8 mm (2.00 in)	
Stroke	49.2 mm (1.937 in)	54.36 mm (2.14 in)
Weight	62 kg (137 lbs)	
SPEED (RPM) FOR OIL PUMP		
Low Profile	500 to 2200	

NOTE

The oils below are suitable for use with evaporator temperatures above -40°F (-40°C).

Table 1-2. Oils


Approved Oil for REFRIGERATION USE (TRAILER)	
Refrigerant	Oil
R-12, R-22, R-500 or R-502	Alkyl Benzene (Synthetic) P/N 07-00274-00
R-404A	Polyolester (POE) P/N 07-00317-00PK6

Approved Oil for AIR CONDITIONING USE (BUS AND RAIL)	
Refrigerant	Oil
R-12, R-22, R-500 or R-502	Mineral (150 Viscosity) P/N 07-00275-00
R-12, R-22, R-502	Mineral (300 Viscosity) P/N 07-00377-00
R-22	Alkyl Benzene (Synthetic) P/N 07-00430-00
R-134a	Polyolester (POE) P/N 07-00317-00PK6


NOTE

Proper use and storage of Polyester (POE) type oil used with HFC refrigerants is critical. This type of oil is extremely hygroscopic, meaning that if allowed to become exposed to the atmosphere, it can collect moisture that leads to the formation of acids that will damage refrigeration components. Some refrigeration assemblies such as o-ring assemblies, compressor shaft seals and most solenoid valves require that refrigerant oil be applied to some of the parts during the assembly process. When this is needed, always use alkylated benzene oil CTD P/N 07-00274 (Zerol 150) even for R134a or R404A systems. All refrigerant oils must be stored in a sealed, airtight container.

COMPRESSOR WITH
MOUNTING FLANGE
(ULTRA TYPE SHOWN)

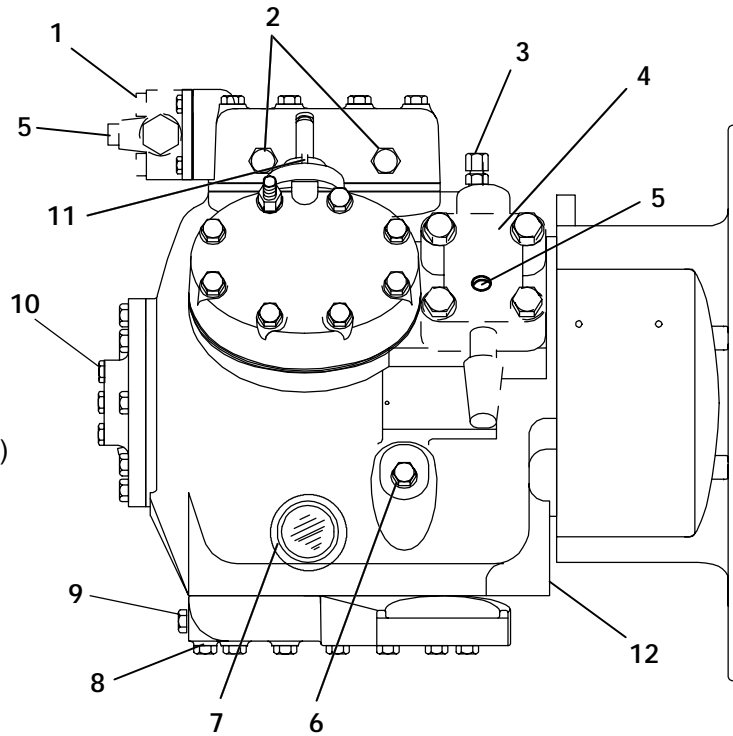

COMPRESSOR WITHOUT
MOUNTING FLANGE

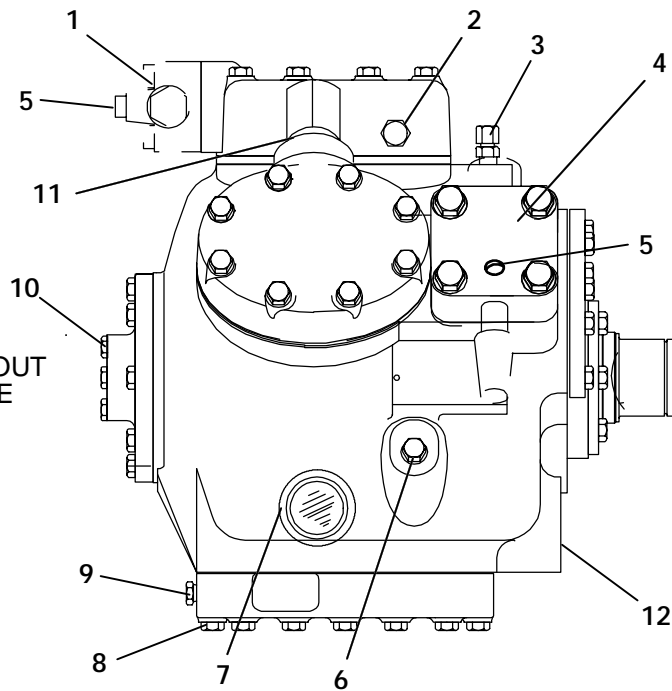

- | | |
|-----------------------------|-------------------------------|
| 1. Discharge Service Valve | 7. Oil Level Sight Glass |
| 2. High Pressure Connection | 8. Bottom Plate |
| 3. Low Pressure Connection | 9. Oil Drain Plug |
| 4. Suction Service Valve | 10. Oil Pump (See Figure 1-3) |
| 5. Gauge Connection | 11. Unloader |
| 6. Oil Fill Plug | 12. Shaft Seal Reservoir |

Figure 1-1. Model 05G Compressor

1.4 DETAILED DESCRIPTION

1.4.1 Service Valves

The suction and discharge service valves used on the compressor are equipped with mating flanges for connection to flanges on the compressor. These valves are provided with a double seat and a gauge connection, which allows servicing of the compressor and refrigerant lines (See Figure 1-1).

Turning the valve stem counterclockwise (all the way out) will *backseat* the valve to open the suction or discharge line to the compressor and close off the gauge connection. In normal operation, the valve is backseated to allow full flow through the valve. The valve should always be backseated when connecting the service manifold gauge lines to the gauge ports.

Turning the valve stem clockwise (all the way forward) will *frontseat* the valve to close off the suction or discharge line to isolate the compressor and open the gauge connection.

To measure suction or discharge pressure, midseat the valve by opening the valve clockwise about 2 turns. With the valve stem midway between frontseated and backseated positions, the suction or discharge line is open to both the compressor and the gauge connection.

1.4.2 Suction And Discharge Valves

The compressor uses reed type suction and discharge valves made of highest quality steel for long life. The valves operate against hardened integral seats in the valve plate.

The downstroke of the piston admits refrigerant gas through the suction valve, and then compresses this gas on the upstroke, thereby raising its temperature and pressure. The compressed gas is prevented from re-entering the cylinder on its next downstroke by the compressor discharge valve. (See Figure 1-2)

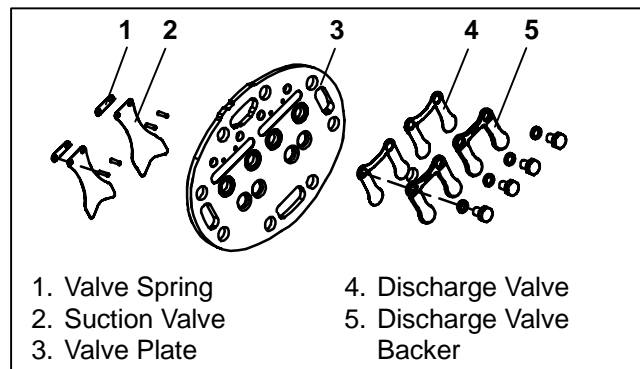


Figure 1-2. Suction & Discharge Valve

1.4.3 Lubrication System

Force-feed lubrication of the compressor is accomplished by an oil pump (See Figure 1-3) driven directly from the compressor crankshaft. Refrigeration oil is drawn from the compressor crankcase through the oil filter screen and pick up tube to the oil pump located in the bearing head assembly. The crankshaft is drilled to enable the pump to supply oil to the main bearings, connecting rod bearings, and the shaft seal.

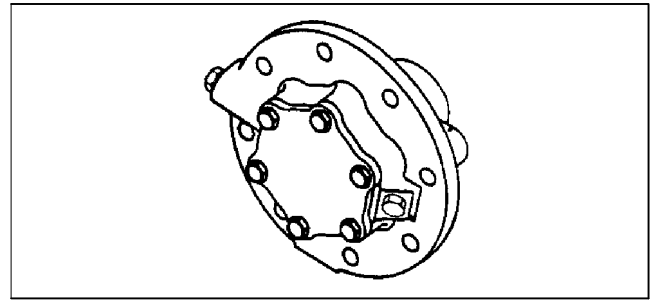


Figure 1-3. Oil Pump

The oil flows to the pump end main bearings, connecting rod bearings and seal end main bearings, where the oil path is divided into two directions. The largest quantity flows to the oil relief valve, which regulates oil pressure at 15 to 18 psi (1.02 to 1.22 bar) above suction pressure. When the oil pressure reaches 15 to 18 psi (1.02 to 1.22 bar) above suction pressure, the relief valve spring is moved forward allowing oil to return to the crankcase. The remaining oil flows through an orifice and into the shaft seal cavity to provide shaft seal lubrication and cooling. This oil is then returned to the crankcase through an overflow passage.

An additional oil pressure relief valve, built into the oil pump. It opens at speeds above 400 rpm to relieve a portion of the oil pressure to the crankcase in order to maintain oil pressure below an acceptable maximum. At low speeds, the valve is closed to ensure adequate oil pressure at 400 rpm. At speeds above 1900 rpm, the oil pressure will be 25 to 30 psi (1.70 to 2.04 bar) above suction pressure.

The crankcase pressure equalization system consists of two oil return check valves and a 1/8-inch pressure equalization port between the suction manifold and crankcase. Under normal conditions, check valves are open and allow for oil return to the crankcase. Under flooded start conditions, pressure rises in the crankcase and closes the check valves, preventing excess oil loss. The equalization port allows for release of excessive pressure, that has built up in the crankcase, to the suction manifold; this ensures that the oil loss is kept to a minimum.

1.4.4 Shaft Seal Reservoir

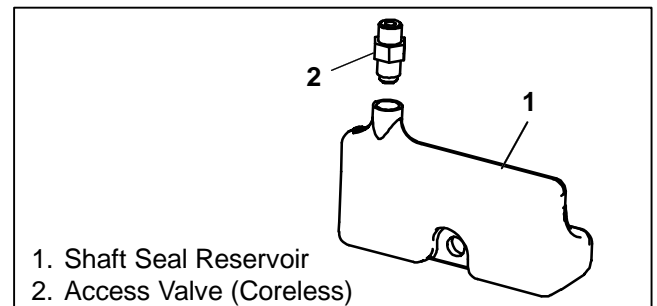


Figure 1-4. Shaft Seal Reservoir

The shaft seal oil reservoir has been fitted to the crankcase. The coreless access valve taps into the crankshaft seal cavity where any oil that escapes the crankshaft seal will form. The coreless access valve then drains that compressor oil that escapes the crankshaft seal into the shaft seal reservoir.

1.5 COMPRESSOR UNLOADERS

The compressor is equipped with unloaders for capacity control. This consists of a self-contained, cylinder head hot gas bypass arrangement. (See Figure 1-5)

The compressor unloader system can be controlled with either a pressure actuated valve or an electrically actuated (solenoid) valve.

1.5.1 Electric-Controlled Unloaders

The capacity controlled cylinder is easily identified by an electric solenoid which extends from the side of the cylinder head. When the solenoid energizes, the cylinder unloads allowing discharge gas to circulate as shown in Figure 1-6. The unloaded cylinder operates with little or no pressure differential, consuming very little power. A de-energized solenoid reloads the cylinder as shown in Figure 1-7.

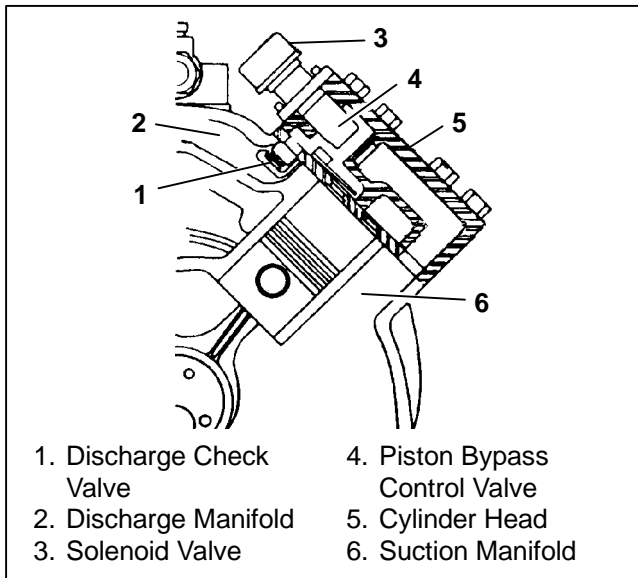


Figure 1-5. Compressor Unloader

a. Major Working Parts

1. Solenoid and valve system
2. Spring loaded piston type bypass control valve
3. Spring loaded discharge check valve

b. Unloaded Operation

Pressure from the discharge manifold (Figure 1-6, item 15) passes through the strainer (9) and bleed orifice (8) to the back of the piston bypass valve (7). Unless bled away, this pressure would tend to close the piston (6) against the piston spring (5) pressure.

With the solenoid valve (1) *energized* the solenoid valve stem (2) will *open* the gas bypass port (3).

Refrigerant pressure will be bled to the suction manifold (10) through the opened gas bypass port. A reduction in pressure on the piston bypass valve will take place because the rate of bleed through the gas bypass port is greater than the rate of bleed through the *bleed orifice* (8).

When the pressure behind the piston has been reduced sufficiently, the valve spring will force the piston bypass valve *back*, *opening* the gas bypass from the discharge manifold to the suction manifold.

Discharge pressure in the discharge manifold will close the discharge piston check valve assembly (14) isolating the compressor discharge manifold from the individual cylinder bank manifold.

The *unloaded* cylinder bank will continue to operate *fully unloaded* until the solenoid valve control device is *de-energized* and the gas bypass port is closed.

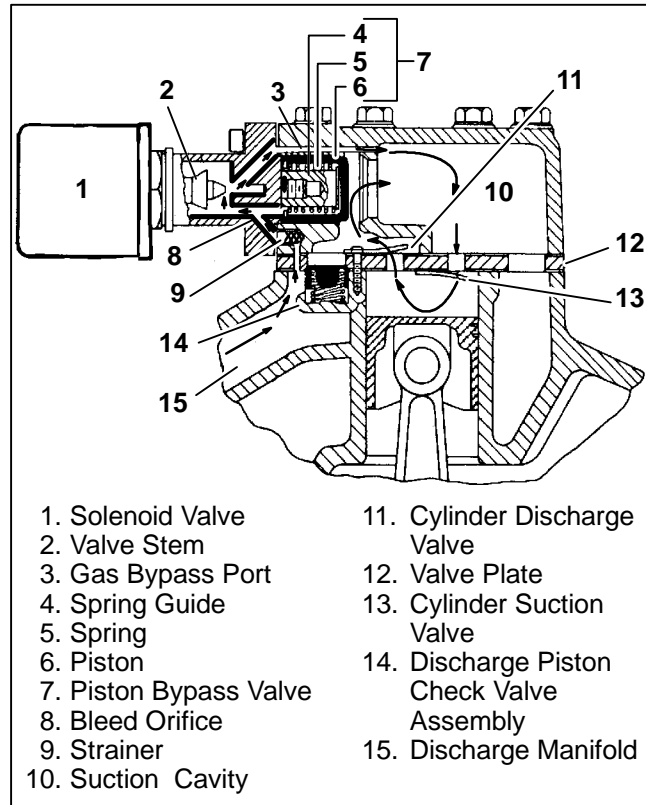


Figure 1-6. Electric-Operated Unloader- Unloaded Operation

c. Loaded Operation

Discharge pressure bleeds from the discharge manifold (Figure 1-7, item 15) through the strainer (9) and bleed orifice (8) to the solenoid valve stem (2) chamber and the back of the piston bypass valve (7).

With the solenoid valve (1) *de-energized* the solenoid valve stem (2) will *close* the gas bypass port (3).

Refrigerant pressure will overcome the bypass valve spring (5) tension and force the piston (6) *forward* *closing* the gas bypass from the discharge manifold to the suction manifold (10).

Cylinder discharge pressure will force open the discharge piston check valve assembly (14). Refrigerant gas will pass into the compressor discharge manifold.

The loaded cylinder bank will continue to operate fully loaded until the solenoid valve control device is energized and the gas bypass port is opened.

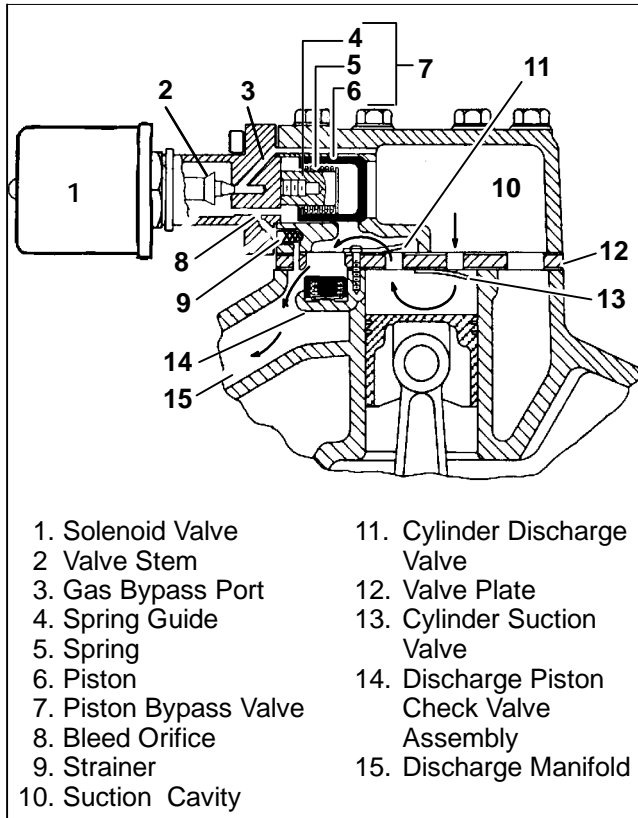


Figure 1-7. Electric-Operated Unloader - Loaded Operation

1.5.2 Pressure-Operated Unloaders

The pressure-operated unloaders are controlled by suction pressure and actuated by discharge pressure. The unloader valve controls two cylinders. On startup, controlled cylinders do not load up until differential between suction and discharge pressure is 10 psi (0.68 bar).

During *loaded operation*, (Figure 1-8) when suction pressure is above the valve control point, the poppet valve (4) will close. Discharge gas bleeds into the valve chamber; the pressure closes the piston bypass valve (5) and the cylinder bank loads up. Discharge gas pressure forces the discharge piston check valve (6) open, permitting gas to enter the discharge manifold.

During *unloaded operation*, (Figure 1-9) when suction pressure drops below the valve control point, the poppet valve (4) will open. Discharge gas bleeds from behind the bypass piston to the suction manifold. The bypass piston valve (5) opens, discharge gas is recirculated back to the suction manifold and the cylinder bank is unloaded. Reduction in discharge pressure causes the discharge piston check valve (6) to close, isolating the cylinder bank from the discharge manifold.

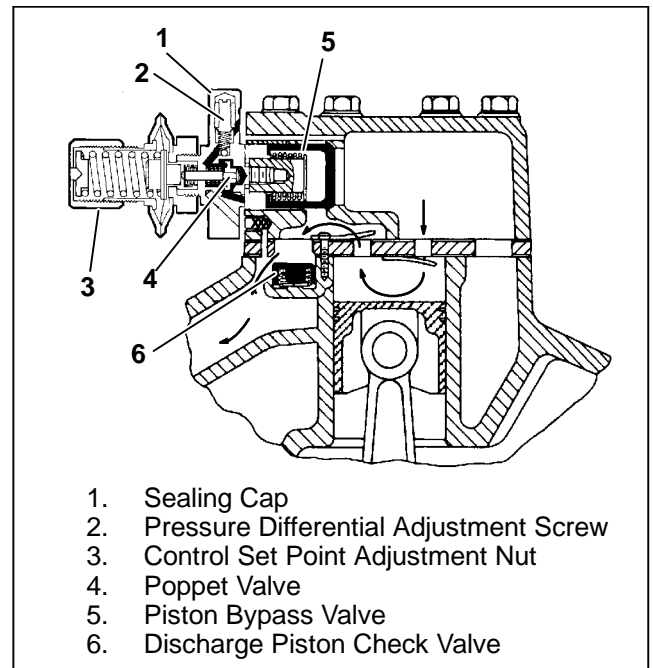


Figure 1-8. Pressure-Operated Unloader Loaded Operation

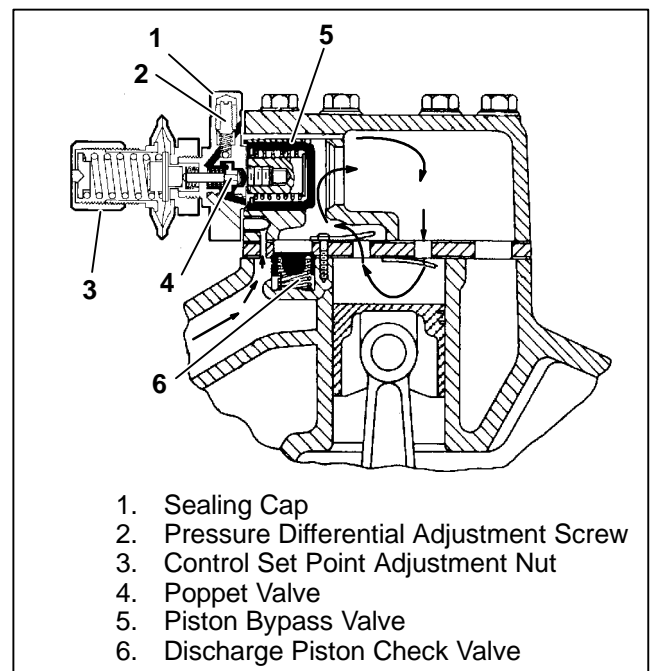


Figure 1-9. Pressure-Operated Unloader - Unloaded Operation

SECTION 2

COMPRESSOR REPLACEMENT

2.1 COMPRESSOR REMOVAL

Refer to the operation and service manual covering the equipment in which the compressor is installed for specific removal instructions. A general removal procedure is given below.

- a. If compressor is completely inoperative, frontseat the suction and discharge service valves to trap the refrigerant in the unit. If the compressor will operate, pump down the unit; then, frontseat the suction and discharge service valves.
- b. Ensure power source is removed from any controls installed on the compressor.
- c. Remove refrigerant from the compressor using a refrigerant recovery system.
- d. Disconnect refrigerant lines at service valve flange connections on the compressor; retain hardware.
- e. Remove any components necessary to gain access to the compressor or to enable removal.
- f. Disconnect the drive mechanism at the compressor.
- g. Remove mounting hardware and remove compressor from unit.
- h. If compressor is to be repaired, refer to section 3 for repair procedures. If a replacement compressor is to be installed, refer to section 2.2 for replacement procedures.

2.2 COMPRESSOR REPLACEMENT

Consult the unit service parts list for the correct replacement.

Service replacement compressors are furnished without suction and discharge service valves and unloader valves. The service valves are normally retained on the unit to isolate the refrigerant lines during compressor replacement. Blank-off pads are installed on the service replacement compressor valve flanges. These pads must be removed prior to installing the compressor. If the defective compressor is to be returned for overhaul or repair, install the pads on the compressor for sealing purposes during shipment.

Service replacement compressors are furnished with cylinder head bypass piston plugs installed on the unloader flanges in lieu of the unloader valves. The unloaders (if used) must be removed from the defective compressor and transferred to the replacement compressor prior to installation. Refer to section 2.2.1.

If the defective compressor is to be returned for overhaul or repair, install the plugs on the compressor for sealing purposes during shipment.

2.2.1 Installing Compressor Unloaders

- a. Remove the three socket head capscrews holding piston plug to cylinder head of the replacement compressor. See Figure 2-1.

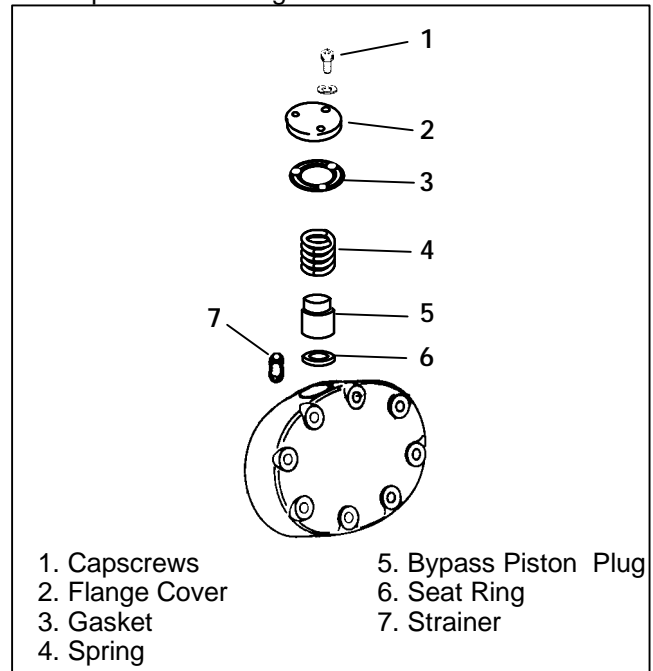


Figure 2-1. Removal of Piston Plug

- b. Remove flange cover, gasket, spring, bypass piston plug, and seat ring. A tapped hole is provided in piston plug for use with a jackscrew to enable removal of the plug. One of the socket head capscrews may be used as a jackscrew.
- c. Remove the three socket head capscrews holding unloader in the cylinder head of the defective compressor; remove the unloader and retain the capscrews.

NOTE

Capscrews removed from the bypass piston plug flange cover are not interchangeable with capacity control unloader valve capscrews. When installing the unloaders, be sure to use the unloader capscrews.

- d. Using a new gasket and unloader ring pliers (P/N 07-00223), install the unloaders in the cylinder heads of the replacement compressor. Refer to Table 3-1, for required torque values.
- e. If the defective compressor is to be returned for overhaul or repair, install the bypass piston plug, spring, seat ring and flange cover onto the cylinder heads.

2.2.2 INSTALLING COMPRESSOR



WARNING

Midseat service valves or by other means relieve pressure in replacement compressor before removing plugs.



CAUTION

The high capacity oil pump must be set to rotate in the same direction as the crankshaft. (Refer to Section 3.5)

- a. Install the compressor by reversing the procedure of section 2.1. Install new locknuts on compressor mounting bolts and new gaskets on suction and discharge service valves.
- b. Check oil level in sight glass (See Figure 2-2). If necessary, add or remove oil.
- c. Leak test, evacuate, and dehydrate the compressor.
- d. Fully backseat suction and discharge service valves.
- e. Run the compressor and check for leaks and noncondensibles in the refrigerant system.
- f. Check refrigerant level.

g. Recheck compressor oil level.

h. Check operation of compressor unloaders (if installed).

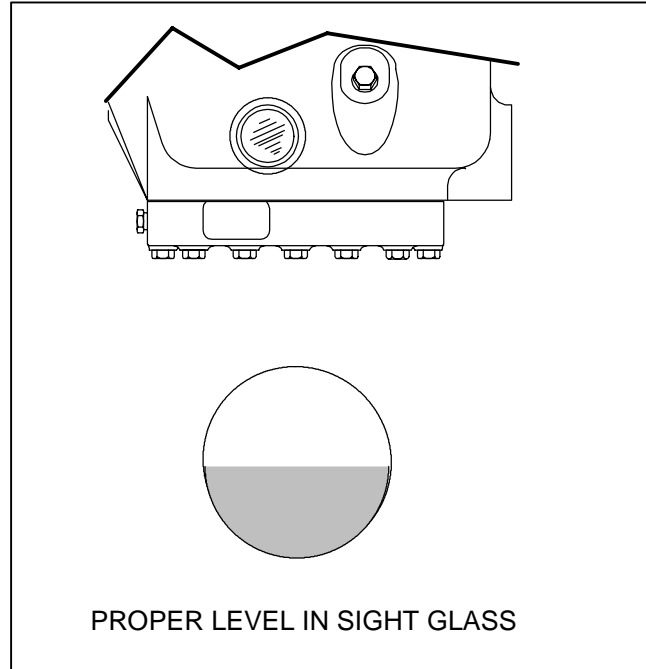


Figure 2-2. Oil Level in Sight Glass

SECTION 3

COMPRESSOR MAINTENANCE

3.1 SHAFT SEAL RESERVOIR

The shaft seal reservoir will accumulate up to 3.5 ounces of oil. It should be serviced (checked and drained) at least once a year. To service the reservoir:

- Remove the capscrew and washer that secures the reservoir to the crankcase.
- Remove the reservoir and properly dispense of the contents.

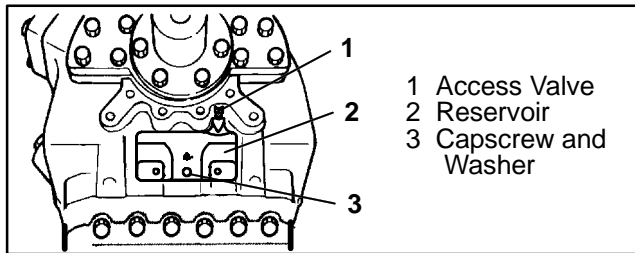


Figure 3-1. Shaft Seal Reservoir

NOTE

Do not return this oil to the compressor. This oil is contaminated. Dispose this oil in an environmentally correct manner.

- Return the reservoir to its mounting location insuring that the neck of the reservoir is seated over the access valve.
- Reinstall the capscrew and washer.

Refer to Table 3-1 for torque values for tightening the capscrew.

3.2 INTRODUCTION

Prior to disassembly of the compressor, oil must first be drained from the crankcase. Place the compressor in a position where it will be convenient to drain the oil. Remove the oil fill plug to vent the crankcase. Loosen the drain plug and allow the oil to drain out slowly.

If dismantled parts are to be left overnight or longer, dip them in clean compressor oil (to prevent rusting) and store in protected area.

Refer to Table 3-1 for torque values for tightening bolts.

3.3 INSPECTION AND PREPARATION FOR REASSEMBLY

- Clean all parts with an approved solvent. Use a stiff bristle brush to remove dirt from grooves and crevices.
- Inspect all parts for wear and overall condition. Replace any defective or excessively worn parts.

- Inspect suction and discharge valve seats (on valve plate).
- If unloaders are installed, inspect operation of unloader.
- After cleaning, ensure all moving parts are coated with compressor oil before reassembly.
- Use only new gaskets during reassembly. Ensure all gaskets (includes cylinder head, valve plate, and unloader or bypass plug gaskets) are installed dry.

3.4 CYLINDER HEAD AND VALVE PLATE

3.4.1 Disassembly



Do not unscrew capscrews all the way before breaking seal. Entrapped pressure could result in injury.

- Loosen cylinder head capscrews. If the head is stuck, tap it lightly with a wooden or lead mallet to free it. Be careful not to drop the head or damage the gasket sealing surface. Remove cylinder head capscrews and gasket. (See Figure 3-2)
- Remove the discharge valve capscrews, lock washers, stops, and valves.
- Free the valve plates from the cylinder deck by using the discharge valve capscrews, without washers, as jackscrews through the outermost tapped holes in the valve plate after the valve stops and valves have been removed. Remove the valve plate gasket.
- Discard valves and gaskets. Use only new valves and gaskets when assembling cylinder head and valve plate assemblies.

3.4.2 Reassembly

Install only new valves and gaskets, do not interchange valves.

- Install the discharge valves and discharge valve stops with capscrews and lock washers onto the valve plates. Torque the capscrews to a value shown in Table 3-1.
- Turn the valve plate over.
- Place suction valve on dowel pins.
- Install the suction valve spring on the dowel pins with the spring ends bearing away from the cylinder head. (See Figure 3-3)

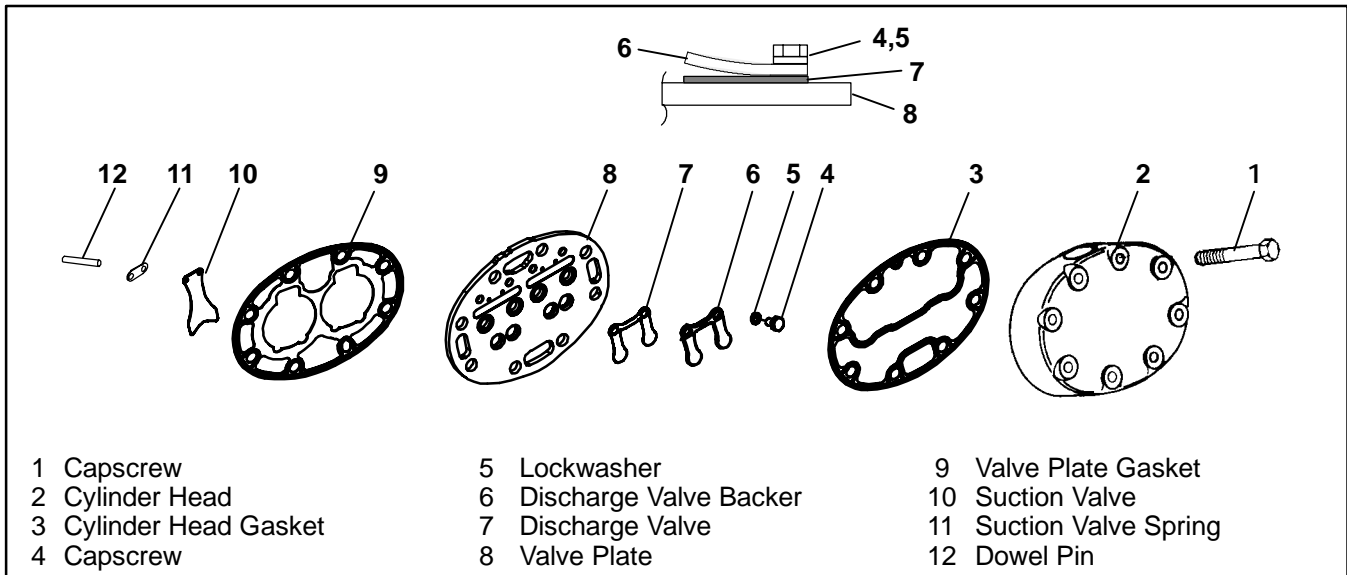


Figure 3-2. Cylinder Head & Valve Plate

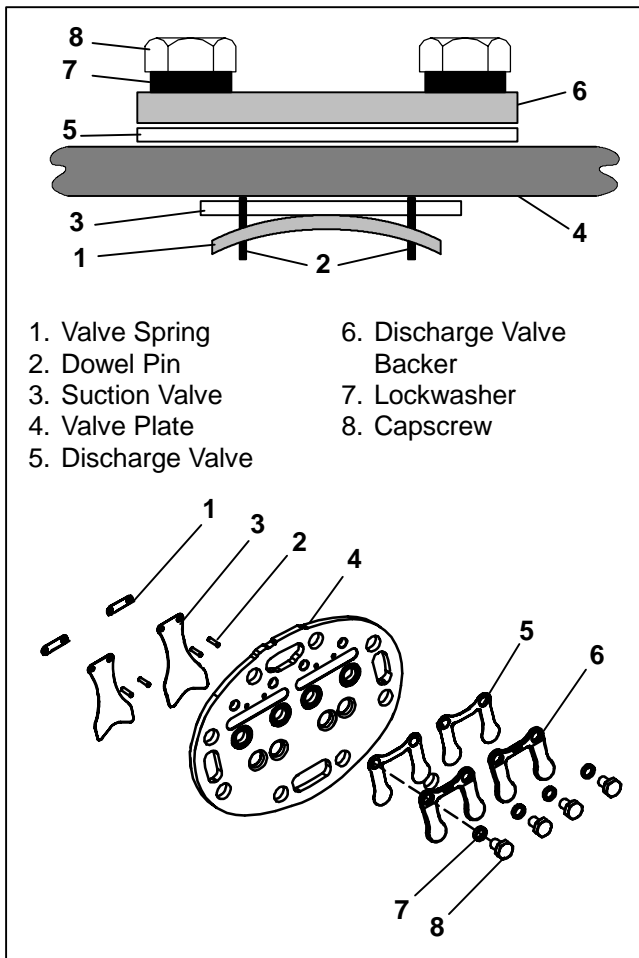


Figure 3-3. Installing Suction Valves

- e. Place the valve plate and new valve plate gasket on cylinder deck, ensuring that the valve plate is properly positioned on the four dowel pins.
- f. Using a small screwdriver, operate the suction valves to ensure that the valve tips are not being held by the valve plate gasket. (See Figure 3-4)
- g. Install capscrews, cylinder head and new cylinder head gasket with flat side to valve plate, ensuring that the gasket and cylinder head are properly positioned on the valve plate. Torque the capscrews, in a diagonal pattern, to a value shown in Table 3-1.

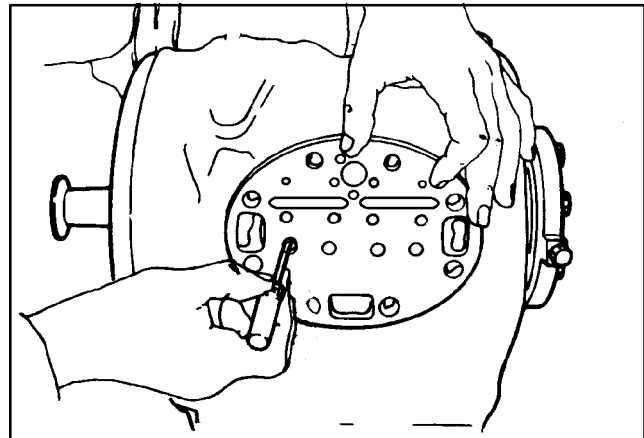



Figure 3-4. Checking Suction Valve

3.5 OIL PUMP AND BEARING HEAD

The oil pump is driven directly from the end of the compressor crankshaft.

3.5.1 Removal

Remove eight capscrews and remove the oil pump bearing head assembly, gasket and thrust washer. (See Figure 3-5.)

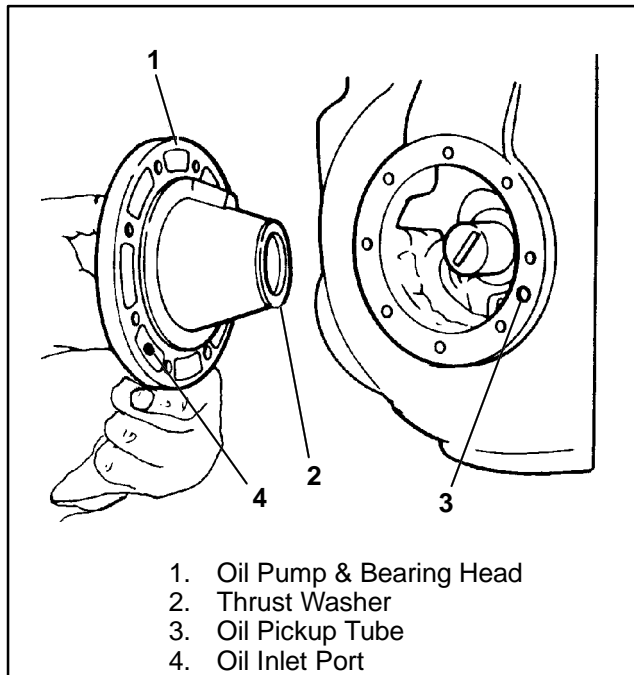


1. Oil Pump & Bearing Head
2. Thrust Washer
3. Oil Pickup Tube
4. Oil Inlet Port

Figure 3-5. Oil Pump and Bearing Head Assembly

3.5.2 Disassembly, & Inspection

If it is determined that the oil pump is not operating properly, the entire oil pump and bearing head assembly must be replaced. Replacement parts for the pump are not available except for the cover plate O-ring. However, in the event the pump requires inspection or cleaning, refer to Figure 3-6 for disassembly and reassembly. Clean all parts; coat all moving parts with compressor oil before proceeding with reassembly.

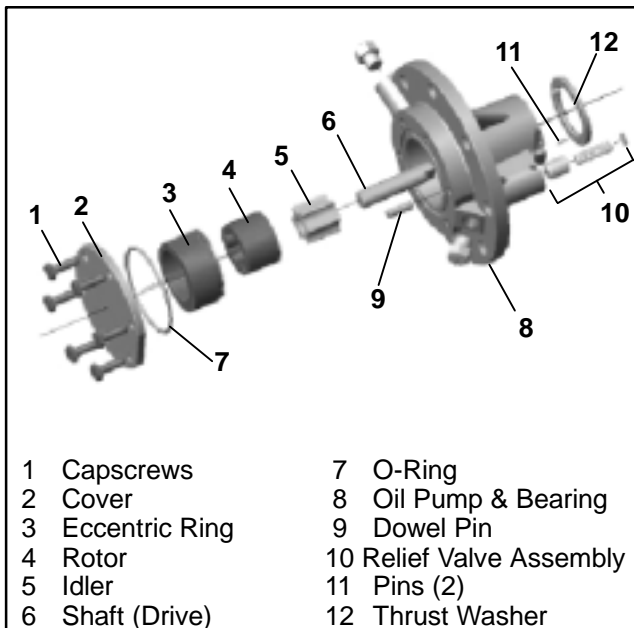

- | | |
|------------------|--------------------------|
| 1 Capscrews | 7 O-Ring |
| 2 Cover | 8 Oil Pump & Bearing |
| 3 Eccentric Ring | 9 Dowel Pin |
| 4 Rotor | 10 Relief Valve Assembly |
| 5 Idler | 11 Pins (2) |
| 6 Shaft (Drive) | 12 Thrust Washer |

Figure 3-6. Oil Pump

3.5.3 Reassembly

a. Install the pump end thrust washer on the two dowel pins located on the bearing head. (See Figure 3-5.)



Ensure that thrust washer does not fall off dowel pins while installing oil pump.


b. Install the bearing head assembly with a new gasket on the compressor crankshaft. Carefully push oil pump on by hand ensuring that the thrust washer remains on the dowel pins, the tang on the end of the drive engages the slot in the crankshaft, and the oil inlet port on the pump is aligned with the oil pickup tube in the crankcase. The oil pump should mount flush with the crankcase with the "TOP" stamp on the pump oriented straight up. (See Figure 3-12)

c. Align the gasket and install the eight capscrews in the mounting flange. Refer to Table 3-1, for applicable torque values.

3.6 SHAFT SEAL

3.6.1 Disassembly

a. Remove 6 capscrews, remove the shaft gland plate or clutch mounting hub. Remove rotor from top of bellows assembly. (See Figure 3-7)

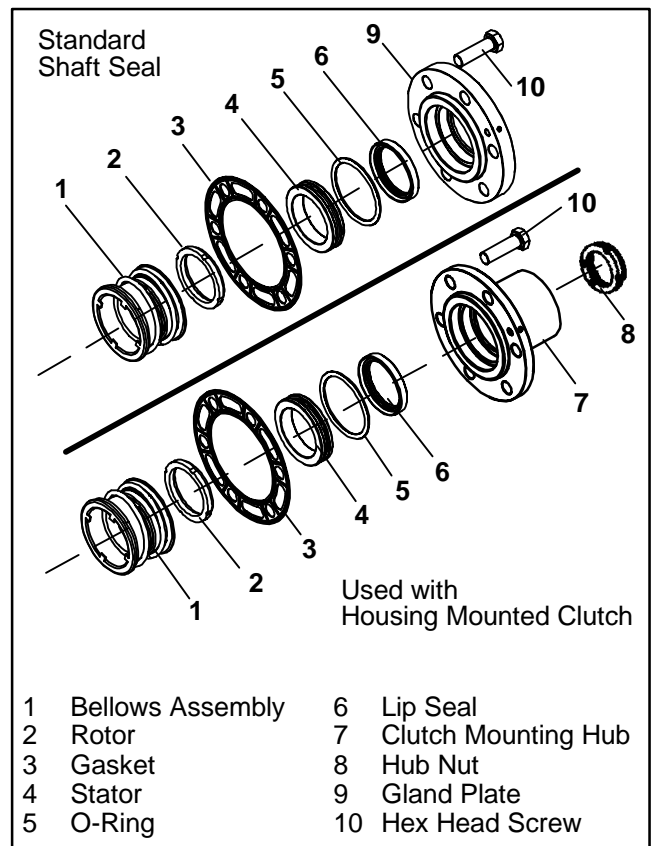

- | | |
|--------------------|-----------------------|
| 1 Bellows Assembly | 6 Lip Seal |
| 2 Rotor | 7 Clutch Mounting Hub |
| 3 Gasket | 8 Hub Nut |
| 4 Stator | 9 Gland Plate |
| 5 O-Ring | 10 Hex Head Screw |

Figure 3-7. Shaft Seal

- b. Lubricate the end of the crankshaft with clean oil.
- c. Using two long screwdrivers, pry out the shaft seal but do not damage the gasket surface or the crankshaft. (See Figure 3-8)

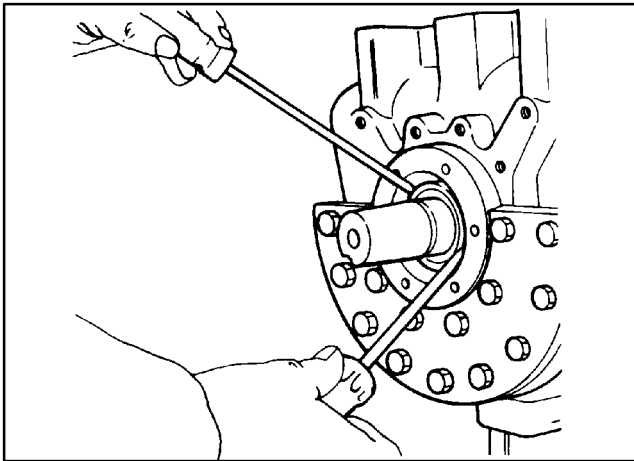


Figure 3-8. Shaft Seal Removal

3.6.2 Reassembly

NOTE

Install a new shaft seal assembly and cover gasket, with the shaft seal cover/clutch mounting hub. Never install a used seal assembly or gasket. A new rotor should never be installed with a used stator. When installing the seal assembly, use care not to damage the rotor or stator.

- a. Remove the **NEW** rotor from new seal assembly. Lubricate shaft and the neoprene seal bellows where it contacts the shaft with clean/fresh compressor oil. Slide the seal assembly onto shaft until the neoprene bellows starts to grip the shaft.
- b. Install the **OLD** rotor in the new seal seat. Install two capscrews in opposite sides of the old cover/mounting hub. Draw up capscrews evenly to properly position new seal assembly against the shoulder on the crankshaft. Remove the capscrews and old rotor and cover plate/mounting hub.
- c. Install the **NEW** rotor. Ensure that notches in rotor are aligned with two small knurls inside the seal seat. Install the new cover plate and gasket.
- d. Remove the old stator and O-ring from the shaft seal cover/clutch mounting hub.
- e. Inspect the lip seal that is still in the cover/clutch mounting hub. If it shows any signs of damage or wear remove it.
- f. Install the lip seal into the cover/clutch mounting hub. Insure that the back side of the lip seal seats on the shoulder machined in the cover/clutch mounting hub.
- g. Using clean refrigerant oil, lubricate the new O-ring and install it into the outside groove of the new stator being careful not to touch the sealing surfaces of the stator with your fingers.

NOTE

Do not touch the sealing surfaces with your fingers. If the sealing surfaces become contaminated, clean with isopropyl alcohol and a clean dry lint-free cloth.

- h. Install the stator into the cover/clutch mounting hub. Insure that the back side of the stator seats to the lip seal.

NOTE

The shaft seal cover or clutch mounting hub on this compressor must be oriented so that the oil communication hole in the cover/hub lines up correctly with the port in the crankcase. The cover/hub should mount flush with the crankcase with the "TOP" stamp on the pump oriented straight up.

- i. Assemble the seal cover/clutch mounting hub, the gasket and the six hex head screws on to the compressor, paying attention to the orientation of the cover/hub (see Figure 3-9).

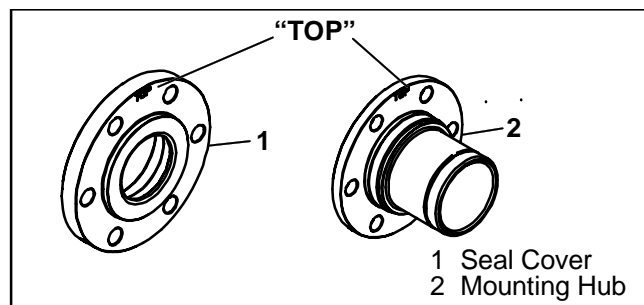


Figure 3-9. TOP Orientation

- j. Align the gasket and install the six capscrews in the mounting flange. Refer to Table 3-1, for applicable torque values.

3.7 COMPRESSOR RUNNING GEAR REMOVAL

In order to disassemble Piston, Rod and Rings, first the cylinder heads and valve plate assemblies, oil pump and bearing head assemblies and shaft seal must be removed. (Refer to sections 3.4, 3.5 and 3.6).

3.7.1 Bottom Plate, Strainer, and Connecting Rod Caps

- a. Turn the compressor over, bottom side up, and remove the bottom plate. (See Figure 3-10) Scrape off gasket.
- b. Remove the oil strainer.

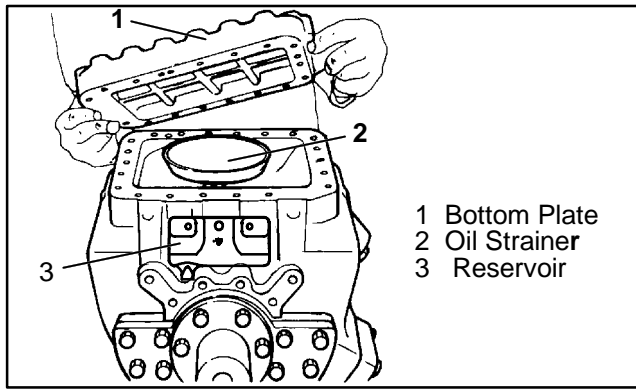


Figure 3-10. Bottom Plate Removal

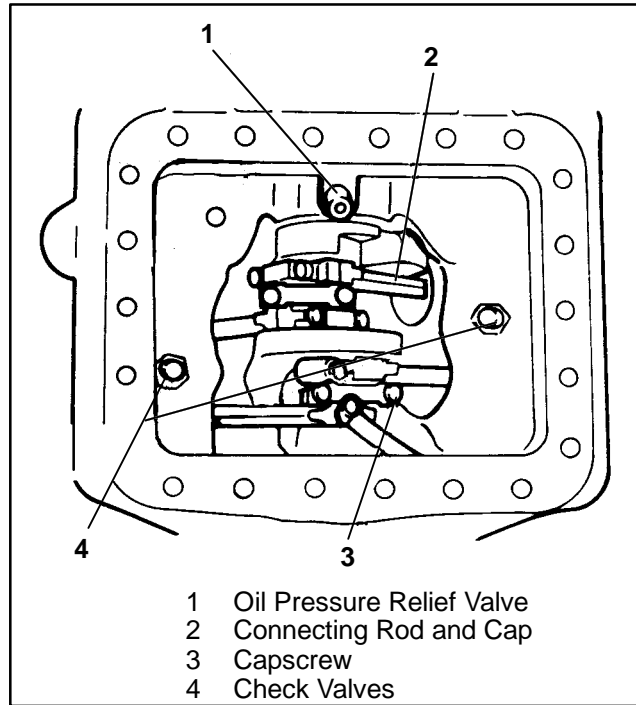


Figure 3-11. Bottom Plate and Oil Strainer Removed

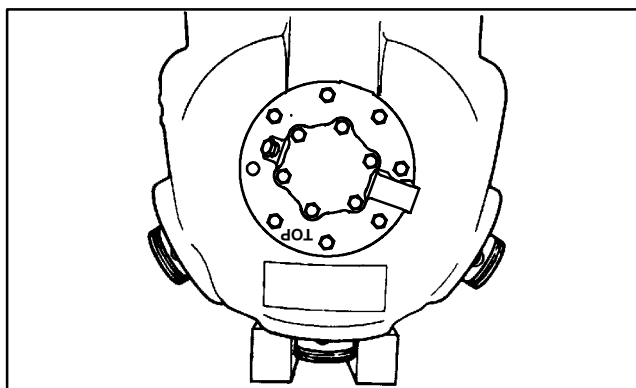


Figure 3-12. Piston Rings Removed

c. Match mark each connecting rod cap and connecting rod for correct reassembly. Remove the capscrews, flat washers and connecting rod caps. It is recommended that the capscrews and flat washers be discarded and new capscrews (special) and flat washers

be installed during compressor reassembly. (See Figure 3-11)

d. Push the piston rods down so that the piston rings extend below the cylinders. Remove and discard piston rings. Use only new rings when reassembling the compressor. (See Figure 3-12.)

3.7.2 Crankshaft and Seal End Thrust Washer



Do not allow crankshaft to drop on connecting rods inside the crankcase when removing the crankshaft.

- Push piston rod assemblies out of the way and remove crankshaft and seal end thrust washer.
- Remove and check operation of oil return check valves (See Figure 3-11). The check valves are free floating devices and can easily be checked visually.
- Remove and check oil pressure relief valve (See Figure 3-11). The oil pressure relief valve is a spring loaded device which can be checked by using a small piece of stiff wire to ensure that the spring can be depressed.
- Remove piston rod assemblies.

3.7.3 Pistons, Rods, and Rings

- Piston and pin, and connecting rod and rod cap are matched sets and must not be interchanged. That is, if either the piston or piston pin is to be replaced, you must replace both of them. Likewise, if a connecting rod or rod cap must be replaced, both must be replaced.
- Match mark and disassemble pistons, pins, connecting rods, and caps. (See Figure 3-13)

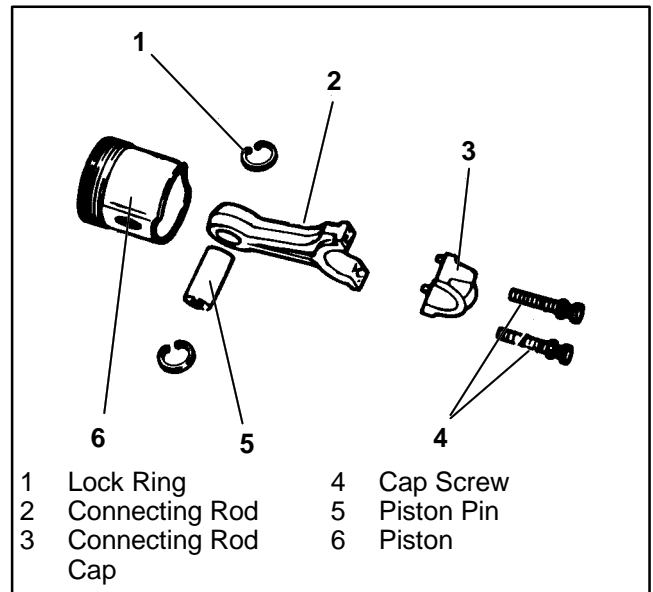


Figure 3-13. Connecting Rod, Piston, and Pin

c. Check wear dimensions of disassembled parts to determine if they are worn beyond limits given in Table 3-2.

- d. Measure side clearance between ring and ring groove in piston. Maximum dimensions are provided in Table 3-2.
- e. If parts are worn beyond limits, replace them in matched sets as specified above.
- f. Coat piston pins with compressor oil and reassemble pistons, pins, and connecting rods in matched sets.

NOTE

Pay particular attention to the orientation of the piston in relation to the connecting rod, and the cylinder they are intended for. See Figure 3-15 and .

3.7.4 Seal End Main Bearings

- a. Inspect seal end main bearings. Check wear dimensions to determine if they are worn beyond limits given in Table 3-2.
- b. If worn beyond limits remove seal end main bearings.

3.8 COMPRESSOR RUNNING GEAR REASSEMBLY

3.8.1 Seal End Main Bearings

- a. When installing new seal end main bearings the oil V grooves are oriented towards the top of the compressor with oil V grooves pointing to each other. When installed, there must be a 5/16 inch (7.93 mm) gap between the two bearings (See Figure 3-14).
- b. Line boring seal end main bearings.

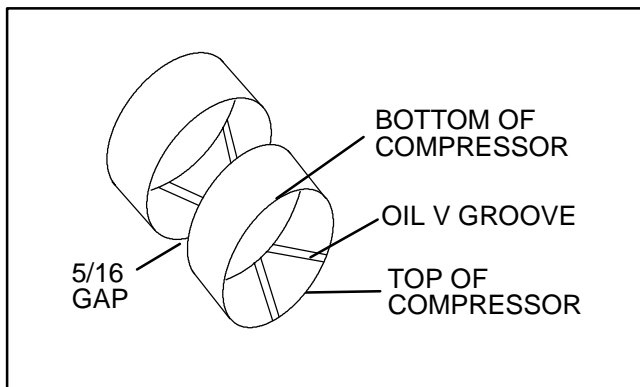


Figure 3-14. Seal End Main Bearings

3.8.2 Pistons, Rods, and Rings

Prior to installing new piston rings, it is necessary to break the hard glazed surface of the cylinder in order to reduce the wearing-in period of the new rings. Break the glaze by honing lightly in an up and down rotating motion. Clean thoroughly after breaking glaze.

Some 05G compressors for refrigeration use only may have contoured pistons (See Figure 3-15). When installing contoured pistons into compressor, check suction valve and contoured piston are in the same orientation.



Figure 3-15. Piston

- a. The gap between the ends of the piston rings can be checked with a feeler gauge by inserting the ring into the piston bore about one inch below the top of the bore. Align the ring in the bore by pushing it slightly with a piston. The maximum and minimum allowable ring gaps are shown in Table 3-2.

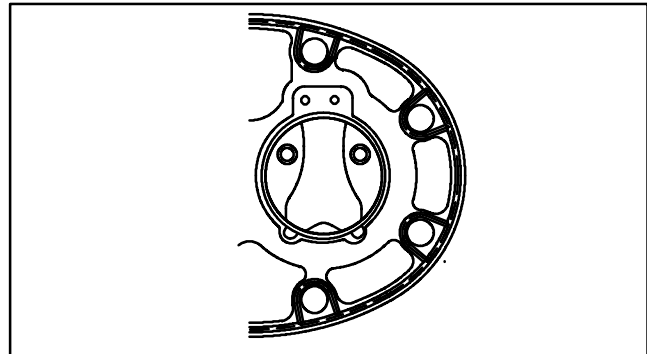


Figure 3-16. Correct Piston in Cylinder Orientation

- b. Install the piston and rod assemblies up through the bottom of the crankcase and into the cylinders. Allow pistons to extend beyond the top of the cylinder to enable installation of piston rings. Pistons must be installed so that the chamfer, on the connecting rod, faces toward the crankshaft journals. Center rods on each crankshaft throw may be installed in either direction. (See Figure 3-17)

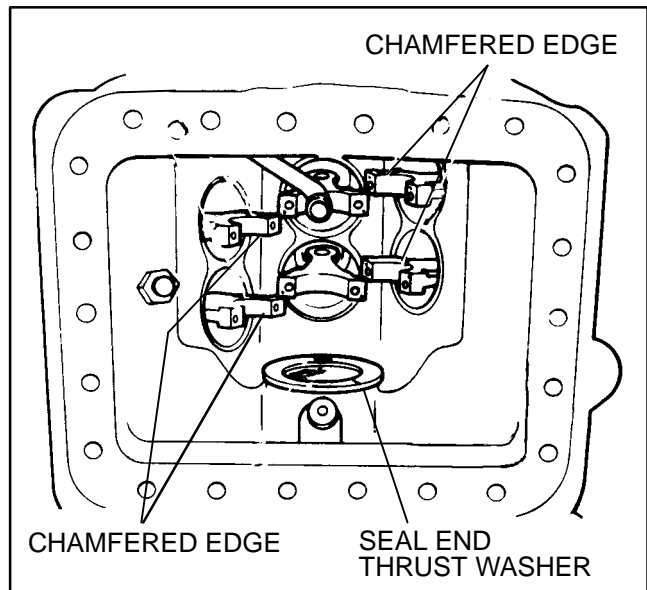


Figure 3-17. Installing Piston Rod Assemblies and Seal End Thrust Washer

c. The compressor will be fitted with double ring pistons.

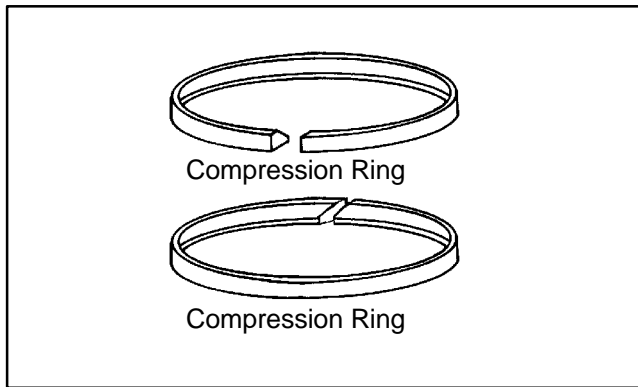


Figure 3-18. Piston Rings

d. The compression ring is chamfered on the inside circumference. This ring is installed with the chamfer towards the top. Stagger the ring end gaps so they are on opposite sides of the piston.

3.8.3 Crankshaft and Seal End Thrust Washer

- Two brass thrust washers are used. The pump end thrust washer is positioned on two dowel pins located on the bearing head and is installed with the oil pump and bearing head assembly. The seal end thrust washer is positioned just ahead of the seal end main bearing on one dowel pin installed in the crankcase. Both thrust washers should be inspected for wear and scoring before reassembly (Refer to Table 3-2).
- Install the seal end thrust washer on the dowel pin. (See Figure 3-17) Ensure piston rods are pushed out of the way and install the crankshaft.



CAUTION

Do not allow crankshaft to drop on connecting rods inside the crankcase when installing the crankshaft.

3.8.4 Bottom Plate, Strainer, and Connecting Rod Caps

- Do not tap piston with hammer if rings are caught at entrance to the cylinder. Using a ring compressor, squeeze rings sufficiently to allow piston to be pushed down into the cylinder. Ensure that ring ends are staggered so that the gaps are not aligned, and lightly tap piston down into the cylinder. (See Figure 3-19) The ring compressor can be easily fabricated from a piece of sheet metal.
- Install connecting rod caps on connecting rods using new capscrews (special) and flat washers. Reuse of the old capscrews is not recommended. Ensure that the caps are installed on the locating pins. Torque capscrews to torque value shown in Table 3-1. Ensure freedom of movement of crankshaft after capscrews are torqued on each rod cap.
- Check operation and reinstall check valves and relief valve. (See Figure 3-11). The check valves are free-floating devices and can easily be checked visually. The relief valve is a spring-loaded device which can

be checked by using a small piece of stiff wire to ensure that the spring mechanism can be depressed.

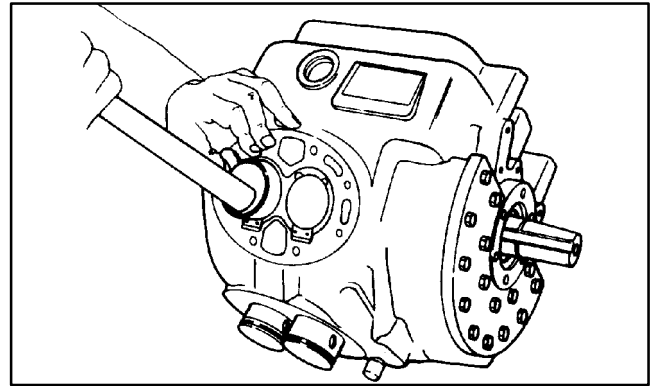


Figure 3-19. Installing Pistons

- Clean and reinstall the oil strainer.
- Using a new gasket, install the bottom cover plate. See figure 1-1 for relative location of compressor mounting flanges. Torque cover capscrews, in a diagonal pattern, to the torque value shown in Table 3-1.
- Reassemble the cylinder head, oil pump and shaft seal (Refer to sections 3.4, 3.5 and 3.6).

3.9 SUCTION STRAINER

NOTE

The suction strainer has been preformed to fit into the suction cavity.

Remove and clean the suction strainer. (See Figure 3-20) Check it for damage. If it is damaged, replace suction strainer. Install suction strainer and suction service valve using a new gasket.

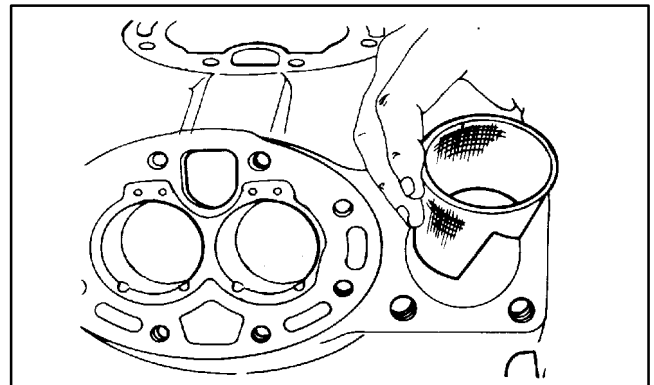


Figure 3-20. Installing Suction Strainer

3.10 ADDING OIL

Add the proper oil charge to the compressor through the oil fill plug. Refer to section 2.2.2 for the required oil charge. Refer to unit operation manual for other methods of adding oil to compressor.

3.11 INSTALLING COMPRESSOR

Refer to section 2.2.2 and the unit service manual to install the compressor.

Table 3-1. Torque Values

SIZE DIAMETER (INCHES)	THREADS PER INCH	TORQUE RANGE		USAGE
		FT-LB	MKG	
1/16	27 (pipe)	5.5 to 7	0.8 to 1.0	Crankshaft Center Web Plug
1/8	27 (pipe)	8 to 16	1.1 to 2.2	Oil Return Check Valve - Crankcase
7/16	20	8 to 14	1.1 to 1.9	Oil Fill/Drain Plug
1/4	20 (pipe)	20 to 25	2.8 to 3.5	Pipe Plug - Gauge Connection
1/4	20	8 to 12	1.1 to 1.7	Connecting Rod Capscrew
		10 to 13	1.4 to 1.8	Connecting Rod Counter Weight
1/4	28	5.5 to 7	0.8 to 1.0	Crankshaft Setscrew
		8 to 18	1.1 to 2.5	Unloader Valve
		12 to 16	1.7 to 2.2	Discharge Valve Backer
5/16	18	16 to 20	2.2 to 2.8	Cover - Oil Pump
		20 to 30	2.8 to 4.1	Discharge Service Valve
3/8	16	8 to 15	1.1 to 2.1	Oil Reservoir
		30 to 50	4.1 to 6.9	Bottom Plate - Crankcase
				End Flange - Crankcase
				Shaft Seal Cover
				Pump End Bearing Head
42 to 55	5.8 to 7.6	Cylinder Head		
1/2	13	55 to 80	7.6 to 11.1	Suction Service Valve
1-1/2	18 NEF	35 to 50	4.8 to 6.9	Oil Level Sight Glass

NEF - National Extra Fine

Table 3-2. Wear Limits

PART NAME	FACTORY MAXIMUM		FACTORY MINIMUM		MAXIMUM WEAR BEFORE REPAIR	
	INCHES	MM	INCHES	MM	INCHES	MM
SEAL END						
End Play (Seal Removed)	0.034	0.8636	.013	0.3302	-	-
Main Bearing Diameter	1.8760	47.6504	1.8754	47.6352	.002	0.051
Main Bearing Journal Diameter	1.8732	47.5793	1.8725	47.5615	.002	0.051
PUMP END						
Main Bearing Diameter	1.3761	34.9529	1.3754	34.9352	.002	0.051
Main Bearing Journal Diameter	1.3740	34.8996	1.3735	34.8869	.002	0.051
CONNECTING ROD						
Connecting Rod Diameter	1.3768	34.9707	1.3760	34.9504	.0020	0.051
Piston Pin Bearing	0.6883	17.4752	0.6878	17.4701	.001	0.0254
CRANKSHAFT						
Crankpin Diameter	1.3740	34.8996	1.3735	34.8869	.0025	0.0635
Throw - Height (37 CFM)	0.9698	24.6329	0.9678	24.5821	-	-
Throw - Height (41 CFM)	1.072	27.2288	1.070	27.1780	-	-
THRUST WASHER (Thickness)						
Pump End	0.145	3.6830	0.144	3.658	.0250	0.6350
Seal End	0.157	3.987	0.155	3.937	.0250	0.6350
CYLINDERS and PISTONS						
Bore	2.001	50.8254	2.000	50.800	.002	0.051
Piston (Diameter)	-	-	See Figure 3-21		.002	0.051
Piston Pin (Diameter)	0.6882	17.4803	0.6877	17.4676	.001	0.025
Piston Ring Gap	0.013	0.3302	0.005	0.127	.025	0.635
Piston Ring Side Clearance	0.002	0.051	0.001	0.0254	.002	0.051

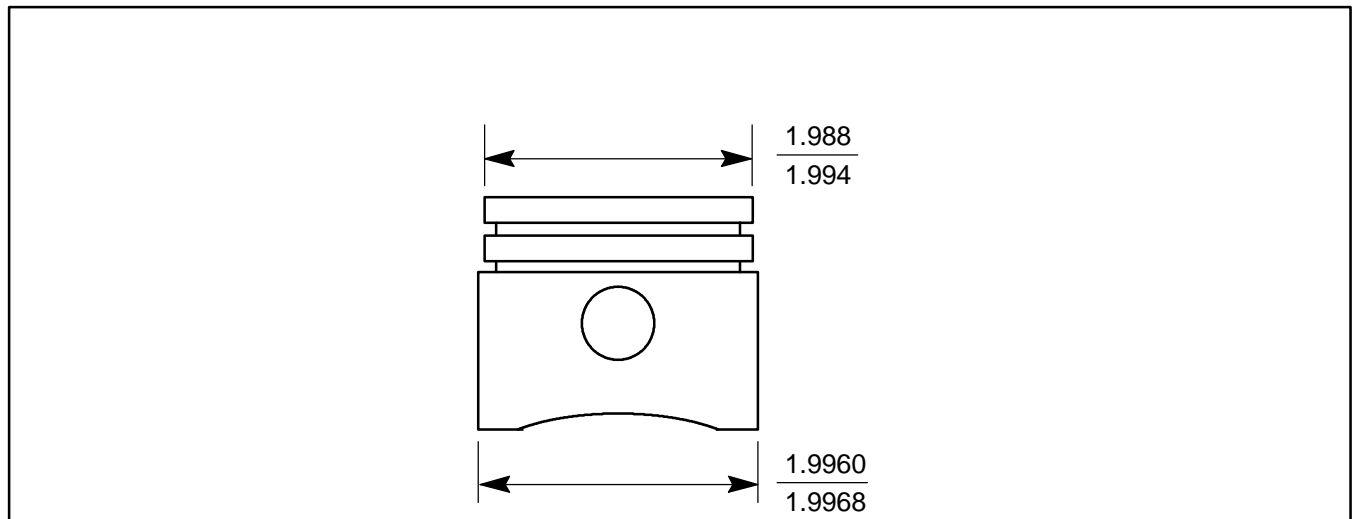


Figure 3-21. Piston Dimension (Wear Limits)

INDEX

C

Compressor Replacemant, 2-1
Compressor Refernce Data, 1-1
Compressor Valves, 1-3
Cylinder Head and Valve Plate Maintenance, 3-1

L

Lubrication System, 1-3

O

Oil, 1-1
Oil Level, 2-2
Oil, Adding, 3-7
Oli Pump Maintenance, 3-2

P

Pistons, Rods, and Rings, 3-5

R

Reference Data, 1-1
Running Gear Removal, 3-4

S

Service Valves, 1-3
Shaft Seal Maintenance, 3-3
Shaft Seal Reservoir, 1-3
Suction Strainer, 3-7

T

Torque Values, 3-8

U

Unloader Replacemant, 2-1
Unloader–Electric Operated, 1-4
Unloader–Pressure Operated, 1-5

W

Wear Limits, 3-9

Carrier Transport Air Conditioning
50 Grumbacher Road
York PA 17402 USA
Tel: 1-800-673-2431
Fax: 1-717-764-0401

North America
Carrier Transicold
700 Olympic Drive
Athens, GA 30601 USA
Tel: 1-706-357-7223
Fax: 1-706-355-5435

**Central America
and Mexico**
Ejercito Nacional No. 418
Piso 9, Torre Yumal
Col. Chapultepec Morales
11570 Mexico, D.F.
Tel: (5255) 9126.0300
Fax: (5255) 9126.0373



Carrier

A United Technologies Company

Carrier Transicold Division,
Carrier Corporation
Truck/Trailer Products Group
P.O. Box 4805
Syracuse, N.Y. 13221 U.S.A

www.carrier.transicold.com



A member of the United Technologies Corporation family. Stock symbol UTX
©2005 Carrier Corporation D Printed in U. S. A. 0605