


## QUICK REFERENCE GUIDE - VSS-05 SOUND SELECTOR & RADIO

### VSS-05 SOUND SELECTOR



#### TURNING POWER ON AND OFF

Press  button to turn on the unit.

Press  button again to turn off the unit.

#### SETTING OF VOLUME/ BASS/ TREBLE/ BALANCE/ LOUDNESS

##### AUDIO

Press AUDIO button repeatedly to choose the desired mode. Each press changes the modes as follows:



Turn volume knob until the desired sound is obtained in each mode. The final setting will apply to all audio sources for the passenger's area. If no button is pressed within 8 seconds after selecting BASS, TREB, BAL and LOUD modes, the unit automatically sets in the VOL mode. The volume value adjust from 0 (complete mute) to 40 (maximum).

#### SELECTION OF AUDIO OR AUDIO/VIDEO SOURCE

##### RADIO/CD

Press RADIO/CD button to select the dashboard radio as current audio source for the passenger's area. Pressing this button will also permit to listen to the CD inserted in the dashboard radio.

##### AUDIO IN

Press AUDIO IN button to select an auxiliary audio input as current audio source.

##### DVD

Press DVD button to select DVD Player as current audio/video source.

##### TV

If an optional TV tuner is installed, press TV button to select it as current audio/video source.

##### VIDEO IN

Press VIDEO IN button to select an auxiliary video input as current audio/video source.

#### NOTE

*If CAM or NAV is already activated, DVD, TV or VIDEO IN cannot be selected and displayed.*

#### OPERATION OF THE PANORAMIC VIEW CAMERA

##### CAM

1. Press CAM button to select the optional panoramic view camera signal. The VIDEO section of the VSS-05 LCD panel will show "CAM". The video monitors turn on automatically.
2. Press CAM button again to turn off the panoramic view camera and return to previous audio/video source.

#### DISPLAY OF THE GPS NAVIGATION GUIDANCE SCREEN

##### NAV

1. Press NAV button to display the optional GPS navigation system guidance screen. The VIDEO section of the VSS-05 LCD panel will show "NAV". The video monitors turn on automatically.
2. Press NAV button again to stop the display of the GPS guidance screen and return to previous audio/video source.

#### OPERATION OF THE DRIVER MICROPHONE

##### D-MIC

1. Press D-MIC button to turn on the driver microphone. The LCD panel will show "D-MIC" and a gong sound can be heard.
2. Turn volume knob to adjust microphone level.
3. Press D-MIC button again to turn off the driver microphone.

#### OPERATION OF THE GUIDE MICROPHONE

##### G-MIC

1. Press G-MIC button to turn on the guide microphone. The LCD panel will show "G-MIC" and a gong sound can be heard.
2. Turn volume knob to adjust microphone level.
3. Press G-MIC button again to turn off the guide microphone.

#### NOTE

*The driver and guide microphones can be turned on only by turning the switch on the microphone to ON.*

*If both the driver and guide microphone are activated, the driver microphone has priority and the guide microphone is muted.*

#### BACKGROUND VOLUME ADJUSTMENT

When a microphone is activated, the current audio source volume will reduce to a certain level which has been set at the factory. To adjust this level, proceed as follows:

- 1- Press and hold AUDIO button then press AUDIO IN button. The LCD panel will show "BACK GROUND".
- 2- Turn the volume knob to adjust the background level.
- 3- Press any button to save the setting. If no button is pressed within 8 seconds, the unit automatically saves the setting and exits this mode.

#### GONG SOUND LEVEL

A gong will sound in the passenger's area upon activating of the microphone. This gong will also sound when a passenger activates the service bell. The gong sound level can be adjusted as follows:

- 1- Press and hold AUDIO button then press VIDEO IN button. The LCD panel will show "GONG PASS".
- 2- Turn the volume knob to adjust the gong level.
- 3- Press any button to save the setting. If no button is pressed within 8 seconds, the unit automatically saves the setting and exits this mode.

#### NOTE

*While maintaining the service bell gong active, the gong sound heard upon activation of the microphones can be disabled. To do so,*

- 1- *Press and hold AUDIO button then press G-MIC button. The LCD panel will show "GONG MIC ON" or "GONG MIC OFF".*
- 2- *Turn the volume knob clockwise to activate the microphones gong sound. Turn the volume knob counterclockwise to deactivate the microphones gong sound.*

## DASHBOARD RADIO



### 1. Storing Radio Station Presets

- Tune the desired frequency, and then long press any of the Preset (1-6) buttons until the radio produces a beep.

### Tuning Radio Station Presets

- Short press any of the Preset (1-6) buttons.

### 2. Play/Pause

- Press to pause/unpause Media.

### 3. Browse

- Press to Navigate on the device and select a specific song or play context (Applicable to USB sticks, CD MP3 discs and iPods).

### 4. Clock/Alarm

- Press during Alarm activation to cancel the Alarm.

### 5. RPT (Repeat)

- Press to repeat current track. Press again to stop repeat.

### 6. RDM (Random)

- Press to play the tracks randomly. Press again to stop random mode.

### 7. ESC (Escape)

- Press to exit one Menu Level.
- While on Bluetooth (if equipped): Press to reject or to end a Call.

### 8. DSP (Display)

- If vehicle Ignition is ON:
  - Press to Change Source Display Views.
  - Press for more than 3 seconds to show the Clock for a short time.
- If vehicle Ignition is OFF:
  - Press to turn on the Radio and show the clock for a few seconds.

### 9. SCAN/ASCN (Scan/Autoscan)

- Scans stations/CD tracks/MP3/WMA files and folders and in tuner, stores strongest stations to presets.

### 10. PREV (Previous/Reverse)

- Press to select previous track or station.
- Press and hold for fast reverse or Tune Down.

### 11. Auxiliary port

- 3.5 jack stereo (iPod/MP3).

### 12. USB port

- iPod/MP3 players

### 13. Eject

- Press to eject CD

### 14. NEXT

- Press to select next track or station.
- Press and hold for fast forward or Tune Up.

### 15. SRC/PWR (Source/Power)

- Press to turn Radio ON
- Press to switch to FM->AM->WX weather band->SXM satellite-> CD->USB/iPod-> Rear/Front AUX-> Bluetooth.
- Press and hold to turn radio OFF.
- With the ignition off, pressing the button will turn on the receiver and it will turn off after one hour (timer).

### 16. Rotary knob

- Press for less than 3 seconds to display Audio Control Menu.
- Press for more than 3 seconds to Show the User Menu.
- Rotate to Increase/decrease Volume or during a Menu for Navigation.
- Press while in a Menu to confirm the selected action.

### 17. CD slot

- Insert/Remove CD

### NOTE

*Using phone when driving is not recommended. For this reason, there are no microphones installed on the radio at the factory.*