

Seat Cushion Replacement

Seat Cushion Removal:

- 1) To remove the seat cushion, remove the two ten-millimeter lock nuts on the underside of the thigh extension and lift up to release off the rake adjustment frame.
- 2) Then pull either rear corner of the seat cushion up and out, pull up to release it off the Velcro that holds it into place. Slide the cushion forward to undo the J-retainer that holds the front edge to the seat frame pan.
- 3) To remove the seat covers just undo the Velcro on all four sides and pull the cushion out. Remove the staples on the thigh extension cover and pull the plastic retainers from the front and rear to remove the plastic housing, then remove the thigh foam.
- 4) To reinstall repeat in instructions in reversal.



1. Seat cushion with thigh ext.



2. Ten-millimeter lock nuts on underside of thigh extension.

3. Thigh extension removed



4. Seat cushion removed, undo Velcro sides to remove cushion.

