

MULTIPLEX INPUT LIST

Module.Pin#	Signal name	Ignition Key switch	Page	Connected devices
A36.JA:11	I_AccKeySw	Accessories Key switch		
A36.JA:12	I_HazardSw	Hazard Switch		
A36.JA:14	I_FireSensorA36	Fire Sensor On A36		
AE.	I_A41_NormalMode			
AE.	I_A43_NormalMode			
AE.	I_A44_NormalMode			
AE.	I_A55_NormalMode			
AE.	I_A56NormalMode			
AE41.J1:17	I_ParkBrSe	Paking Brake Sensor	12.1	
AE41.J1:2	I_CadecCrankDis2	Cadec Crank Disable	42.3	
AE41.J1:21	I_BrakePedSec		12.1	
AE41.J1:5	I_StartEna2		3.2	
AE41.J2:13	I_WebFireComp		38.1	
AE41.J2:4	I_LuggDrOpenSe	Luggages doors open sensor	25.1	
AE42.J1:17	I_BrakIntrk		12.1	
AE42.J1:2	I_AuxByPassSw		12.1	
AE42.J1:21	I_BrakPresDriver		12.1	
AE42.J1:5	I_KneeSw		32.1	
AE42.J2:1	I_KneeLevelSe		32.1	
AE42.J2:3	I_MasterSwIntlk		12.1	Sw140:B
AE43.J1:24	I_BatMonMod43			
AE43.J2:6	I_LuggDrLkSe		33.2	
AE44.J1:20	I_IgnKeySw	Ignition Key switch	3.2	
AE44.J1:21	I_FrEngStaSw	Front Engine Start Switch	3.2	
AE44.J2:5	I_SunVisorDrv	sun visor drv sw	41.1	
AE44.J2:6	I_SunVisorPass	sun visor pass sw	41.1	
AE44.J2:8	I_FireExt2ndAlm		38.1	
AE44.J2:9	I_FireExt1stAl		38.1	
AE45.J1:21	I_CadecEngShtDw	Cadec Engine ShutDown	42.5	
AE45.J2:5	I_CadecCrankDis	Cadec Crank Disable	42.5	
AE46.J1:20	I_LHFishSw	Left Hand Flasher Switch	26.1	
AE46.J1:24	I_BatMonMod46			
AE47.J1:20	I_LowWiperCam	Low wiper Cam	34.1	
AE47.J1:21	I_EntDorClSe	Entrance Door Close Sensor	29.1	
AE47.J1:24	I_BatMonMod47			
AE47.J2:5	I_EntDorOpSw2		29.1	
AE47.J2:8	I_EntDorClOutSw	Entrance Door Close Outside Switch	29.1	Sw34:1
AE47.J2:9	I_EntDorOpSe	Entrance Door Open Sensor	29.1	
AE48.J1:24	I_BatMonMod48			
AE48.J2:5	I_RHFishSw	Right Hand Flasher Switch	26.1	
AE49.J1:20	I_AltSeUR		1.2	
AE49.J1:24	I_BatMonMod49			
AE49.J2:11	I_RrAxLLoadSe		32.2	

MULTIPLEX INPUT LIST

Module.Pin#	Signal name	Ignition Key switch	Page	Connected devices
AE50.J1:20	I_RetdrSig	Retarder Signal	15.1	A1:24
AE50.J1:24	I_BatMonMod50			
AE51.J1:20	I_LHFfshSwRrSig	LH FlasherSwitch Rear Signal	26.2	
AE51.J1:21	I_BrakePedPri		12.1	
AE51.J2:5	I_RHFfshSwRrSig	RH FlasherSwitch Rear Signal	26.2	
AE52.J1:20	I_StartEna1		3.2	
AE52.J1:24	I_BatMonMod52			
AE52.J2:5	I_EngStaRrSw	Engine Start Rear Switch	3.2	
AE52.J2:6	I_EngDoorSe	Engine Door Sensor	25.1	
AE52.J2:8	I_AltSeLR		1.2	
AE52.J2:9	I_AltSeLL		1.2	
AE53.J1:20	I_LavFfshSw	Lavatory Flushing Switch	11.1	
AE53.J1:21	I_LavEmrgSw	Lavatory Emergency Switch	11.1	
AE53.J1:24	I_BatMonMod53			
AE53.J2:5	I_LavDorLockSe		11.1	
AE53.J2:6	I_WdoOpen2Se	Passenger Window Open Sensor	27.1	Res11.B:1
AE54.J1:20	I_AcDorOpSe	Condensor Door Open Switch		
AE54.J1:24	I_BatMonMod54			
AE54.J2:11	I_SuperHeatSe		18.2	Se24:3
AE54.J2:8	I_AcPresHiSse	Ac Pressure High Side Sensor	18.2	
AE54.J2:9	I_AcPresLoSse	Ac Pressure Low Side Sensor	18.2	Se24:2
AE55.J1:21	I_DimmerSw	Dash BackLighting	19.1	Sw161:5B
AE55.J2:1	I_DrvLtSw	Driver Light Switch	19.1	D83.A:1
AE55.J2:10	I_LwWipIntSw	Lower Wiper Intermitant Switch	34.1	Sw1.C258:7
AE55.J2:11	I_LwWshSw	Lower Wiper Washer Switch	34.1	Sw1.C258:6
AE55.J2:12	I_IntDorOpSw	Entrance Door Open Switch	29.1	Sw33:3
AE55.J2:13	I_EntDorClInSw	Entrance Door Close Inside Switch	29.1	Sw32:3
AE55.J2:2	I_BackLightSig	BackLight Cluster		
AE55.J2:3	I_InDirLtsSw	Passenger Indirect lightning Switch	23.1	D55.A:1
AE55.J2:4	I_ReadLtsSw	Passenger Reading lights Switch	22.2	Sw26:3
AE55.J2:5	I_ReadDockSw		22.2	Sw25:6
AE55.J2:6	I_RetarderSel	Retarder Selected	12.1	Sw16:3
AE55.J2:7	I_WclSw	Wheel Chair Lift Dash Switch	36.1	Sw20:3
AE55.J2:8	I_UpperDeffFanSw	Upper Defrost Dash Switch	18.4	Sw21:3
AE55.J2:9	I_PRackFanSw	Parcel Rack Fan Switch	18.3	Sw27:3
AE56.J1:17	I_HdLtPos1Sw	Head Light Switch Position Markers	26.1	
AE56.J1:2	I_HeadLmpWshSw		34.1	Sw6:4
AE56.J1:20	I_HiBeamCallSw	Hi/Low Beam Switch	26.1	Sw1.C259:4
AE56.J1:21	I_HdLtHiLowBmSw	Head Lights High and Low Beam Switch	26.1	Sw1.C258:8
AE56.J2:1	I_WdoOpenSe	Passenger Window Open Sensor		
AE56.J2:10	I_DockingLtSw	Docking Lights Switch		
AE56.J2:12	I_LHFfshSwLHom		26.1	
AE56.J2:13	I_RHFfshSwLHom		26.1	

