



MAINTENANCE INFORMATION

MI25-16

DATE :	May 2025	SECTION: 00 GENERAL	
SUBJECT :	BEST PRACTICE GUIDE FOR MOBILE COLUMN		

First Release

07-08-2025

APPLICATION

Model	VIN	
All Prevost vehicles		All Prevost vehicles

DESCRIPTION

This maintenance information explains the best practice with mobile column elevators.

SAFETY PRECAUTIONS

- Eye protection should always be worn when working in a shop.
- Rules for Personal Protection Equipment should always be respected. Wear your PPE including but not limited to the following:



PROCEDURE



DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.



4. Secure the vehicle with six(6x) jack stands.

Refer to maintenance information MI18-18 for the jack stand capacity and location on the vehicle.







Access all our Service Bulletins on <u>http://techpub.prevostcar.com/en/</u> Or scan the QR-Code with your smart phone

. **Are you a Vehicle owner?** *E-mail us at <u>technicalpublications prev@volvo.com</u> and type "ADD" in the subject to receive warranty bulletins applicable to your vehicle(s) by e-mail.*