

FUSES

No	Location	PartNo	Function	Rating	Page					
F1	FuseBoxFJB	563279	CecmPower	3amp	4.1	F50	FuseBoxRJB	563284	EnginePre-Heat	15amp 5.1
F2	FuseBoxFJB	563279	FrontStartMainSwitch	3amp	4.1	F51	FuseBoxRJB	563153	EnginePre-Heat	25Amp 5.1
F3	FuseBoxFJB	563279	EnginePre-HeatH.W.+DrvLiq.Vlv	3amp	4.1	F52	FuseBoxRJB	563284	SpareFuse	15amp 5.1
F4	FuseBoxFJB	563279	WirelessMicrophone	3amp	4.1	F53	FuseBoxRJB	563284	PwrMuxA54	15amp 5.1
F5	FuseBoxFJB	563165	24vtoWUp	30amp	4.1	F54	FuseBoxRJB	563284	Customer	15amp 5.1
F6	FuseBoxFJB	563005	Customer24VD	7.5amp	4.1	F55	FuseBoxRJB	563283	EmergencyLts	10amp 5.1
F7	FuseBoxFJB	563279	Abs+PreHeatController	3amp	4.1	F56	FuseBoxRJB	563283	IndirectLightingLH	10amp 5.1
F8	FuseBoxFJB	563279	AirHorn	3amp	4.1	F57	FuseBoxRJB	563283	IndirectLightingRH	10amp 5.1
F9	FuseBoxFJB	563284	SpareFuse	15amp	4.1	F58	FuseBoxRJB	563283	DirectLightingLH	10amp 5.1
F10	FuseBoxFJB	563279	SpareFuse	3amp	4.1	F59	FuseBoxRJB	563283	DirectLightingRH	10amp 5.1
F11	FuseBoxFJB	563279	SunVisor	3amp	4.1	F60	FuseBoxRJB	563283	ReadingLampRH	10amp 5.1
F12	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1	F61	FuseBoxRJB	563283	ReadingLampLH	10amp 5.1
F13	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1	F62	FuseBoxRJB	563283	LavatoryNightLight	10amp 5.1
F14	FuseBoxFJB	563284	Customer	15amp	4.1	F63	FuseBoxRJB	563283	EnginePre-Heat	10amp 5.1
F15	FuseBoxFJB	563004	*opt*	2Amp	4.1	F64	FuseBoxRJB	563283	Spare	10amp 5.1
F16	FuseBoxFJB	563153	DefrosterUnit	25Amp	4.1	F65	FuseBoxRJB	563165	PwrMuxModuleRJB	30amp 5.1
F17	FuseBoxFJB	563280	DestinationSign	5Amp	4.1	F66	FuseBoxRJB	563279	RadiatorFanClutch	3amp 5.1
F18	FuseBoxFJB	563284	UpperWiper	15amp	4.1	F67	FuseBoxRJB	563153	PwrMuxA54	25Amp 5.1
F19	FuseBoxFJB	563279	Prodriver	3amp	4.1	F68	FuseBoxRJB	563153	PwmMuxA54	25Amp 5.1
F20	FuseBoxFJB	563279	WitnessRedLed	3amp	4.1	F69	FuseBoxRJB	563005	HatRackLightingLHandRH	7.5amp 5.1
F21	FuseBoxFJB	563282	PwrMuxA44	20amp	4.1	F70	FuseBoxRJB	563005	Customer24VI	7.5amp 5.1
F22	FuseBoxFJB	563279	SteeringCtrl	3amp	4.	F71	FuseBoxRJB	563284	SpareFuse	15amp 5.1
F23	FuseBoxFJB	563284	ABS	15amp	4.1	F72	FuseBoxRJB	563153	PwrMuxA50	25Amp 5.1
F24	FuseBoxFJB	563005	Mirror	7.5amp	4.1	F73	FuseBoxRJB	563282	SpareFuse	20amp 5.1
F25	FuseBoxFJB	563280	BackupCamera	5Amp	4.1	F74	FuseBoxRJB	563283	EcuEngineIgnition	10amp 5.1
F26	FuseBoxFJB	563279	SpareFuse	3amp	4.1	F75	FuseBoxRJB	563283	EcuTransmissionIgn	10amp 5.1
F27	FuseBoxFJB	563284	Customer	15amp	4.1	F76	FuseBoxRJB	563283	Customer	10amp 5.1
F28	FuseBoxFJB	563282	DriverWindow	20amp	4.1	F77	FuseBoxRJB	563283	EcuTransmissionWakeUp	10amp 5.1
F29	FuseBoxFJB	563279	ClusterandDDDR	3amp	4.1	F78	FuseBoxRJB	563284	EcuEngineWakeUp	15amp 5.1
F30	FuseBoxFJB	563284	PwrOutletandCigarLighter	15amp	4.1	F79	FuseBoxRJB	563284	EcuEngineWakeUp	15amp 5.1
F31	FuseBoxFJB	563279	KeylessModule	3amp	4.1	F80	FuseBoxRJB	563284	PwrMuxA51	15amp 5.1
F32	FuseBoxFJB	563282	SpareFuse	20amp	4.1	F81	FuseBoxRJB	563004	PwrOfRearSwitchBox	2Amp 5.1
F33	FuseBoxFJB	563165	12VDtoWakeUp	30amp	4.1	F82	FuseBoxFJB	563284	LowerWiper	15amp 4.1
F34	FuseBoxFJB	563165	12VDtoWakeUp	30amp	4.1	F83	FuseBoxFJB	563005	SoundSystem	7.5amp 4.1
F35	FuseBoxFJB	563283	12vPwrOutlet	10amp	4.1	F84	FuseBoxFJB	563284	Customer	15amp 4.1
F36	FuseBoxFJB	563279	PwrHvacandTtltModule	3amp	4.1	F85	FuseBoxRJB	563283	SpareFuse	10amp 5.1
F37	FuseBoxFJB	563283	SpareFuse	10amp	4.1	F86	FuseBoxRJB	563283	Elect. Air Dryer	10amp 5.1
F38	FuseBoxFJB	563283	SpareFuse	10amp	4.1	F87	FuseBoxRJB	563283	SpareFuse	10amp 5.1
F39	FuseBoxFJB	563283	SpareFuse	10amp	4.1	F88	FuseBoxRJB	563283	SpareFuse	10amp 5.1
F40	FuseBoxFJB	563283	SpareFuse	10amp	4.1	F89	FuseBoxRJB	563284	SpareFuse	15amp 5.1
F41	FuseBoxFJB	563283	SpareFuse	10amp	4.1	F90	EngineCmpt.	560893	StarterSensorFuse	3.2
F42	Dash	560893	MemoryFuse	7amp	35.0					
F43	Evap.Cmpt.	560893	To Pre-Heater	3amp	18.2					
F44	FJB	560599	FuseDestinationSign	5amp	3.3					