

FUSES LIST

No	Location	Part #	Function	Rating	Page
F92		*opt*	*opt*		40.1
F93		*opt*	*opt*		40.1
F94		*opt*	*opt*		40.1
F96	FuseBoxRJB	563284	*opt*	20amp	5.1
F96	Parcel_Rack_LH_1st_Cmpt_	562605	*opt*	20Amp	35.6
F98	FuseBoxRJB	563284	*opt*	15amp	5.1
F99	FuseBoxRJB	563153	*opt*	15Amp	5.1
F107		560599			4.1
F108	Evap_Cmpt_	560893	*opt*		18.2
F110		560061	*opt*		3.3
FL_Strobe					35.4
FR_Strobe					35.4
FRONT_CAM		561904	*opt*		35.5
Fuse_ATO_10A_211100_189_1_189		562407	F96	10A	35.5
Fuse_ATO_15A_208779_189_1_189		562604	F42	15A	35.5
Fuse_ATO_15A_208783_189_1_189		562604	F99	15A	35.5
Fuse_ATO_15A_242214_358_1_358		562604	F99	15A	35.6
Fuse_ATO_15A_242216_358_1_358		562604	F42	15A	35.6
Fuse_ATO_1A_206486_150_1_150		562597		125A	14.2
Fuse_ATO_30A_208777_189_1_189		562396	F46	30A	35.5
Fuse_ATO_30A_241914_358_1_358		562604	F46	15A	35.6
FUSE_BOX_1	Parcel_Rack_LH_1st_Cmpt_	562610	Fuse_Box		35.5