

WIRING DIAGRAM INDEX

Information Pages		E	M	T			
Multiplexed Devices Index	B1 - B8	Emergency and Aisle lights	20.1	Main Distribution Ignition & Batt.	3.1	Tag Automatic unload system	32.1
Arrangement - Harness	C1	Engine brake and Retarder	12.1	Main Distribution Wake-Up	3.3	Tail and Licence Lights	26.2
Sound System	C2	Engine Start	3.2	Marker Lights	26.1,26.2	Test Switch	9.1
Can Configuration	C3	Engine ECM	14.1	Mirror Ramco	31.1	Transmission ECU	15.1-15.2
Glossary	D	Engine Override	14.1	Multiplexing Power	7.1	Trailer Package	26.4
Circuit Number Listing	E	Entrance door & Lights	29.1	Multiplexing Network	6.1		
Circuit Breaker code	F	Ether Start	13.1				
Connectors code	G						
Diode Number Code	H						
Resistors Number Code	J						
Fuses Code	L	F				U	
Relay Code	K	Fast Idle	14.1			Under Floor Lighting	25.1
		Fire Alarm	9.1				
		Flashers	26.1,26.2	P		W	
		Fog lights	26.3	Parcel Rack A/C system	18.2	Watch your step	29.1
		Fuel Gauge	10.1	Park Brake Sensor	12.1	Wheelchair Lift Ricon	36.1
A		Fuel Prime Pump	13.1	Park Brake Trailer Sensor	12.1	Window Ajar	27.1
Abs	16.1,16.2	Fuel water Filter	13.1	Parking Brake Release Switch	32.1	Wiper & Washer	34.1
Air Dryer (Optional)	38.1sp1			Power Distribution FJB	4.1	Water Pre-Heater	17.1
				Power Distribution RJB	5.1		
		G		Power Outlet	30.1		
		Grounds	2.1	Prime Pump	13.1		
		Galley	40.1	Pneumatic Cut-Out Acc.	9.1		
		H		R			
		Hat Rack Lighting	21.1	Radiator Fan Clutch	13.1		
		Hazard	26.1	Reading Lamp	22.1		
		Head Lights	26.1				
		Horn	9.1				
		Hostess Chime	22.1				
		Hvac Defroster	18.1	S			
		Hvac Passenger	18.2	Service Brake Relay	12.1		
				Sound System	35.0-35.3		
		I		Spare Wires	8.1		
		Indirect lighting	23.1	Stop lights	26.2		
				Sun Visor	30.1		
		K		Steering Control ZF	37.1		
		Kneeling system	32.1				
		L					
		Lavatory	11.1				
		Low Buoy	32.1				
		Luggage Door Lock/Unlock	33.1, 33.2				