

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	WCLRemoteCtrl	0PR1	GndDestinationSign	12VA	12vEqualizer
2	DoorUnlockSig	0PR2	Gnd_Fr_Clearance_Lts	12VD	12VD_Battery
2B	CondensorLow	0PR3	UpperDefrosterGnd	12VD1	12VDFrontWake-up
3	DoorLatchSig	0R	GndPrimePump	12VD2	12VD_CPC
4A	SOUND_SYSTEM	0RA2	GndR1-R3	12VD3	12vRearwake-up
4C	HostessChimeSig	0RA3	GndR1-R3	12VD4	12vEngineEcu
4c	wcl_extra_switch	0RB1	RJB_Chassis_GND	12VDCust	12VDCustomer
5	EmergandAisleLampsPwr	0RB3	ChassisGnd	12VDF	12VDtoFrontVec
5A	UpperDefrostfan	0RB4	AirdryerGnd	12VI	12VItoCB10
5B	UpperDefrostfan	0RB5		12VI1	12VIofA44
5C	UpperDefrostfan	0RB6	RJB_Chassis_Gnd	12VI2	MirrorPwr
6	GndWitnessSw24	0RC2	GndDriverCylinder	12VI3	PwrOutletDrawer
7	GndDriverSensor	0RC3	GndR23	12VI4	PwrOutletandCigarLighter
8	GndParkBrakeSol	0RC4	GndEntranceLights	12VI5	12VItoVECR
9	EngCmpt.LtsSwitch	0SA1	GndAlternator	12VI6	PwrtoModuleA50
9A	EngineDoorOpenSig	0SA2	GndAlternator	12VI7	Lugg_Door_Lock
9B	EngineCmpt.Lt	0SS	Parcel_Rack_Pwr	12VI8	Lugg_Door_Lock
0A	Evap.Gnd	0SS1	SOUND_SYSTEM	12VICust	12VICustomer
00A	GndElectronic	0SS2	Flip_Down_Screen	12VIF	12VItoFrontVec
0B	EngineChassisGnd	0SS3	SOUND_SYSTEM	12VIF19	12vDDDR
00B	ElectronicGndofMuxModules	0SS4	SOUND_SYSTEM	12VISS1	SOUND_SYSTEM
0C	GndStarter	0V	LuggageDoorOpenSig	12VISS2	SOUND_SYSTEM
0CD	SOUND_SYSTEM	0VE	GndEqualizer	12VISS3	SOUND_SYSTEM
0CE	Gnd	0W	WCLGnd	12VISS4	SOUND_SYSTEM
0CG	Batteries_Chassis_Gnd	0WC	WCLGnd	12VISS5	GPS
0EV1	CondensorGnd	0Y	GndSignal	12VIZF	ZFsterringControl
0EV2	GndFlashersandMarkersCenter	0lav	wclextraswitch	12W	DoorUnlockSol
0EV3	Evap_Cmpt_Gnd	10	LuggageCmpt.LtsPwr	12WA	DoorFullOpenSig
0EV6	PRackChassisGnd	10A	LuggageCmpt.LtsPwr	12WUp1	12VWUptoA48
0F	FJBDDoorOpenSig	10R	LuggageDoorOpenSig	12Wup1	12WUpFront
0FA1	GndofAccessoires	11	DestinationSignPwr	12Wup2	12WUptoDash
0FA4	GndPwrOutlet	12	G12_To_G24	12WUp5	PwrtoModuleA51
0FB1	GndMirrors	12A	12VDtoR3	13	SignalToPre-heatrelay
0FB2	GndSw28	12B	12VD_Battery	14A	FlushingPumpSig
0FB3	GndMasterID	12CD	SOUND_SYSTEM	15A	
0FC1	Lugg_Door_Gnd	12CPC	12VD_CPC	16	Speed_Signal
0FC4	ElectricalHorn	12Ecu	12vEngineEcu	18	Wip.WasherLevel
0G	Refrigerator_Option	12F	12VDto12PostRJB	20	Airdryer
0H	GroundCoolantSensor	12H	Dest_Sign	21	FlasherLHSig
0Lav	LavatoryGnd	12MEM	SOUND_SYSTEM	21A	FrontFlasher
0Lav1	GndDirectLights	12SS	12VISoundSystem	21AA	FlashersRearLH
0Lav2	PRackChassisGnd	12SS1	GPS	21B	CorneringLtsLH
0Lav4	GndAisleLampsLH	12SS2	SOUND_SYSTEM	21C	ClearanceLts

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
21D	ClearanceLts	24VI7	LowerWiperPwr	42B	CondensorPwr
22	HazardSwSig	24VI8	24VltoMux	43	WCL
23	FlasherRHSig	24VI9	TrailerLIghtsPackage	43F	WitnessGndSw27
23A	FrontFlasherRH	24VI10	24VI	43G	Parcel_Rack_Vent
23AA	FrontFlasherRHSide	24VI12	HatRackLampsPwr	44	P-RackLHFan
23B	CorneringLtsRH	24VI13	Volvo_Link	45	UpperFanSig
23C	ClearanceLts	24VIA	Cut-outPneumaticAcc	45A	PassengerHeatSig
23D	ClearanceLts	24VICust	24VICustomer	46	FrontFlasherRh
24A	Booster_Block	24VIF	24VltoFrontVEC	46A	FrontMarkers
24CO	PwrtoExcitationResistor	24WC	WCL24VIPower	47	DoorOpenSignal
24D	24DtoCB6	24WL	WCLPowerFeed	47A	DoorOpenSignal
24DZ	ZFTransmission	24WUp1	24WUp_To_A47_A48	48A	DoorOpenSol
2,40E+02	24VltoCB1	24Wup1	For_Master_ID	49	DoorCloseSignal
2,40E+03	24VltoCB1	25	EngineRunSignal	49A	DoorCloseSol
24IZ	ZFTransmission	25A1	ExcitationSignal	50	WitnessGndSig
24SS	24VISoundSystem	25A2	ExcitationSignal	51	WitnessGnd
24SS1	SOUND_SYSTEM	26	DriverWdoPwr	52A	ElectricalHorn
24SS2	SOUND_SYSTEM	26A	DriverWdo	52B	PneumaticHorn
24SS11	SOUND_SYSTEM	26B	DriverWdo	53	LowerWip1stSpd
24SS12	SOUND_SYSTEM	27A	EmergencySwSig	53B	LowerWip2ndSpd
24SS13	Flip_Down_Screen	28	AudibleRlySig	53C	LowerWip.IntSig
24SS21	SOUND_SYSTEM	29	TagAxleValveSig	53D	Washer_ctrl
24SS22	SOUND_SYSTEM	31	UnloaderRH	53E	LowerWiper1stSpd
24VA	24vEquilizer	31B	WiperParkPwr	53F	LowerWasherPump
24VB	24VEnginePreheater	32A	TrailerLIghtsPackage	53G	LowerWip1stSpd
24VB1	24VEnginePreheater	32D		53H	LowerWiper
24VB2	24VEnginePreheater	33	UnloaderLH	54	TestSwitch
24VD	24VD_Battery	34	ParkBrakeReleaseSignal	55	Lugg_Door_Lock_Signal
24VD1	24VDtoRearVec	35	EntranceDoorLights	57A	WaterPump
24VD2	24VDtoRearVec	38	DirectLights	57G	Pre-HeatWebasto
24VD3	24VDofCECM	38A	DirectLights	57GA	Pre-HeattoWtrPmpRly
24VD4	24VDFrontWake-up	38AA	DirectLightsRHRicon	57H	Pre-HeattoWtrPmpRly
24VD5	24VDtoPre-Heat	38BB	DirectLightsLH	57L	Hi-Beam
24VD6	24VDPre-Heat	38C	DirectLightSwSig	57R	HighBeamRH
24VD7	PassandPRackPwr	39	DriverLtSwSig	57Rtn	SignalRtnHeadLtsLH
24VD10	Volvo_Link	39D	DriverLt	58L	LowBeam
24VDCust	24VDCustomer	40	WitnessGnd	58R	LowBeamRH
24VI	24VI	41	24VCondensor	58Rtn	SignalRtnHeadLtsRH
24VI1	24VltoRearVec	41A	CondensorPwr	59	Hi/LowBeamSignal
24VI2	24VltoSw1	41A1	CondensorFan	60	FogsLtsSwSig
24VI4	SunVisorsPwr	41B	CondensorPwr	61	HeadLtsSig
24VI5	24VlofMuxmodules	41Pwm	CondensorLow	62B	LavatoryLts
24VI6	PwrtoDefrostUnit	42A	CondensorPwr	63	ClearanceLts

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
63A	FrontClearanceLts	77BA	A/CClutch	0V2	LuggageDoorOpenSig
63B	ClearanceLts	77C	PassandPRackLiquidValve	0V3	LuggageDoorOpenSig
63C	CtrlHeadBacklight	78	StopLightSensorSig	0Y2	GndChassisABSSol
64	EmergencyLampsSig	78BA		0Y3	GndChassisABSSol
64A	Blinker	79	Decelsignal	0Z0	ZFTransmission
65	FootDamper	79A	StopLightSensorSig	0Z1	ZFTransmission
65A	FootDamper	81	HeadLtCallSw1	0Z2	ZFTransmission
65D	DriverCylinder	82A	CyclopeSignal	100	IndirectLight
65P	Pass.Cylinder	82Low	StopRearLowerLamp	100A	IndirectLight
66	MarkersSigSw2	82Up	TrailerLightsPackage	100B	IndirectLightLH
67	EvaporatorPwr	83	24vAccessories	100C	IndirectLightsSig
67A	Condensor1stSpdSig	84	StartSigSw83	100D	IndirectLightPwr
68	DashDamper	84A	StartSigSw83	101	R1toStarter
68A	DashDamper	84B	StartSigSw83	102A	Alternator
69	ElectricalHorn	85	24VIgnition	103	LowBuoySig
70A	HatRackLighting	85A	Ign-AccSignal	105	FogLtsLH
70B	HatRackLighting	85B	Wake-upSig	106	FogLtRH
70C	HatRackLighting	85BB	Ign-AccSignal	111	Transmission
70D	HatRackLighting	85C	PositionNormalSw58	114	BacklightPwr
70E	GndHatRackLamps	85D	RearStartPwr	114A	Backlight
70F	GndHatRackLamps	85E	RearStartSignal	114AA	ClusterKeyPadBacklight
70G	GndHatRackLamps	85F	EgnineStartPwrSw58	115	Transmission
70H	GndHatRackLamps	85G	Ign-AccSignal	115A	WitnessPwr
70J	GndHatRackLamps	85X	24VIgn	115W	ZF_Transmission
71A	DockingLtsLH	85Y	ABSTTLT	116	DriverLiq
72A	DockingLtsRH	85Z	AbsTrailerWarningSignal	116A	DriverLiq
72B	SunVisorRHSig	86	DefrostunitSpd	119	Transmission
72C	SunVisorSignal	86ARtn	EntranceCeilingLtGnd	120	Transmission
72D	SunVisorRHSig	86Rtn	Gnd	122	DigitalClock
73	wclextraswitch	87	GndSignal	123	FireAlarm
73A	RearOccupiedSig	88	TransducerPwr	124A	ShifterSignal
74	ReadingLampSig	89	DriverSensorSig	125	RetarderActiveLamp
74A	wcl_extra_switch	90H	Evap_Rly_Power	126A	KneelingUpSwSig
74B	ReadingLampsLH	90H1	EvaporatorMain	126B	KneelingDownSwSig
74C	ReadingLamp	91	ParkBrakeSig	126C	ProximitySwSig
74D	ReadingLamps	91B	WitnessSigSw14	126D	ProximitySwPwr
75	wcl_extra_switch	92	TrailerParkBrakeSig	126E	Kneeling15PsiPress.Sw.
75A	ReadingLampsLH	95	DockingLTswSig	126F	KneelingDownSol
76	FuelLevelSig	96	CorneringLTswSig	126G	KneelingUpSol
76C	FuelLowLevelSig	99	Sw20Gnd	126H	KneelingCtrl.Sol
76P	PrimePumpSig	00A1	GndElectronic	126J	KneelingHi-BuoySol
77	TransducerHi-Side	0B1	GndEnginePreheater	126JR	GndKneeling
77B	PassandPRackLiquidValve	00B1	GndEna.Start	126P	KneelinaBuzzer

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
127	Pre-HeatSignal	151A	GNDECM	181	OutsideSensorSig
127D	ChargerRlyGndSig	151B	GNDECM	188	AutomaticTagUnload
128		151C	GNDECM	197	FuelFilterSig
128B	Pre-HeatTTLT	151D	GNDECM	201	headlampwashersignal
131	Evaporator2ndSpd	152	Transmission	202	Headlampwasherpump
133	Transmission	154	Transmission	225	LavatoryFan
135	Transmission	155	TransmissionInhibitSig	231	
135A	Transmission	155Z	WCLSignal	231A	StarterRelay
136	Transmission	156A	12VltoABS	231B	StarterRelay
136A		157D	ATCTTLT	240A	ECMPOWER
136AA	ShifterSignal	159	Transmission	240B	ECMPOWER
137		160	TagSignal	241A	ECMPOWER
137A	MirrorPwrSig	163	Retarder_Sig	241B	ECMPOWER
137B	Mirrors	164	HandLevelSig	241C	WIF_Heater
137C	Mirrors	166	WitnessSigSw16	254	Frigo
137D	Mirrors	167	Aux.A/CLowPressSig	260	escape_Hatch_sensor
137E	Mirrors	168	Aux.A/CHighPressSig	290	GndFanClutch
137F	Mirrors	170	LuggageLock_UnlockSig	291	FanClutch
137H	Mirrors	170A	Lugg_Door_Lock	292	FanClutch
137J	Mirrors	170B	Lugg_Door_Lock	293	FanClutchSwSig
137K	Mirrors	170D	Lugg_Door_Lock	300	WCLTopLightSliding
137L	Mirrors	170E	Lugg_Door_Lock	301	WheelChairLiftSwitch
137M	Mirrors	170F	Lugg_Door_Lock	302	WCLRicon
138	ABSSensor	170G	Lugg_Door_Lock	303	WCL
138A	ABSSensor	170H	Lugg_Door_Lock_Signal	304	WheelChairLift
139	ABSSolenoid	170L	LuggageLock_UnlockSig	305	ParkBrakeSol
140	ABSSolenoid	170M	LuggageLock_UnlockSig	305A	WCLUpperDoorSignal
141	ABSSolenoid	170N	LuggageLock_UnlockSig	306	WCLTopLights
142	ABSSolenoid	170P	LuggageLock_UnlockSig	307	WCL
143	ABSSensor	170R	LuggageLock_UnlockSig	308	WCL
143A	ABSSensor	170S	ElectronicGnd	309	WCL
144	ABSSensor	170T	LuggageLock_UnlockSig	311	WCL
144A	ABSSensor	170V	LuggageLock_UnlockSig	313	WCL
145	ABSSolenoid	170W	LuggageLock_UnlockSig	314	WCL_Se62
146	ABSSolenoid	170X	LuggageLock_UnlockSig	352	OverrideSignal
146A		170Y	Lugg_Door_Lock	417	ThrottlePositionSignal
147	EtherSignal	170Z	Lugg_Door_Lock	439	12VltoABS
147A	EtherSolenoid	171	LuggageUnlockSwSig	500	Gnd/Supply_Detroit/Volvo
148	ABSSolenoid	174	Transmission	501	Control_Ground_Relay
149	ABSSensor	175	Transmission	502	IVSOut
149A	ABSSensor	176	Transmission	503	DPF_Malfunction
150	Transmission	177	Transmission	504	CrankSignal
151	GndtoEcm	180	Transmission	505	DPFSensor

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
506	DPFSensor	706	ZFTtransmission	B4B	DirectLighting
507	DPFSensor	707	ZFTtransmission	B5A	DirectLighting
508	DPFSensor	708	NeutralSignal	B5B	DirectLighting
510	FastIdleSignal	709	NeutralSignal	B6A	DirectLighting
511	DPFSensor	718	ZFTtransmission	B6B	DirectLighting
512	DPFSensor	719	ZFTtransmission	B7A	DirectLighting
513	DPFSensor	723	ZFTtransmission	B7B	DirectLighting
514	DPFSensor	740	ZFTtransmission	Black	
515	GroundPreheaterRelay	770	ZFTtransmission	Black1	
516	EngineBrakeLowSig	900	J1587	Black2	
517	EngineBrakeHiSig	901	J1587	Black3	
524B	IdleValidationSig	902	ZFTtransmission	BLK1	SOUND_SYSTEM
524C	IdleValidationSig	906	ZFTtransmission	BLK2	SOUND_SYSTEM
528	OverrideSignal	907	ZFTtransmission	Bref1	PassengerSensor
541	CruiseSetSig	910	L_SPEAKER_HARNESS	CAM2	SOUND_SYSTEM
544	CruiseOn_OffSignal	911	EmergencyCutoutRlySignal	CAN2-H	EngineCan2
544A	CruiseOn-OffLed	916	5VSensorPwr	CAN2-L	EngineCan2
545	CruiseResumeSig	917	ZFTtransmission	CanH	CanHSignal
555	FANCONTROL	919	ZFTtransmission	CanH1	SparesFr-to-RearHarness
563	FANCONTROL	925	ZFTtransmission	CanH2	SpareCan
564B	OutZFDecelSig	926	ZFTtransmission	CanL	CanLSignal
583	EngineBrakeHiSig	930	ZFTtransmission	CanL1	SparesFr-to-RearHarness
600	ABSSensor	932	ZFTtransmission	CanL2	SpareCan
600A	ABSSensor	952	GndSensorRtn	Cd	ComputerSignals
601	ABSSensor	953	GNDPCPC	Cd1	ComputerSignals
601A	ABSSensor	979	EngineBrakeLowSig	Cd1_Gnd	SOUND_SYSTEM
602	ABSSteering&Yawsensor	979A	EngineBrakeLowSig	Cd1_L+	SOUND_SYSTEM
603	ABSSteering&Yawsensor	ANT	GPS	Cd1_R+	SOUND_SYSTEM
604	ABSSteering&Yawsensor	AUX1	SOUND_SYSTEM	Cd2_Gnd	SOUND_SYSTEM
605	ABSSteering&Yawsensor	Aux1_Gnd	SOUND_SYSTEM	Cd2_L+	SOUND_SYSTEM
606	ABSPressuresensor	Aux1_L+	SOUND_SYSTEM	Cd2_R+	SOUND_SYSTEM
607	ABSPressuresensor	Aux1_R+	SOUND_SYSTEM	CD3_Gnd	SOUND_SYSTEM
608	ABSPressuresensor	AUX2	SOUND_SYSTEM	CD3_L+	SOUND_SYSTEM
609	ABSPressuresensor	Aux2_Gnd	SOUND_SYSTEM	CD3_R+	SOUND_SYSTEM
610	ABSPressuresensor	Aux2_L+	SOUND_SYSTEM	Chgr	Battery_Charger_Gnd
611	AbsTagSolenoid	Aux_R+	SOUND_SYSTEM	Chgr_C	SOUND_SYSTEM
612	AbsTagSolenoid	B1A	DirectLighting	Chgr_L	SOUND_SYSTEM
613	AbsTagSolenoid	B1B	DirectLighting	Chgr_R	SOUND_SYSTEM
614	ABSSteeringSolenoid	B2A	DirectLighting	Cts	ComputerSignals
615	ABStrailersolenoid	B2B	DirectLighting	DATA	SOUND_SYSTEM
616	ABStrailersolenoid	B3A	DirectLighting	DBusH	DBusSignal
617	ABStrailersolenoid	B3B	DirectLighting	DBusL	DBusSignal
705	ZFTtransmission	B4A	DirectLighting	DOWN	Flip Down Screen

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
DRL+++		LR-	SOUND_SYSTEM	R1A	DirectLighting
DSL+++	DRIVER_SPEAKERS	LX5	ClusterKeyPad	R1B	DirectLighting
DSL---		LX6	ClusterKeyPad	R2A	DirectLighting
DSR+++		LX7	ClusterKeyPad	R2B	DirectLighting
DSR---		LX16	ClusterKeyPad	RED	jack_3_5mm
DUMMY	INSINE_FUSE_BOX	LX21	ClusterKeyPad	RED1	SOUND_SYSTEM
DVD1_Gnd	Sound_System	L_DRIVER	SOUND_SYSTEM	Red1	
DVD1_L+	Sound_System	MUTE		RED2	SOUND_SYSTEM
DVD1_R+	Sound_System	N1	A41Address	Red2	
Dvd2_Gnd	SOUND_SYSTEM	N2	A41Address	Red3	
Dvd2_L+	SOUND_SYSTEM	N3	A42Address	Ref1	GndPassengerSensor
Dvd2_R+	SOUND_SYSTEM	N4	A42Address	Rem1	
E3	Inv_MastrerrelayToBreaker	N5	A43Address	Rem2	
Engine_Can+	EngineCan	N6	A43Address	Rem3	
Engine_Can-	EngineCan	N7	A44Address	RF+	SOUND_SYSTEM
FAKE	L_SPEAKER_HARNESS	N8	A44Address	RF-	SOUND_SYSTEM
FAKE1	R_SPEAKER_HARNESS	N9	A45Address	RR+	DISTRIBUTION_SOUND_HARNESS
FLIP	Flip_Down_Screen	N10	A45Address	RR-	SOUND_SYSTEM
fuilf	fake	N11	A46Address	RT	ZFTransmission
GndA	ComputerSignals	N12	A46Address	Rts	ComputerSignals
Green		N13	A47Address	RTV	SOUND_SYSTEM
GRN1	SOUND_SYSTEM	N14	A47Address	R_DRIVER	SOUND_SYSTEM
GRN2	SOUND_SYSTEM	N15	A48Address	RxD	ComputerSignals
H1_L+	SOUND_SYSTEM	N16	A48Address	SHD1	SOUND_SYSTEM
H1_L-	SOUND_SYSTEM	N17	A49Address	SHD2	SOUND_SYSTEM
H1_R+	SOUND_SYSTEM	N18	A49Address	SHIELD	jack_3_5mm
H1_R-	SOUND_SYSTEM	N19	A50Address	Shield1	
H2_L+	SOUND_SYSTEM	N20	A50Address	Shield2	
H2_L-	SOUND_SYSTEM	N21	A51Address	Shield3	
H2_R+	SOUND_SYSTEM	N22	A51Address	SHLD	SOUND_SYSTEM
H2_R-	SOUND_SYSTEM	N23	A52Address	SL13	L_SPEAKER_HARNESS
HOSTESS	SOUND_SYSTEM	N24	A52Address	SL24	L_SPEAKER_HARNESS
IPJ1	Cluster	N25	A53Address	SL35	L_SPEAKER_HARNESS
IPJ2	Cluster	N26	A53Address	SL46	L_SPEAKER_HARNESS
IPJ5	Cluster	N27	A54Address	SL57	L_SPEAKER_HARNESS
IPJ6	Cluster	N28	A54Address	SL68	L_SPEAKER_HARNESS
IPJ7	Cluster	N29	A36Address	SL1012	L_SPEAKER_HARNESS
IPJ8	Cluster	NavSpk+++		SL1113	L_SPEAKER_HARNESS
J1939H	J1939	NavSpk---		SL1214	L_SPEAKER_HARNESS
J1939L	J1939	OP2	Inverter_Gnd	SL1315	L_SPEAKER_HARNESS
LF+	PSRCEL_RACK_SOUND_HARNESS	ORA2		SL1416	L_SPEAKER_HARNESS
LF-	SOUND_SYSTEM	PP1	for_inverter	sp52	
LR+	PSRCEL_RACK_SOUND_HARNESS	PV1	for_inverter	SpareLock UnlockHarn	SpareLock UnlockHarn

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
spare1	SpareLock_UnlockHarn	spare45	SpareEvapCmpt.	Sub2+	SUBWOOFER_HARNESS
spare2	SpareLock_UnlockHarn	spare46	SpareEvapCmpt.	Sub2-	SUBWOOFER_HARNESS
spare4	SparesEvap.Harness	spare47	SpareEvapCmpt.	SW	ZFTransmission
spare5	SparesEvap.Harness	spare49	SparesEngineCradle	TRIG1	SOUND_SYSTEM
spare6	SparesCondHarness	spare50	SparesEngineCradle	TRIG2	SOUND_SYSTEM
spare7	SparesCondHarness	spare51	SparesEngineCradle	TRIG3	SOUND_SYSTEM
spare8	SparesEvap.Harness	spare52	SparesEngineCradle	TRIG4	SOUND_SYSTEM
spare9	SparesEvap.Harness	spare53	SparesEngineCradle	TRIG5	SOUND_SYSTEM
spare10	SparesInteriorLtsHarness	spare54	SparesEngineCradle	TxD	ComputerSignals
spare11	SparesInteriorLtsHarness	spare55	SparesEnginesAccessories	Unkn	ZFTransmission
spare12	SparesInteriorHarness	spare56	SparesEnginesAccessories	UP	Flip_Down_Screen
spare13	SparesInteriorHarness	spare57	SparesEnginesAccessories	V_CAM+	
spare14	SparesInteriorHarness	spare58	SparesEnginesAccessories	V_CAM-	
spare15	SparesInteriorHarness	spare59	SparesEnginesAccessories	WC2	WCLRemoteCtrl
spare16	SparesInteriorHarness	spare60	SparesEnginesAccessories	WC3	WCLRemoteCtrl
spare17	SparesFr-to-RearHarness	spare61	SparesEnginesAccessories	WC4	WCLRemoteCtrl
spare18	SparesFr-to-RearHarness	spare62	spareABSHarness	WC6	WCLRemoteCtrl
spare19	SparesFr-to-RearHarness	spare64	Spare_Transmission	WC7	
spare20	SparesClearanceLts	spare65	Spare_Transmission	WHITE	jack_3_5mm
spare21	SparesClearanceLts	spare68	SPARE_SOUND_SYST	White	
spare22	SparesClearanceLts	spare70	spare	white1	
spare23	SparesClearanceLts	spare71	spare	White2	
spare24	SparesClearanceLts	spare72	spare	White3	
spare25	SparesClearanceLts	spare73	spare	WHT1	SOUND_SYSTEM
spare26	SparesFrontHarness	spare74	spare	WHT2	SOUND_SYSTEM
spare27	SparesFrontHarness	spare75	spare	Y1A	
spare28	SparesFrontHarness	spare76	spare	Y1B	
spare29	SparesFrontHarness	spWcl1	SpareWCL	Y2A	
spare30	SparesFrontHarness	spWcl2	SpareWCL	Y2B	
spare31	SparesFrontHarness	SR13	FR_SPEAKER_HARNESS_	Y3A	DirectLighting
spare32	SparesFrontHarness	SR24	FR_SPEAKER_HARNESS_	Y3B	DirectLighting
spare33	SparesFrontHarness	SR35	FR_SPEAKER_HARNESS_	Y4A	DirectLighting
spare34	SparesFrontHarness	SR46	FR_SPEAKER_HARNESS_	Y4B	DirectLighting
spare35	SparesFrontHarness	SR57	FR_SPEAKER_HARNESS_	Y5A	DirectLighting
spare36	SparesFrontHarness	SR68	FR_SPEAKER_HARNESS_	Y5B	DirectLighting
spare37	SparesFrontHarness	SR911	R_SPEAKER_HARNESS_WCL	Y6A	DirectLighting
spare38	SparesFrontHarness	SR1012	R_SPEAKER_HARNESS_WCL	Y6B	DirectLighting
spare39	SparesDash	SR1113	R_SPEAKER_HARNESS_WCL	Y7A	DirectLighting
spare40	SparesDash	SR1214	R_SPEAKER_HARNESS_WCL	Y7B	DirectLighting
spare41	SparesDash	SR1315	R_SPEAKER_HARNESS_WCL	ZF_Can1_H	ZFTransmission
spare42	SparesDash	SR1416	R_SPEAKER_HARNESS_WCL	ZF_Can1_L	ZFTransmission
spare43	SparesDash	Sub1+	SUBWOOFER_HARNESS	ZF_Can2_H	ZFTransmission
spare44	SparesDash	Sub1-	SUBWOOFER_HARNESS	ZF_Can2_L	ZFTransmission