



# Ground Distribution


## Electronic gnd to Dash harness

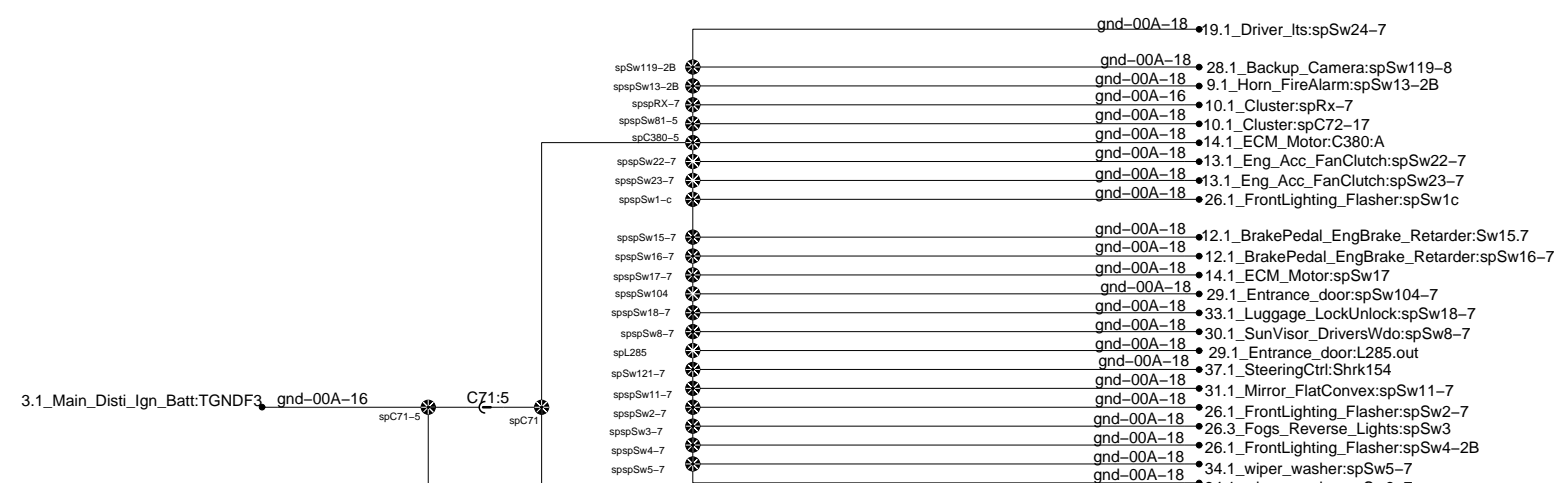


## To LH console electronic gnd

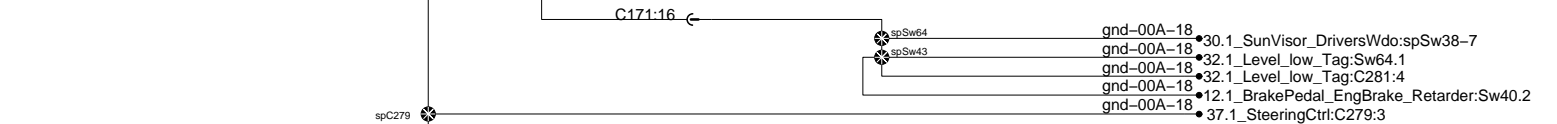





## To RH console electronic gnd

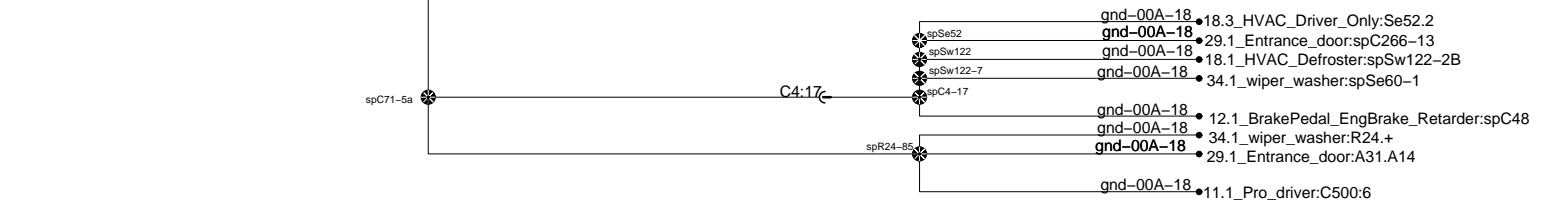


## Eng. cmpt gnd stud

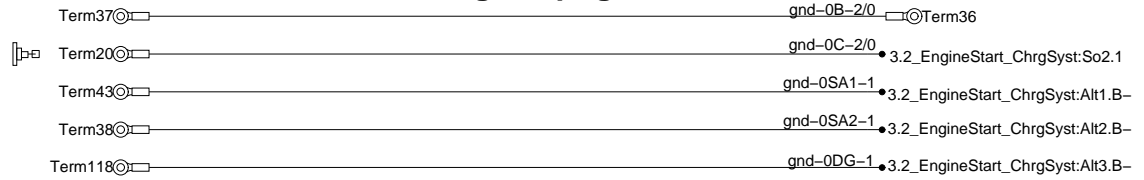


## FJB gnd stud

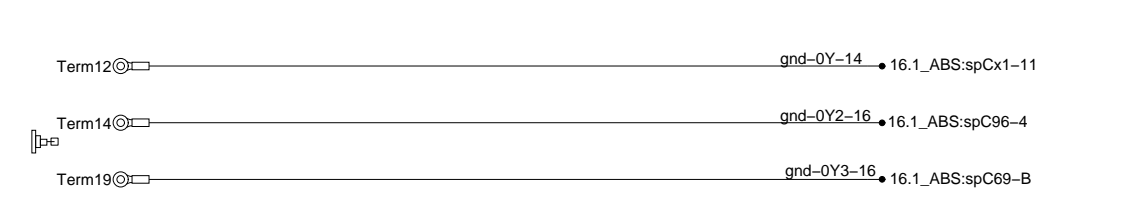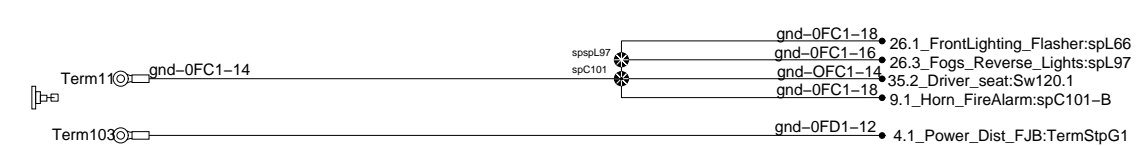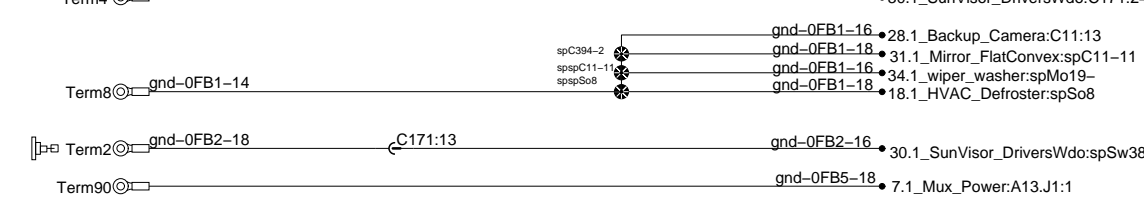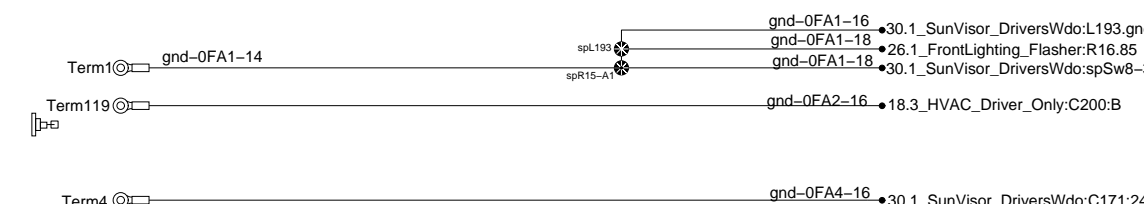


## Front Top gnd stud

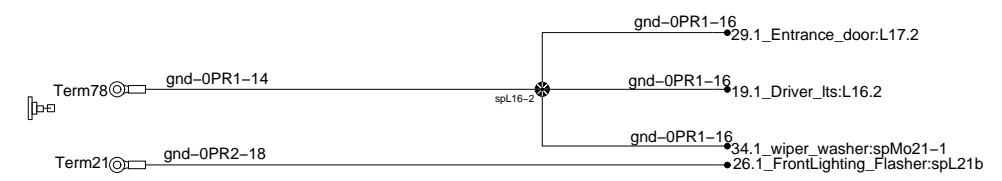


## RH Console gnd stud

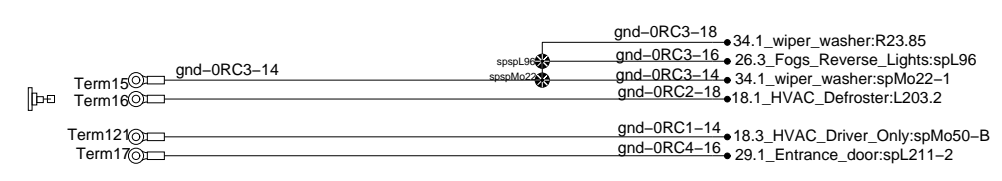




## Evaporator cmpt gnd stud

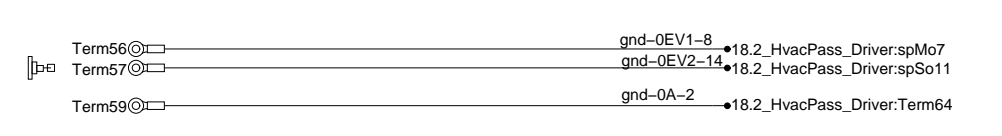


## Engine cmpt electronic gnd

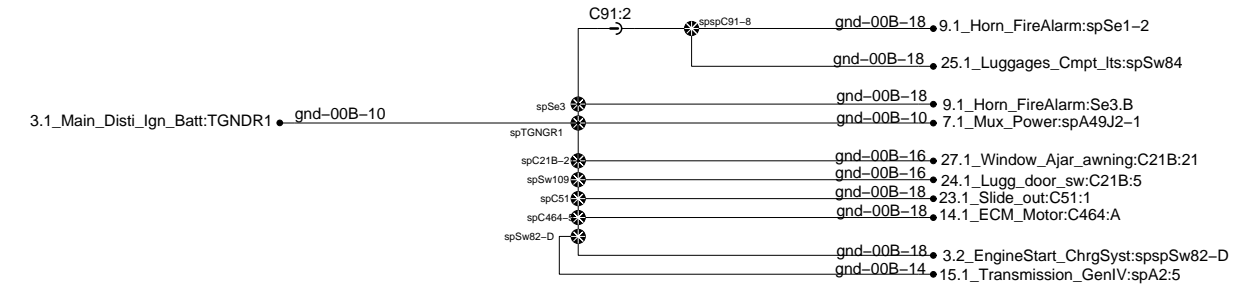

## RJB gnd stud

 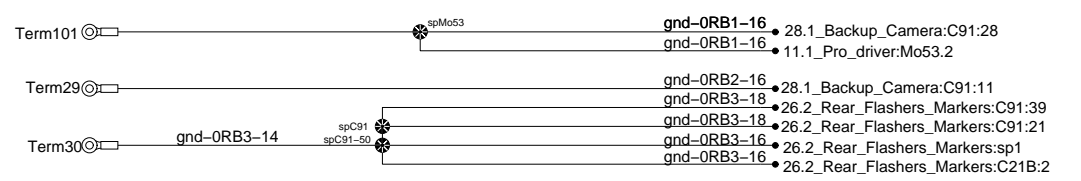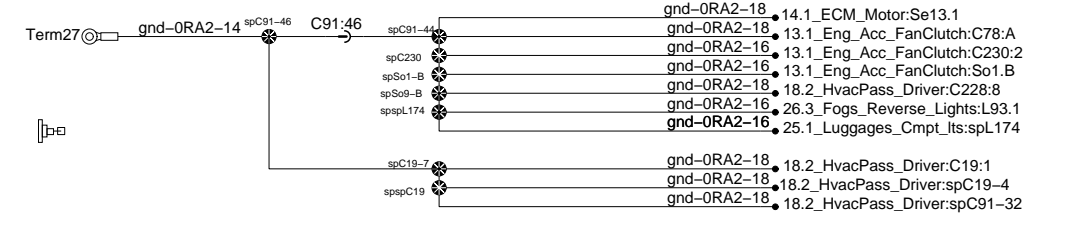

## SLIDE OUT chassis gnd

 

Rev:4

Page:2.1

No:0061040

WIRING DIAGRAM

PREVOST®