

WIRING DIAGRAM INDEX

| | | | | | |
|-------------------------------|-----------|------------------------------------|-----------|------------------------------|-----------|
| Information Pages | | Engine ECM | 14.1 | | |
| Multiplexed Devices Index | B1 – B8 | Engine Override | 14.1 | | |
| Arrangement – Harness | C1 | Entrance door | 29.1 | | |
| Glossary | D | Ether Switch | 13.1 | | |
| Circuit Number Listing | E | Engine bloc heater | 11.1 | | |
| Circuit Breaker code | F | F | | | |
| Connectors code | G | Fast Idle | 14.1 | | |
| Diode Number Code | H | Fire Alarm | 9.1 | | |
| Resistors Number Code | J | Flashers | 26.1,26.2 | | |
| Fuses Code | L | Fog lights | 26.3 | | |
| Relay Code | K | Fuel Sender | 10.1 | | |
| Functions | | Fuel Prime Pump | 13.1 | | |
| A | | Fuel water Filter | 13.1 | | |
| Abs | 16.1 | G | | | |
| B | | Grounds | 2.1 | | |
| Back-up Camera | 28.1 | H | | | |
| Back-up lights and alarm | 26.3 | Hazard | 26.1 | | |
| Battery and Equalizer | 1.1 | Head Lights | 26.1 | | |
| Battery Charger | 17.1 | Horn | 9.1 | | |
| Brake | 12.1 | Hvac Defroster | 18.1 | | |
| C | | Hvac Passenger | 18.2 | | |
| Charging System | 3.2 | Hvac Driver only | 18.3 | | |
| Clearance lights rear & front | 26.1,26.2 | | | | |
| Cluster | 10.1 | K | | | |
| Converter interface | 36.1 | Keyless keypad | 29.1 | | |
| Cornering Lights | 26.3 | L | | | |
| Cruise control | 14.1 | Level low | 32.1 | | |
| D | | Luggage compt lighting | 25.1 | | |
| Dash Lights | 19.1 | Luggage door Lock/Unlock | 33.1 | | |
| Differential lock | 37.1 | Luggage door switches | 24.1 | | |
| Docking Lights | 26.3 | M | | | |
| Driver's Light and Backlight | 19.1 | Main Distribution Ignition & Batt. | 3.1 | | |
| Driver's Power Window | 30.1 | Main Distribution Wake-Up | 3.3 | | |
| Driver's seat | 35.2 | Marker Lights | 26.1,26.2 | | |
| E | | Mirror Ramco | 31.1 | | |
| Engine brake and Retarder | 12.1 | Multiplexing power distribution | 7.1 | | |
| Engine compt lighting | 25.1 | Multiplexing Network | 6.1 | | |
| Engine Start | 3.2 | | | | |
| | | | | P | |
| | | | | Park Brake Sensor | 12.1 |
| | | | | Trailer Brake Sensor | 12.1 |
| | | | | Parking Brake Release Switch | 32.1 |
| | | | | Power Distribution FJB | 4.1 |
| | | | | Power Distribution RJB | 5.1 |
| | | | | Power Outlet | 30.1 |
| | | | | Prime Pump | 13.1 |
| | | | | Prodriver | 11.1 |
| | | | | Pneumatic Cut-Out Acc sol | 9.1 |
| | | | | R | |
| | | | | Radiator Fan Clutch | 13.1 |
| | | | | Rear junction box door fan | 11.1 |
| | | | | S | |
| | | | | Service Brake Relay | 12.1 |
| | | | | Slide out | 23.1 |
| | | | | Slide out (single) | 23.2 |
| | | | | Slide out (double) | 23.3 |
| | | | | Spare Wires | 8.1 |
| | | | | Stop lights | 26.2 |
| | | | | Sun Visor | 30.1 |
| | | | | Steering Control ZF | 37.1 |
| | | | | T | |
| | | | | Tag | 32.1 |
| | | | | Tail and Licence Lights | 26.2 |
| | | | | Test Switch | 9.1 |
| | | | | Transmission ECU | 15.1-15.2 |
| | | | | Trailer Package | 26.4 |
| | | | | W | |
| | | | | Window Ajar &Awning | 27.1 |
| | | | | Wiper & Washer | 34.1 |