

WIRING DIAGRAM INDEX

Information Pages		Engine Detroit	14.1	P	
Multiplexed Devices Index	B1 – B8	Engine Volvo	14.2	Park Brake Sensor	12.1
Arrangement – Harness	C1	Entrance door	29.1	Trailer Brake Sensor	12.1
Glossary	D	Ether Switch	13.1	Parking Brake Release Switch	32.1
Circuit Number Listing	E	Engine bloc heater	11.1	Power Distribution FJB	4.1
Circuit Breaker code	F	F		Power Distribution RJB	5.1
Connectors code	G	Fast Idle	14.1	Power Outlet	30.1
Diode Number Code	H	Fire Alarm	9.1	Prime Pump	13.1
Resistors Number Code	J	Flashers	26.1,26.2	Prodriver	11.1
Fuses Code	L	Fog lights	26.3	Pneumatic Cut-Out Acc sol	9.1
Relay Code	K	Fuel Sender	10.1	R	
Functions		Fuel Prime Pump	13.1	Radiator Fan Clutch	13.1
A		Fuel water Filter	13.1	Rear junction box door fan	11.1
Abs	16.1	G		S	
B		Grounds	2.1	Service Brake Relay	12.1
Back-up Camera	28.1	H		Slide out	20.1
Back-up lights and alarm	26.3	Hazard	26.1	Spare Wires	8.1
Battery and Equalizer	1.1	Head Lights	26.1	Stop lights	26.2
Battery Charger	17.1	Horn	9.1	Sun Visor	30.1
Brake	12.1	Hvac Defroster	18.1	Steering Control ZF	37.1
C		Hvac Passenger	18.2	T	
Charging System	3.2	Hvac Driver onlyr	18.3	Tag	32.1
Clearance lights rear & front	26.1,26.2	J		Tail and Licence Lights	26.2
Cluster	10.1	J1939 Network	6.2	Test Switch	9.1
Converter interface	36.1	K		Transmission ECU	15.1-15.2
Cornering Lights	26.3	Keyless keypad	29.1	Trailer Package	26.4
Cruise control	14.1	L		W	
D		Level low	32.1	Window Ajar &Awning	27.1
Dash Lights	19.1	Luggage compt lighting	25.1	Wiper & Washer	34.1
Differential lock	37.1	Luggage door Lock/Unlock	33.1		
Docking Lights	26.3	Luggage door switches	24.1		
Driver's Light and Backlight	19.1	M			
Driver's Power Window	30.1	Main Distribution Ignition & Batt.	3.1		
Driver's seat	35.2	Main Distribution Wake-Up	3.3		
E		Marker Lights	26.1,26.2		
Engine brake and Retarder	12.1	Mirror Ramco	31.1		
Engine compt lighting	25.1	Multiplexing power distribution	7.1		
Engine Start	3.2	Multiplexing Network	6.1		