

RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	MasterRelay	3.1					
r1				36.1					
r2				36.1					
R3	RJB	563348	12vlgn&AccRelay	3.1					
r3				36.1					
r4				36.1					
R4		563332	Cutoffwaterpreheater	40.1					
r5				36.1					
r6				36.1					
R10	Evap.Cmpt.	563348	CondensorPowerRelay	18.2					
R11	RJBVECR	563332	ZF	5.1					
R12	Evap.Cmpt.	563348	EvaporatorRelay	18.2					
R16	DashBoard	563332	AudibleFlasherRelay	26.1					
R17	RJB	561991	12vRrWUpRelay	3.3					
R18	FJB	561991	24vFrWUpRelay	3.3					
R19	FJB	561991	12vFrWUpRelay	3.3					
R21	RJB	563269	EmergencyCutoutRelay	3.2					
R22		563269	*opt*	3.3					
R23	RHConsole	563332	LowerWiperRelay	34.1					
R24	FJB	563332	UpperWiperRelay	34.1					
R25	RJBVECR	563332	EcmIggn	5.1					
R29	RJB	563348	Preheater	14.2					
R30	RJB	563332	LuggagesDoorsLocksRelay	33.1					
R31	RJB	563332	LuggagesDoorsLocksRelay	33.1					
R32	RJB	563332	LuggagesDoorsLocksRelay	33.1					
R33	RJB	563332	LuggagesDoorsLocksRelay	33.1					
R34	RJB	561991	12v	3.3					
R41			*opt*	38.1					
R42			*opt*	38.1					
R43			*opt*	38.1					
R44			*opt*	38.1					
R45			*opt*	38.1					
RS01		563445	RlyCloseSlide-Out1	20.1					
RS02		563445	RlyOpenSlide-Out1	20.1					
RS03		563445	RlyCloseSlide-Out2	20.1					
RS04		563445	RlyOpenSlide-Out2	20.1					
RS05	Luggagescmpt	563445	RlyCloseSlide-Out3	20.2					
RS06	Luggagescmpt	563445	RlyOpenSlide-Out3	20.2					
RS07	Luggagescmpt	563445	*opt*	20.2					
RS08	Luggagescmpt	563445	*opt*	20.2					
R		*opt*	*opt*	3.2					