

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Clutch SO9	PSID #4	3, 4, 5, 6	A52.J1:20		Front Mkr Lts RH L61	PSID #149	3, 4, 6	A48.J1:7	26.1
A/C Pres HiSd SE23	PSID #28	3, 4	A52.J1:13	18.2	Hazard Switch Sw4	PSID #138	3, 4	.	
A/C Pres LoSd SE24	PSID #29	3, 4	A52.J1:14	18.2	Hd Light Call SW1	PSID #140	3, 4	.	
Backup Light & Alm	PSID #167	3, 4, 6	A50.J1:3	26.3	HdLamp Wsh Pmp Mo54	SID #48	3, 4, 6	.	
Blinker SW1	PSID #139	3, 4	.		Head Lights Pos1 SW2	PSID #143	3, 4	.	
Center Flash LH L70	PSID #124	3, 4, 6	A50.J1:5	26.2	Head Lt Sw Pos2 Sw2	PSID #11	3, 4	.	
Center Flash RH L68	PSID #125	3, 4, 6	A50.J1:7	26.2	Hi Low Beam Sw1	PSID #6	3, 4	.	
Center Mkr L67-L70	PSID #27	3, 4, 6	A50.J1:8	26.2	High Beam LH L60	PSID #141	3, 4, 5, 6	.	
Cond Rly spd1 R10	PSID #41	3, 4, 5, 6	A54.J1:5	18.2	High Beam RH L59	PSID #145	3, 4, 5, 6	A48.J1:3	26.1
Cond Rly spd2 R9	PSID #42	3, 4, 5, 6	A54.J1:1	18.2	LH Corner Lts L97	PSID #120	3, 4, 5, 6	.	
Condensor Door Sw7	PSID #7	3, 4	A49.J1:3		LH Docking Light L93	PSID #122	3, 4, 5, 6	A51.J1:4	26.3
Cornering Dash Sw30	PSID #200	3, 4	.		Low Beam LH L60	PSID #142	3, 4, 6	.	
Defr water Pmp Mo50	SID #41	3, 4	A47.J1:20	18.1	Low Beam RH L59	PSID #146	3, 4, 6	A48.J1:4	26.1
Diff Lock sol So35	SID #36	3, 4, 6	A52.J1:4	23.1	Low Wip Spd1 Mo22	PSID #184	3, 4, 5, 6	A47.J1:3	31.1
Docking Dash Sw31	PSID #3	3, 4	.		Lower Washer pmp	PSID #181	4, 6	.	
Driver Light L16	PSID #104	3, 4, 5, 6	A47.J1:6	19.1	Lower Washer SW1	PSID #188	3, 4	.	
Driver Light SW24	PSID #105	3, 4	.		Lower Wip Int SW1	PSID #183	3, 4	.	
Drv Rec Cylind L203	PSID #30	3, 4, 5, 6	A47.J1:2	18.1	Lugg doors locks R30	SID #44	3, 4, 5, 6	.	
Elec Horn L185 L186	PSID #83	3, 4, 5, 6	.		Lugg doors unl R32	SID #45	3, 4, 5, 6	.	
Elec. Horn SW61 SW62	PSID #82	4	.		OutDoor Sens SE20	PSID #161	3, 4, 5	A54.J1:14	18.1
Emergency Relay R21	PSID #44	3, 4, 5, 6	.		Pass Heat Sol SO13	PSID #24	3, 4, 6	A54.J1:8	18.2
Eng Cmpnt Bulb L173	PSID #106	3, 4, 5, 6	A52.J1:5	25.1	Pass Rfg Sol SO11	PSID #23	3, 4, 5, 6	A54.J1:3	18.2
Eng Cmpnt Sw	PSID #107	3, 4	A52.J1:11	25.1	Pass. Wtr pump MO12	PSID #17	4, 6	A54.J1:4	
Eng Ether SW23	PSID #50	3, 4	.		Rear CutOut Sw82	PSID #18	3, 4	.	
Eng Fan Dash SW22	PSID #55	3, 4	.		Rear Flsh LH L71 L75	PSID #131	3, 4, 6	A51.J1:21	
Eng Fan Spd1 Req	PSID #51	3, 4	A52.J1:9	13.1	Rear Flsh RH L73 L76	PSID #132	3, 4, 6	A51.J1:3	
Eng Fan Spd2 Req	PSID #52	3, 4	A52.J1:10	13.1	Rev lights L91 L92	SID #43	3, 4, 5, 6	A50.J1:20	26.3
Eng. Ether Sol SO1	PSID #49	3, 4, 6	A52.J1:6	13.1	RH Corner Light L98	PSID #121	3, 4, 5, 6	A48.J1:5	26.3
Engine Fan Spd1 MO2	PSID #53	3, 4, 5, 6	A52.J1:1	13.1	RH Docking Light L94	PSID #123	3, 4, 5, 6	A51.J1:5	26.3
Engine Fan Spd2 MO2	PSID #54	3, 4, 5, 6	A52.J1:2	13.1	RJB fan Mo53	SID #37	3, 4, 6	.	
Evap Motor Rly R12	PSID #77	3, 4, 5, 6	A54.J1:7	18.2	Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26.2
Evap Spd Ctrl MO9	PSID #78	4, 6	A54.J1:2	18.2	SldO 5v supply	SID #23	3, 4	A56.J1:15	20.1
Fire Sensor	PSID #79	3, 4	.		SldO Close Sw	SID #18	3, 4	A56.J1:10	20.1
Flash RH SW1	PSID #133	3, 4	A48.J1:12	26.1	SldO Limit In Se	SID #19	3, 4	A56.J1:11	20.1
Flasher LH Sw1	PSID #130	3, 4	.		SldO Limit Out Se	SID #20	3, 4	A56.J1:14	20.1
Flsh Audibl Rly R16	PSID #37	3, 4, 5, 6	.		SldO Mot Neg Rly	SID #15	3, 4, 5, 6	A56.J1:7	20.1
Fog's Lights LH L95	PSID #134	3, 4, 6	.		SldO Mot Pos Rly	SID #16	3, 4, 5, 6	A56.J1:20	20.1
Fog's lights RH L96	PSID #136	3, 4, 6	A48.J1:8	26.3	SldO Mot SpeedA Ctr	SID #9	3, 6	A56.J1:1	
FR Clearance lights	PSID #137	3, 4, 6	.		SldO Mot SpeedB Ctr	SID #10	3, 6	A56.J1:2	20.1
Fr Flsh-Mkr LH L62	PSID #128	3, 4, 6	.		SldO Open Sw	SID #17	3, 4	A56.J1:9	20.1
Fr Side Flsh RH L64	PSID #10	3, 4, 6	A48.J1:20	26.1	SldO Park Br Signal	SID #8	3, 4	A56.J1:12	20.1
Front Flash RH L61	PSID #126	3, 4, 6	A48.J1:6	26.1	SldO Remote Led	SID #11	3, 4, 5, 6	A56.J1:3	20.1
Front Mkr Lts LH L62	PSID #148	3, 4, 6	.		SldO Seal Def Sol	SID #13	3, 4, 5, 6	A56.J1:5	20.1

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page					
SldO Seal Inf Sol	SID #12	3, 4, 5, 6	A56.J1:4	20.1					
SldO Secu Pin Sol	SID #21	3, 4, 5, 6	A56.J1:21	20.1					
SldO Vacc Gen Sol	SID #14	3, 4, 5, 6	A56.J1:6	20.1					
SldO Vacuum Sensor	SID #5	3, 4	A56.J1:13	20.1					
Starter Relay SO2	PSID #60	4, 6	A53.J1:6	3.2					
Starter Relay SO2	PSID #60	3, 6	A53.J1:1	3.2					
Stop Eng Signal In	PSID #62	3	.						
Tail Lights	PSID #152	3, 4, 6	A51.J1:8	26.2					
Under Floor lights	PSID #112	4, 6	.						
Unloader LH L200	PSID #31	3, 4, 6	A52.J1:8						
Unloader RH L199	PSID #32	3, 4, 6	A52.J1:21	18.2					
Upper Def Fan MO5	PSID #33	4, 6	.						