

# RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	24vIgn&AccRelay	3,1					
R3	RJB	563348	12vIgn&AccRelay	3,1					
R4		563332	Cutoffwaterpreheater	38,1					
R10	Evap.Cmpt.	563348	CondensorRelay1stSpeed	18,2					
R11	RJBVECR	563332	ZFIgn	5,1					
R12	Evap.Cmpt.	563348	EvaporatorRelay	18,2					
R16	DashBoard	563332	AudibleFlasherRelay	26,1					
R17		563348	12vRrWUpRelay	3,3					
R18	FJB	561991	24vFrWUpRelay	3,3					
R19	FJB	561991	12vFrWUpRelay	3,3					
R21	RJB	563269	EmergencyCutoutRelay	3,2					
R22		563269	12_WakeUp_To_CPC	3,3					
R23	RHConsole	563332	LowerWiperRelay	31,1					
R25	RJBVECR	563332	Ecmlgn	5,1					
R29	RJB	563348	Preheater_Volvo	14,2					
R30			Luggage_Door_LockUnlock	24,2					
R31			Luggage_Door_LockUnlock	24,2					
R32			Luggage_Door_LockUnlock	24,2					
R33			Luggage_Door_LockUnlock	24,2					
R34	FJB	561991	12v_Rr_Engine_Ecu	3,3					
R41			SunVisor_Relay	32,1					
R42			SunVisor_Relay	32,1					
R43			SunVisor_Relay	32,1					
R44			SunVisor_Relay	32,1					
R45			SunVisor_Relay	32,1					
r1_10				21,1					
r2_10				21,1					
r3_10				21,1					
r4_10				21,1					
r5_10				21,1					
r6_10				21,1					
RS01		563445	SlideOut_Relay	20,1					
RS02		563445	SlideOut_Relay	20,1					
RS03		563445	SlideOut_Relay	20,1					
RS04		563445	SlideOut_Relay	20,1					