

RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	MasterRelay	3.1					
R3	RJB	563348	12vIgn&AccRelay	3.1					
R4	FJB	563332	Cutoffpreheater	38.1					
R5	RJB	563332	ChargerRelay	17.1					
R6	FuseBoxRJB	563332	DirectLightsRelay	24.1					
R10	Evap_Cmpt_	563348	CondensorPowerRelay	18.2					
R11	RJB_VECR	563332	I_Shift	5.1					
R12	Evap_Cmpt_	563348	EvaporatorRelay	18.2					
R13	FuseBoxRJB	563332	Ind.LightRelay	23.1					
R14	RJB	564218	ReadingLampRelay	22.1					
R15	FuseBoxRJB	563332	EmergencyLamps	20.1					
R17	RJB	564218	12vRrWUpRelay	3.3					
R18	FJB	564218	24vFrWUpRelay	3.3					
R19	FJB	564218	12vFrWUpRelay	3.3					
R20	Evap_Cmpt_	563332	WaterPumpRelay	17.1					
R21	RJB	563269	EmergencyCutoutRelay	3.2					
R22	FJB	563269	VECU	4.1					
R23	RHConsole	563332	LowerWiperRelay	34.1					
R24	FJB	563332	UpperWiperRelay	34.1					
R25	RJB_VECR	563332	Ecmlgn	5.1					
R26	Evap_Cmpt_	563332	Pre-HeatRelay	18.2					
R27	Parcel_Rack_LH_1st_Cmpt	563332	Hostess_Gong	22.1					
R29	RJB	563348	Preheater_Volvo	14.2					
R31	RJB	564218	12vRrEngineEcu	3.3					
R32	FJB	563332	TransmissionShift	4.1					
R35	Galley	563332	Galley	40.1					
R36	Galley	563332	Galley	40.1					
R37	Galley	563332	FrigoRelay	40.1					
R41	FJB	563332	Steering	41.1					
R42	FJB	563332	Steering	41.1					
R43	FJB	563332	Steering	41.1					
R47	Evap_Cmpt_	563332	WCLDoorOpen	36.1					
R72	5th_Bay	563348	InverterRelay1	40.1SP1					
R73	5th_Bay	563348	InverterRelay2	40.1					
R74	FJB	563332	I_Shift	15.3					
R_Starter	RJB	564095	Starter	3.2					
R-12VISS	Parcel_Rack_LH_1st_Cmpt	563337	VSS	35.6					
RadioVolvo1_84		21197290	Radio	35.7					
RadioVolvo4_84		21197290	Radio	35.7					
RadioVolvo5_84		21197290	Radio	35.7					
RL_Strobe				35.4					
RR_Strobe				35.4					