

FUSES LIST

| No | Location | Part # | Function | Rating | Page |
|-----|--------------------------|--------|-----------------------------------------------|--------|------|
| F1 | FuseBoxFJB | 563279 | CecmPower | 3amp | 4.1 |
| F2 | FuseBoxFJB | 563279 | FrontStartMainSwitch | 3amp | 4.1 |
| F3 | FuseBoxFJB | 563279 | EnginePre-HeatH.W.+DrvLiq.Vlv | 3amp | 4.1 |
| F4 | FuseBoxFJB | 563280 | *opt* | 5Amp | 4.1 |
| F5 | FuseBoxFJB | 563165 | 24vtoWUp | 30amp | 4.1 |
| F6 | FuseBoxFJB | 563005 | Customer24VD | 7.5amp | 4.1 |
| F7 | FuseBoxFJB | 563279 | Abs+PreHeatController | 3amp | 4.1 |
| F8 | FuseBoxFJB | 563279 | AirHorn | 3amp | 4.1 |
| F9 | FuseBoxFJB | 563284 | SpareFuse | 15amp | 4.1 |
| F10 | FuseBoxFJB | 563279 | SpareFuse | 3amp | 4.1 |
| F11 | FuseBoxFJB | 563279 | SunVisor | 3amp | 4.1 |
| F12 | FuseBoxFJB | 563282 | PwrMuxModule | 20amp | 4.1 |
| F13 | FuseBoxFJB | 563282 | PwrMuxModule | 20amp | 4.1 |
| F14 | FuseBoxFJB | 563284 | Customer | 15amp | 4.1 |
| F15 | FuseBoxFJB | 563004 | *opt* | 2Amp | 4.1 |
| F16 | FuseBoxFJB | 563153 | DefrosterUnit | 25Amp | 4.1 |
| F17 | FuseBoxFJB | 563280 | DestinationSign | 5Amp | 4.1 |
| F18 | FuseBoxFJB | 563284 | UpperWiper | 15amp | 4.1 |
| F19 | FuseBoxFJB | 563279 | Prodriver | 3amp | 4.1 |
| F20 | FuseBoxFJB | 563005 | *opt* | 7.5amp | 4.1 |
| F21 | FuseBoxFJB | 563282 | PwrMuxA44 | 20amp | 4.1 |
| F22 | FuseBoxFJB | 563279 | SteeringCtrl | 3amp | 4.1 |
| F23 | FuseBoxFJB | 563165 | ABS | 30amp | 4.1 |
| F24 | FuseBoxFJB | 563005 | Mirror | 7.5amp | 4.1 |
| F25 | FuseBoxFJB | 563280 | BackupCamera | 5Amp | 4.1 |
| F26 | FuseBoxFJB | 563279 | SpareFuse | 3amp | 4.1 |
| F27 | FuseBoxFJB | 563284 | Customer | 15amp | 4.1 |
| F28 | FuseBoxFJB | 563282 | DriverWindow | 20amp | 4.1 |
| F29 | FuseBoxFJB | 563279 | ClusterandDDDR | 3amp | 4.1 |
| F30 | FuseBoxFJB | 563284 | PwrOutletandCigarLighter | 15amp | 4.1 |
| F31 | FuseBoxFJB | 563279 | KeylessModule | 3amp | 4.1 |
| F32 | FuseBoxFJB | 563282 | SpareFuse | 20amp | 4.1 |
| F33 | FuseBoxFJB | 563165 | 12VDtoWakeUp | 30amp | 4.1 |
| F34 | FuseBoxFJB | 563165 | *opt* | 30amp | 4.1 |
| F35 | FuseBoxFJB | 563283 | 12vPwrOutlet | 10amp | 4.1 |
| F36 | FuseBoxFJB | 563279 | PwrHvacandTiltModule | 3amp | 4.1 |
| F37 | FuseBoxFJB | 563283 | Flipdownscreen | 10amp | 4.1 |
| F38 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F39 | FuseBoxFJB | 563283 | Electrical_Driver_Seat_Option_OR_R4_Preheater | 10amp | 4.1 |
| F40 | FuseBoxFJB | 563283 | SpareFuse | 15amp | 4.1 |
| F41 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F42 | FuseBoxFJB | 563283 | Transmission_I_Shift | 10amp | 4.1 |
| F42 | Parcel_Rack_LH_1st_Cmpt_ | 562604 | VSS | 15Amp | 35.6 |

FUSES LIST

| No | Location | Part # | Function | Rating | Page |
|-----|--------------------------|--------|------------------------|--------|------|
| F43 | FuseBoxFJB | 563282 | Transmission_I_Shift | 20amp | 4.1 |
| F43 | Evap_Cmpt_ | 560893 | *opt* | 3amp | 18.2 |
| F44 | FJB | 560599 | FuseDestinationSign | 5Amp | 3.3 |
| F45 | FJB | 562604 | FireProtectionSyst. | 15Amp | 3.3 |
| F46 | Parcel_Rack_LH_1st_Cmpt_ | 562604 | VSS | 15Amp | 35.6 |
| F50 | FuseBoxRJB | 563284 | EnginePre-Heat | 15amp | 5.1 |
| F51 | FuseBoxRJB | 563153 | EnginePre-Heat | 25Amp | 5.1 |
| F52 | FuseBoxRJB | 563284 | SpareFuse | 15amp | 5.1 |
| F53 | FuseBoxRJB | 563284 | PwrMuxA54 | 15amp | 5.1 |
| F54 | FuseBoxRJB | 563284 | Customer | 25amp | 5.1 |
| F55 | FuseBoxRJB | 563283 | EmergencyLts | 10amp | 5.1 |
| F56 | FuseBoxRJB | 563282 | IndirectLightingLH | 20amp | 5.1 |
| F57 | FuseBoxRJB | 563283 | IndirectLightingRH | 10amp | 5.1 |
| F58 | FuseBoxRJB | 563283 | DirectLightingLH | 20amp | 5.1 |
| F59 | FuseBoxRJB | 563283 | DirectLightingRH | 10amp | 5.1 |
| F60 | FuseBoxRJB | 563282 | ReadingLampRH | 20amp | 5.1 |
| F61 | FuseBoxRJB | 563282 | ReadingLampLH | 20amp | 5.1 |
| F62 | FuseBoxRJB | 563283 | LavatoryNightLight | 10amp | 5.1 |
| F63 | FuseBoxRJB | 563283 | EnginePre-Heat | 10amp | 5.1 |
| F64 | FuseBoxRJB | 563283 | Spare | 10amp | 5.1 |
| F65 | FuseBoxRJB | 563165 | PwrMuxModuleRJB | 30amp | 5.1 |
| F66 | FuseBoxRJB | 563279 | RadiatorFanClutch | 3amp | 5.1 |
| F67 | FuseBoxRJB | 563153 | PwrMuxA54 | 25Amp | 5.1 |
| F68 | FuseBoxRJB | 563153 | PwmMuxA54 | 25Amp | 5.1 |
| F69 | FuseBoxRJB | 563005 | HatRackLightingLHandRH | 3amp | 5.1 |
| F70 | FuseBoxRJB | 563005 | Customer24VI | 7.5amp | 5.1 |
| F71 | FuseBoxRJB | 563284 | SpareFuse | 15amp | 5.1 |
| F72 | FuseBoxRJB | 563153 | PwrMuxA50 | 25Amp | 5.1 |
| F73 | FuseBoxRJB | 563282 | SpareFuse | 20amp | 5.1 |
| F74 | FuseBoxRJB | 563283 | EcuEngineIgnition | 10amp | 5.1 |
| F75 | FuseBoxRJB | 563283 | EcuTransmissionIgn | 10amp | 5.1 |
| F76 | FuseBoxRJB | 563283 | Customer | 10amp | 5.1 |
| F77 | FuseBoxRJB | 563283 | EcuTransmissionWakeUp | 10amp | 5.1 |
| F78 | FuseBoxRJB | 563284 | EcuEngineWakeUp | 15amp | 5.1 |
| F79 | FuseBoxRJB | 563284 | EcuEngineWakeUp | 15amp | 5.1 |
| F80 | FuseBoxRJB | 563284 | PwrMuxA51 | 15amp | 5.1 |
| F81 | FuseBoxRJB | 563004 | PwrOfRearSwitchBox | 2Amp | 5.1 |
| F83 | FuseBoxFJB | 563005 | SoundSystem | 10amp | 4.1 |
| F84 | FuseBoxFJB | 563284 | Customer | 15amp | 4.1 |
| F85 | FuseBoxRJB | 563283 | SpareFuse | 10amp | 5.1 |
| F86 | FuseBoxRJB | 563283 | SpareFuse | 10amp | 5.1 |
| F87 | FuseBoxRJB | 563283 | SpareFuse | 20amp | 5.1 |
| F88 | FuseBoxRJB | 563283 | SpareFuse | 20amp | 5.1 |

