

# RELAYS LIST

No	Location	Part #	Function	Page					
R1	RJB	562364	MasterRelay	3.1					
R2	RJB	563348	12vDirect	1.1.C					
R3	RJB	563348	12vIgn&AccRelay	3.1					
R4	RJB	563332	Cutoffwaterpreheater	38.1					
R5	RJB	563332	Charging_Relay_Optionnal	17.1					
R6	RJB	563332	DirectLightsRelay	24.1					
R10	Evap_Cmpt	563348	CondensorPowerRelay	18.2					
R11	RJB_VECR	563332	24Ign	5.1					
R12	RJB	563551	EvaporatorRelay	18.2					
R13	RJB	563332	IndirectLightRelay	23.1					
R14	RJB	564218	24vReadingLtsMasterRelay	22.1					
R15	RJB	563332	Aisle&Emerg.Lts	20.1					
R17	RJB	564218	12vRrWUpRelay	3.3					
R18	FJB	564218	24vFrWupRelay	3.3					
R19	FJB	564218	12vFrWUpRelay	3.3					
R20	RJB	563332	WaterPumpRelay	17.1					
R21	RJB_VECR	563269	EmergencyCutoutRelay	3.2					
R22	FJB_VECF	563269	Ign_Relay_VecuCpc	4.1					
R23	RHConsole	563332	LowerWiperRelay	34.1					
R25	RJB_VECR	563332	Ecmlgn	5.1					
R26	Evap_Cmpt	563332	Pre-HeatRelay	18.2					
R27	Parcel_Rack_LH	563332	Hostess_Gong_Relay	22.2					
R29	RJB	563348	Preheater_Volvo	14.1					
R30	RJB	563332	Lugg_Door_Lock	33.1					
R31	RJB	563332	Lugg_Door_Lock	33.1					
R32	RJB	563332	Lugg_Door_Unlock	33.1					
R33	RJB	563332	Lugg_Door_Unlock	33.1					
R34	RJB	564218	12vRrEngineEcu	3.3					
R39	FJB	563332	TransmissionIShift	4.1					
R40	RJB	563332	TransmissionIShift	15.2					
R41	FJB	563332	SunVisorCtr	41.1					
R42	FJB	563332	SunVisorCtr	41.1					
R43	FJB	563332	SunVisorCtr	41.1					
R44	Parcel_Rack_LH	563337	*opt*	35.8C					
R47	WCLPump	563332	WCLDoorOpen	36.1					
R_Starter	RJB	564095	StarterRelayCtr	3.2					
R-12VISS	Parcel_Rack_LH	563337	12VIMotorola	35.8C					