

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Pres HiSd	PSID #12	3, 4	A52.J1:13	18.2	FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26.1
A/C Pres LoSd	PSID #13	3, 4	A52.J1:14	18.2	Fr Flsh-Mkr LH	PSID #128	3, 4, 6	A45.J1:3	26.1
Backup Light &	PSID #167	3, 4, 6	A50.J1:20		Fr Side Flsh	PSID #10	3, 4, 6	A48.J1:20	26.1
Battery Equalizer	SID #61	3, 4	A45.J1:12	26.1	Fr Start Sw	PSID #58	3, 4	A36.JB:22	3.2
Blinker Sw	PSID #139	3, 4	A43.J1:20		Front Flash RH	PSID #126	3, 4, 6	A48.J1:6	26.1
Brk Lts Sens	PSID #119	3, 4	A36.JB:13	12.1	FrontMkr Lts LH	PSID #148	3, 4, 6	A45.J1:21	26.1
Center Flash LH	PSID #124	3, 4, 6	A50.J1:5	26.2	FrontMkr Lts RH	PSID #149	3, 4, 6	A48.J1:7	26.1
Center Flash RH	PSID #125	3, 4, 6	A50.J1:7	26.2	FrStart Enable Sw	PSID #56	3, 4	A53.J1:9	3.2
Center Mkr	PSID #27	3, 4, 6	A50.J1:8	26.2	Hazard Switch	PSID #138	3, 4	A36.JB:4	26.1
Chk Eng Signal	PSID #147	3, 4	A42.J1:10		Hd Light Call	PSID #140	3, 4	A43.J1:3	26.1
Cond Rly spd1	PSID #41	3, 4, 5, 6	A54.J1:5	18.2	HdLamp Wsh Pmp	SID #48	3, 4, 6	A46.J1:21	34.1
Cond Rly spd2	PSID #42	3, 4, 5, 6	A54.J1:1	18.2	Head Lights Pos1	PSID #143	3, 4	A43.J1:4	26.1
Condensor Door Sw	PSID #7	3, 4	A49.J1:3		Hi Low Beam	SID #62	3, 4	A43.J1:8	26.1
Cornering Dash	PSID #200	3, 4	A43.J1:21		High Beam LH	PSID #141	3, 4, 5, 6	A45.J1:6	26.1
Cyclope Lt	PSID #116	3, 4, 6	A51.J1:7	26.2	High Beam RH	PSID #145	3, 4, 5, 6	A48.J1:3	26.1
Defr water Pmp	SID #41	3, 4	A47.J1:20	18.1	Horn	PSID #83	3, 4, 5, 6	A45.J1:20	9.1
Diff Lock sol	SID #36	3, 4, 6	A52.J1:4	11.1	LH Corner Lts	PSID #120	3, 4, 5, 6	A45.J1:5	26.3
Docking Dash Sw	PSID #40	3, 4	A43.J1:7	9.1	LH Docking Light	PSID #122	3, 4, 5, 6	A51.J1:4	26.3
Driver Def Fan	PSID #180	3, 4, 5, 6	A47.J1:1	18.1	Low Beam LH	PSID #142	3, 4, 6	A45.J1:7	26.1
Driver heat Sol	PSID #16	3, 4, 5, 6	A46.J1:6	18.1	Low Beam RH	PSID #146	3, 4, 6	A48.J1:4	26.1
Driver Light	PSID #105	3, 4	A41.J1:2		Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	26.2
Driver Light Sw	PSID #104	3, 4, 5, 6	A47.J1:6	29.1	Lower Washer pmp	PSID #181	4, 6	A46.J1:3	34.1
Driver Rfg Sol	PSID #29	3, 4, 5, 6	A46.J1:5	18.1	Lower Washer Sw	PSID #188	3, 4	A46.J1:9	
Driver Sensor	PSID #28	3, 4, 5	A46.J1:13	32.1	Lower Wip Int	PSID #183	3, 4	A42.J1:8	34.1
Drv air Trap	SID #64	3, 4, 6	A44.J1:2	18.1	Lugg doors lock	SID #44	3, 4, 5, 6	A36.JA:7	
Drv Rec Cylind	PSID #30	3, 4, 5, 6	A47.J1:2	18.1	Lugg doors unlk	SID #45	3, 4, 5, 6	A36.JA:6	
Elec.Horn SW61	PSID #82		4 A41.J1:3	23.1	OutDoor Sens	PSID #161	3, 4, 5	A54.J1:14	
Emergency Relay	PSID #44	3, 4, 5, 6	A36.JA:24	3.2	Park brak Sens	PSID #162	3, 4	A36.JB:9	12.1
Eng Brk Active	PSID #45	3, 4	A42.J1:18		Pass def fan	SID #38	3, 4, 5, 6	A47.J1:7	29.1
Eng Cmpt Bulb	PSID #106	3, 4, 6	A52.J1:5	25.1	Pass Heat Sol	PSID #24	3, 4, 6	A54.J1:8	18.2
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11		Pass Rfg Sol	PSID #23	3, 4, 5, 6	A54.J1:3	18.2
Eng Fan Spd1	PSID #51	3, 4	A52.J1:9		Pass. Wtr pump	PSID #17	4, 6	A54.J1:4	18.2
Eng Fan Spd2	PSID #52	3, 4	A52.J1:10		Rear CutOut Sw	PSID #18	3, 4	A36.JB:21	3.2
Engine Fan Spd1	PSID #53	3, 4, 5, 6	A52.J1:1	13.1	RearFlsh LH	PSID #131	3, 4, 6	A51.J1:21	26.2
Engine Fan Spd2	PSID #54	3, 4, 5, 6	A52.J1:2	13.1	RearFlsh RH	PSID #132	3, 4, 6	A51.J1:3	26.2
Evap Motor Rly	PSID #77	3, 4, 5, 6	A54.J1:7	18.2	Retarder signal	PSID #164	3, 4	A50.J1:12	12.1
Evap Spd Ctrl	PSID #78	4, 6	A54.J1:2	18.2	Rev lights	SID #43	3, 4, 6	A50.J1:3	26.2
Fire Sensor	PSID #79	3, 4	A41.J1:10	22.1	RH Corner Light	PSID #121	3, 4, 5, 6	A48.J1:5	26.3
Flash RH Sw	PSID #133	3, 4	A48.J1:12	26.1	RH Docking Light	PSID #123	3, 4, 5, 6	A51.J1:5	26.3
Flasher LH	PSID #130	3, 4	A45.J1:9	26.1	RJB fan	SID #37	3, 4, 6	A46.J1:7	18.1
Fog's Lights LH	PSID #134	3, 4, 6	A45.J1:4	26.3	Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26.2
Fog's lights RH	PSID #136	3, 4, 6	A48.J1:8	26.3	Rr Start Sw	PSID #59	3, 4	A53.J1:11	3.2
Foot trap	PSID #37	3, 4, 6	A45.J1:2	18.1	RrStart Enable Sw	PSID #57	3, 4	A53.J1:10	3.2

