

RELAYS LIST

No	Location	Part #	Function	Page						
R1	RJB	562364	MasterRelay	3,1						
R3	RJB	563348	12vIgn&AccRelay	3,1						
R4	FJB	563332	Cutoffpreheater	38,1						
R5	RJB	563332	ChargerRelay	17,1						
R10	Evap_Cmpt_	563348	CondensorPowerRelay	18,2						
R11	RJB_VECR	563332	I_Shift	5,1						
R12	Evap_Cmpt_	563348	EvaporatorRelay	18,2						
R17	RJB	564218	12vRrWUpRelay	3,3						
R18	FJB	564218	24vFrWUpRelay	3,3						
R19	FJB	564218	12vFrWUpRelay	3,3						
R20	Evap_Cmpt_	563332	WaterPumpRelay	17,1						
R21	RJB_VECR	563332	EmergencyCutoutRelay	3,2						
R22	FJB	563269	VECU	4,1						
R23	RHConsole	563332	LowerWiperRelay	34,1						
R24	FJB	563332	UpperWiperRelay	34,1						
R25	RJB_VECR	563332	Ecmlgn	5,1						
R26	Evap_Cmpt_	563332	Pre-HeatRelay	18,2						
R29	RJB	563348	Preheater_Volvo	14,2						
R31	RJB	564218	12vRrEngineEcu	3,3						
R32	FJB	563332	TransmissionIShift	4,1						
R35	Galley	563332	Galley_Control	45,1						
R36	Galley	563332	Optional	45,1						
R37	Galley	563332	FrigoRelay	45,1						
R41	FJB	563332	Steering	41,1						
R42	FJB	563332	Steering	41,1						
R43	FJB	563332	Steering	41,1						
R47	Evap_Cmpt_	563332	UsewithWCLDoorOpenSwoption	36,1						
R48	WCLPump	563332	UseW/OWCLDoorOpenSwoption	36,1						
R72	5th_Bay	563348	InverterRelay1	40,1						
R73	5th_Bay	563348	InverterRelay2	40,1						
R74	FJB	563332	I_Shift	15,3						
R_STANK			*opt*	14,4						
R_Starter	RJB	564095	Starter	3,2						
R-12VISS	Parcel_Rack_LH_1st_Cmpt	563337	VSS	35,6						
R-12VISSH	Parcel_Rack_LH_1st_Cmpt	563337	VSS	35,6						