

# FUSES LIST

No	Location	Part #	Function	Rating	Page
F1	FuseBoxFJB	563279	CecmPower	3amp	4.1
F2	FuseBoxFJB	563279	FrontStartMainSwitch	3amp	4.1
F3	FuseBoxFJB	563279	EnginePre-HeatH.W.+DrvLiq.Vlv	3amp	4.1
F4	FuseBoxFJB	563280	*opt*	5Amp	4.1
F5	FuseBoxFJB	563165	24vtoWUp	30amp	4.1
F6	FuseBoxFJB	563005	Customer24VD	7.5amp	4.1
F7	FuseBoxFJB	563279	SpareFuse	3amp	4.1
F8	FuseBoxFJB	563279	AirHorn	3amp	4.1
F9	FuseBoxFJB	563284	SpareFuse	15amp	4.1
F10	FuseBoxFJB	563279	SpareFuse	3amp	4.1
F11	FuseBoxFJB	563279	SunVisor	3amp	4.1
F12	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1
F13	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1
F14	FuseBoxFJB	563284	Customer24VI	15amp	4.1
F15	FuseBoxFJB	563004	EngineBrakeRelay	2Amp	4.1
F16	FuseBoxFJB	563153	DefrosterUnit	25Amp	4.1
F17	FuseBoxFJB	563280	SpareFuse	5Amp	4.1
F18	FuseBoxFJB	563284	SpareFuse	15amp	4.1
F19	FuseBoxFJB	563279	Prodriver	3amp	4.1
F20	FuseBoxFJB	563279	WitnessRedLed	7.5amp	4.1
F21	FuseBoxFJB	563282	PwrMuxA44	20amp	4.1
F22	FuseBoxFJB	563279	SteeringCtrl	3amp	4.1
F23	FuseBoxFJB	563284	ABS	30amp	4.1
F24	FuseBoxFJB	563005	Mirror	7.5amp	4.1
F25	FuseBoxFJB	563280	BackupCamera	5Amp	4.1
F26	FuseBoxFJB	563279	SmartTireOption	3amp	4.1
F27	FuseBoxFJB	563284	Customer_12VI	15amp	4.1
F28	FuseBoxFJB	563282	DriverWindow	20amp	4.1
F29	FuseBoxFJB	563279	ClusterandDDDR	3amp	4.1
F30	FuseBoxFJB	563284	PwrOutletandCigarLighter	15amp	4.1
F31	FuseBoxFJB	563279	SpareFuse	3amp	4.1
F32	FuseBoxFJB	563282	SpareFuse	20amp	4.1
F33	FuseBoxFJB	563165	12VDtoWakeUp	30amp	4.1
F34	FuseBoxFJB	563165	12VDtoWakeUp	30amp	4.1
F35	FuseBoxFJB	563283	12vPwrOutlet	10amp	4.1
F36	FuseBoxFJB	563279	PwrHvacandTtItModule	3amp	4.1
F37	FuseBoxFJB	563283	SpareFuse	10amp	4.1
F38	FuseBoxFJB	563283	SpareFuse	10amp	4.1
F39	FuseBoxFJB	563283	Electrical_Driver_Seat_Option_OR_R4_Preheater	10amp	4.1
F40	FuseBoxFJB	563284	SpareFuse	15amp	4.1
F41	FuseBoxFJB	563283	SpareFuse	10amp	4.1
F43	RJB	560893	Evap_Start_Pre_Heater_Option	3Amp	18.2
F44	CFHFuseFJB	563280	DestinationSigns	5amp	3.3

# FUSES LIST

No	Location	Part #	Function	Rating	Page
F45	CFHFuseFJB	563284	AFSS	15amp	3.3
F50	FuseBoxRJB	563284	PreHeater	15amp	5.1
F51	FuseBoxRJB	563153	PreHeater	25Amp	5.1
F52	FuseBoxRJB	563284	Spare	15amp	5.1
F53	FuseBoxRJB	563284	HVAVPass	15amp	5.1
F54	FuseBoxRJB	563284	24VDCustomer	15amp	5.1
F65	FuseBoxRJB	563165	*opt*	30amp	5.1
F67	FuseBoxRJB	563153	MuxPower	25Amp	5.1
F68	FuseBoxRJB	563153	MuxPower	25Amp	5.1
F69	FuseBoxRJB	563005	Spare	3amp	5.1
F70	FuseBoxRJB	563005	24VICustomer	7.5amp	5.1
F71	FuseBoxRJB	563284	IntLights	15amp	5.1
F72	FuseBoxRJB	563153	MuxPower	25Amp	5.1
F78	FuseBoxRJB	563284	Spare	15amp	5.1
F79	FuseBoxRJB	563284	Spare	15amp	5.1
F80	FuseBoxRJB	563284	MuxPower	15amp	5.1
F81	FuseBoxRJB	563004	EngineStart	2Amp	5.1
F83	FuseBoxFJB	563005	SoundSystem	10amp	4.1
F84	FuseBoxFJB	563284	Customer	15amp	4.1
F85	FuseBoxRJB	563283	TranslShift	10amp	5.1
F86	FuseBoxRJB	563283	VolvoLink	10amp	5.1
F89	FuseBoxRJB	563284	Spare	20amp	5.1
F90	FuseBoxRJB	563282	VolvoUrea	20amp	5.1
F91	FuseBoxRJB	563282	Engine	20amp	5.1
F96	FuseBoxRJB	563284	VolvoUrea	20amp	5.1
F98	FuseBoxRJB	563284	Alternator	15amp	5.1
F99	FuseBoxRJB	563165	Engine	30amp	5.1
F104	FuseBoxFJB	563284	Spare	15amp	4.1
F105	FuseBoxFJB	563282	Spare	20amp	4.1
F106	CFHFuseFJB	563283	FlipDownScreenA33	10amp	3.3
F109	RJB	562597	EnginePreheater	150A	14.1
F110	CFHFuseFJB	563283	WupMuxPower	10amp	3.3
F122	RJB	562606	FUEL_FILTER	25Amp	13.1
F127	FJB	562222	Wifi	5Amp	4.1
F111_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F112_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F113_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F114_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F116_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F116_3_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F117_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F117_3_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F118_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1

## FUSES LIST

No	Location	Part #	Function	Rating	Page
F119_2_172	Parcel_Rack_LH	563283	Cadec	10amp	42.1
F35_7_364	FuseBoxRJB	563283	TranslShift	10amp	4.1
F56_1_92	FuseBoxRJB	563283	IndirectLightingLH	20amp	5.1
F56_2_92	FuseBoxRJB	563283	*opt*	10amp	5.1
F57_1_92	FuseBoxRJB	563283	IndirectLightingRH	10amp	5.1
F58_1_92	FuseBoxRJB	563283	DirectLightingLH	20amp	5.1
F59_1_92	FuseBoxRJB	563283	DirectLightingRH	10amp	5.1
F60_1_92	FuseBoxRJB	563283	ReadingLampRH	20amp	5.1
F61_1_92	FuseBoxRJB	563283	ReadingLampLH	20amp	5.1
F62_1_92	FuseBoxRJB	563283	LavatoryNightLight	10amp	5.1
F63_1_92	FuseBoxRJB	563283	EnginePre-Heat	10amp	5.1
F64_1_92	FuseBoxRJB	563283	GalleyOption	10amp	5.1
F66_1_92	FuseBoxRJB	563279	RadiatorFanClutch	3amp	5.1
F73_1_92	FuseBoxRJB	563282	Trailer_Option	20amp	5.1
F74_1_92	FuseBoxRJB	563283	EcuEngineIgnition	10amp	5.1
F75_1_92	FuseBoxRJB	563283	EcuTransmissionIgn	10amp	5.1
F76_1_92	FuseBoxRJB	563283	Custumer	10amp	5.1
F77_1_92	FuseBoxRJB	563283	EcuTransmissionWakeUp	10amp	5.1
F77_2_289	FuseBoxRJB	563283	*opt*	10amp	5.1
FUSE_BOX_3	Parcel_Rack_LH	*opt*	Cadec		42.1
FUSE_BOX_4	Parcel_Rack_LH	*opt*	Cadec		42.1
FUSE_BOX_5	Parcel_Rack_LH	*opt*	Cadec		42.1