



FUEL WATER | ETHER COLD  
FILTER START

PARKING BRAKE  
ALARM & SAFETY SW.

RADIATOR FAN CLUTCH  
RADIATOR FAN CLUTCH  
OVERRIDE

OPTIONAL SWITCH  
RADIATOR FAN CLUTCH OVERRIDE

FROM 12V IGNITION  
CB28 SEE P. 7.1

TO FUEL WATER FILTER T.L.T.  
MODULE C571 (8) SEE P. 23.1

TO STOP L.T.S RLY R26  
SEE P. 9.3 & 9.3sp1

TO RELAY R62  
SEE P. 5.1

24V IGNITION FROM CB27  
SEE P. 7.2

TO FAST IDLE SW.  
SEE P. 5.1

TO DAYTIME RUN L.T.S  
DIODE D19 SEE P. 9.1

24V FROM ENGINE CTR. SW.  
SEE P. 4.1

FROM RR. JCT. BOX  
SEE P. 1.1

TO ECM OUTPUT A2  
FAN CONTROL \*1  
SEE P. 5.1

TO ECM OUTPUT W3  
FAN CONTROL \*2  
SEE P. 5.1

WITH RETARDER OPTION  
R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R86, R87, R88, R89, R90, R91, R92, R93, R94, R95, R96, R97, R98, R99, R100

TO PARCEL RACK A/C  
R34(87) SEE P. 15.1

TO PARCEL RACK A/C  
R34(87) SEE P. 15.1

TO PARCEL RACK A/C  
R34(87) SEE P. 15.1

TO PARCEL RACK A/C  
R34(87) SEE P. 15.1

TO PARCEL RACK A/C  
R34(87) SEE P. 15.1