

WORLD TRANSMISSION E.C.U.

**PREVOST**

**WIRING DIAGRAM**


NO:

**0060994**

PAGE:

**6.1**

REVISION  
08

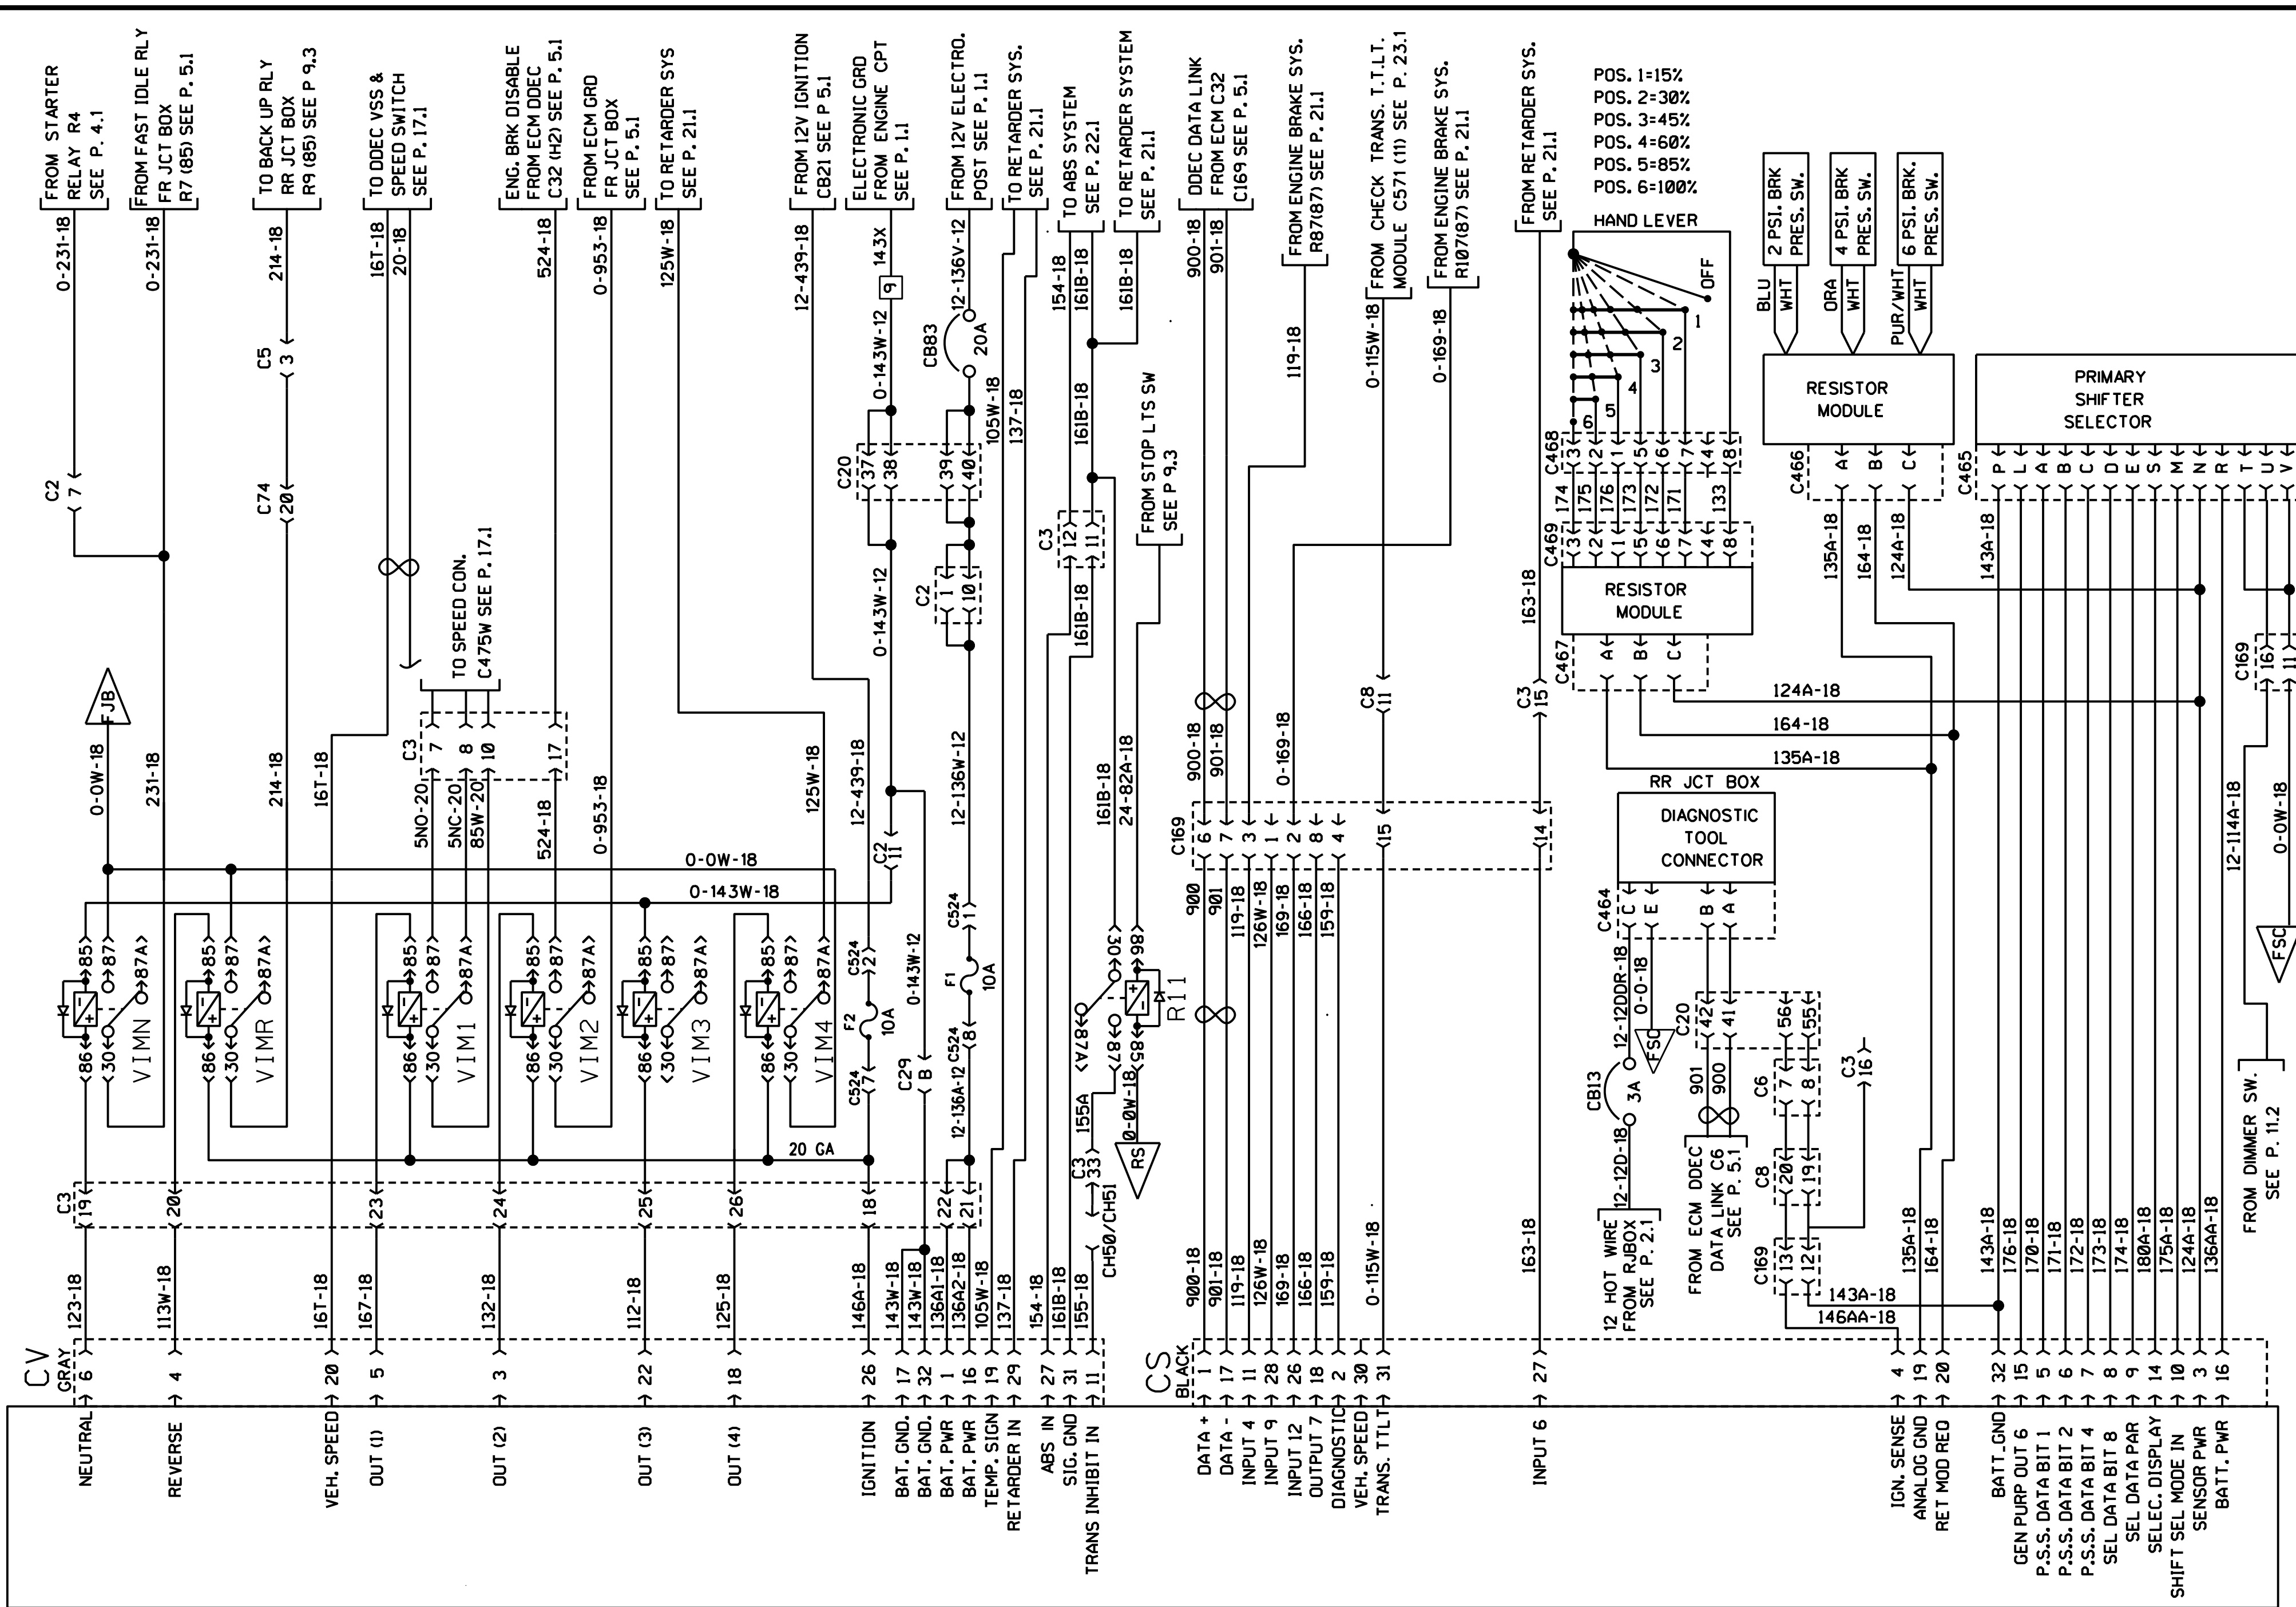

HAND LEVER  
POS. 1=15%  
POS. 2=30%  
POS. 3=45%  
POS. 4=60%  
POS. 5=85%  
POS. 6=100%

2 PSI. BRK. PRES. SW.  
4 PSI. BRK. PRES. SW.  
6 PSI. BRK. PRES. SW.

PRIMARY SHIFTER SELECTOR

FROM DIMMER SW. SEE P. 11.2