

WIRING DIAGRAM INDEX

<p>A A/C & HEAT – DRIVER'S AIR Page: 15.1 A/C & HEAT – FULL AIR Page: 15.2 A/C & HEAT – UPPER FAN DEFROST Page: 15.4 ALARM & SIGNAL Page: 7.2 ABS Page: 22.1 ARRANGEMENT - CABLE Page: B ARRANGEMENT - HARNESS Page: C ARRANGEMENT - SPARE WIRE Page: D ARRANGEMENT - SPARE WIRE Page: D</p>	<p>D DASH INSTRUMENT Page: 7.1 DDEC IV Page: 5.1 DISCONNECT SWITCH 12V, 24V Page: 1.1 DISTRIB. 24V DISC., IGN & HOT WIRE Page: 1.1 DISTRIB. 12V DISC., IGN & HOT WIRE Page: 2.1 DRIVER'S SEAT ADJUST Page: 13.1</p>	<p>L LEVEL – LOW SYSTEM Page: 18.1 LUGGAGE DOOR LOCK Page: 12.1</p>
<p>B BACK-UP ALARM Page: 9.3 BATTERY STANDARD Page: 1.2</p>	<p>E ENGINE BLOCK HEATER Page: 20.1 ENGINE BRAKE SYSTEM Page: 21.1 ENGINE CONTROL Page: 4.1 ENTRANCE DOOR ELCTRICAL LOCK Page: 12.1 ENTRANCE DOOR AIR LOCK Page: 20.1 ETHER COLD START Page: 8.1 EXTERIOR LIGHTING Page: 9.1</p>	<p>M MIRROR-REAR VIEW Page: 16.1</p> <p>P PARKING BRAKE SWITCH & ALARM Page: 8.1 POWER 12V OUTLET Page: 13.1</p>
<p>C CENTER DOOR-AIR LOCK Page: 20.1 CHARGING SYSTEM Page: 4.2 CIGAR LIGHTER & 12V OUTLET Page: 13.1 CLUSTER Page: 7.1 CODE - CIRCUIT NUMBER Page: E CODE - CIRCUIT BREAKER Page: F CODE - CONNECTOR Page: G CODE - DIODE Page: H CODE - FUSE Page: L CODE - RELAY Page: I CODE - RESISTOR Page: J CODE – TRUTH TABLE Page: M CODE - WIRING KEY Page: K CRUISE CONTROL - DDEC Page: 5.1</p>	<p>F FAN-CLUTCH RADIATOR Page: 8.1 FAST IDLE - DDEC Page: 5.1 FIRE DETECTOR Page: 7.2 FUEL WATER FILTER Page: 8.1 FUEL PRIME PUMP Page: 19.1</p>	<p>R RETARDER - WORLD TRANSM. Page: 21.1</p> <p>S SLIDE-OUT Page: 24 SPEED SIGNAL Page: 17.1 SPEEDOMETER Page: 7.1 STEERING CONTROL Page: 17.1 SUN VISOR Page: 19.1</p>
	<p>G GROUND SYSTEM Page: 3.1</p>	<p>T TACHOMETER Page: 7.1 TRANSMISSION – WTEC 3 Page: 6.1 TELL TALE LIGHT MODULES Page: 23.1</p>
	<p>H HORN Page: 7.2</p>	<p>W WINDOW AJAR Page: 20.1 WINDOW LIFTER Page: 19.1 WIPER & WASHER Page: 10.1</p>
	<p>I INTERIOR LIGHTING Page: 11.1</p>	
	<p>K KEYLESS ENTRY SYSTEM Page: 12.2</p>	

WIRING DIAGRAM INDEX