

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP10	SPARE WIRE	SP74	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP11	SPARE WIRE	SP75	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP12	SPARE WIRE	SP76	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP13	SPARE WIRE	SP77	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP14	SPARE WIRE	SP78	SPARE WIRE
A10	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP15	SPARE WIRE	SP80	SPARE WIRE
A11	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP16	SPARE WIRE	SP81	SPARE WIRE
A12	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP17	SPARE WIRE	SP82	SPARE WIRE
A13	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP18	SPARE WIRE	SP83	SPARE WIRE
A15	AUDIO AMPLI	DR1	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP84	SPARE WIRE
A16	VIDEO SYSTEM	DR2	DRIVER'S SPEAKER	SP20	SPARE WIRE	SP85	SPARE WIRE
B1	MICROPHONE	DR3	DRIVER'S SPEAKER	SP21	SPARE WIRE	TW1	TWISTED SPARE
B2	MICROPHONE	DR4	DRIVER'S SPEAKER	SP23	SPARE WIRE	TW2	TWISTED SPARE
B3	MICROPHONE	G1	PASSENGER SPEAKER	SP24	SPARE WIRE	W1	STEERING BOX CONVERTER
B4	MICROPHONE	G2	PASSENGER SPEAKER	SP25	SPARE WIRE	W2	STEERING BOX CONVERTER
B5	MICROPHONE	G3	PASSENGER SPEAKER	SP26	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B6	MICROPHONE	G4	PASSENGER SPEAKER	SP27	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B7	MICROPHONE	G5	PASSENGER SPEAKER	SP28	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B8	MICROPHONE	G6	PASSENGER SPEAKER	SP30	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B10	MICROPHONE	G7	PASSENGER SPEAKER	SP33	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B11	MICROPHONE	G8	PASSENGER SPEAKER	SP34	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B12	MICROPHONE	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B1A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B1B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B2A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B2B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y7A	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	Y7B	FLUORESCENT BALLAST
B4B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	0	BATTERY - MAIN GROUND
B5A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	0	EVAP. COMPT. GROUND
B5B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	0	RJB - INSIDE GRD
B6A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	0	WCL MODULE
B6B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	0	INVERTER CUT OFF RELAY
B7A	FLUORESCENT BALLAST	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	0A	LAVATORY ACCESSORIES
B7B	FLUORESCENT BALLAST	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	0A	EVAP. FAN GROUND
B14	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	0A	FR. ROOF ACC. GRD
B15	RADIO SYSTEM	SPK1	PASSENGER SPEAKER	SP55	SPARE WIRE	0B	BOOSTER BLOCK GROUND
C2	RADIO SYSTEM	SPK2	PASSENGER SPEAKER	SP56	SPARE WIRE	0B	A/C - CONDENSER GRD
C3	CONTROL HEAD ANTENNA	SPK3	PASSENGER SPEAKER	SP57	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL
C5	VIDEO SYSTEM	SPK4	PASSENGER SPEAKER	SP60	SPARE WIRE	0BE	OV BATTERY MONITOR
C6	CONTROL HEAD DIMMER	SP1	SPARE WIRE	SP61	SPARE WIRE	0C	R.J.B. - GRB
C7	RADIO SYSTEM	SP2	SPARE WIRE	SP62	SPARE WIRE	0C	MOTOR STARTER GROUND
C8	AUDIO AMPLI	SP3	SPARE WIRE	SP63	SPARE WIRE	0C	F.R. SERV. CPT- ACC.
C9	VIDEO SYSTEM	SP4	SPARE WIRE	SP64	SPARE WIRE	0C1	ENTRANCE DOOR SEDAN
C10	VIDEO SYSTEM	SP5	SPARE WIRE	SP65	SPARE WIRE	0C2	STEERING CONTROL GROUND
C11	VIDEO SYSTEM	SP6	SPARE WIRE	SP69	SPARE WIRE	0C3	SOUND SYSTEM RELAY
C12	VIDEO SYSTEM	SP7	SPARE WIRE	SP70	SPARE WIRE	0C4	F.J.B. GRD
C13	VIDEO SYSTEM	SP8	SPARE WIRE	SP71	SPARE WIRE	0CJ	CRUISE SW. JUMPER
C14	VIDEO SYSTEM	SP9	SPARE WIRE	SP72	SPARE WIRE	0D	FLUORESCENT GRD

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0D	COND FAN GRD	0T2	CLUSTER ACC. GROUND	11	DESTINATION SIGN	12S	12 V RADIO FEEDING
0E	BATT. COMPT. LTS GROUND	0T2	WINDOW AWNING	11A	DESTINATION SIGN	12S1	12 V RADIO FEEDING
0E	READING LIGHTS GROUND	0T3	ALTERNATOR MODULE	11B	DESTINATION SIGN	12S1A	12V DVD KARAOKE FEEDING
0F	FLUORESCENT GRD	0T4	12V OUTLET - CTR MODULE	11C	DESTINATION SIGN	12S2	12 V RADIO FEEDING
0F	PRO-DRIVER GROUND	0T5	FS.HVAC DASH MODULE. GND	11D	DESTINATION SIGN	12S2A	12V DVD KARAOKE FEEDING
0G	READING LIGHTS GROUND	0VA	BATTERY EQUALIZER GROUND	11E	DESTINATION SIGN	12T	RR JCT BOX 12V DISC SW
0H	ENG. CPT. - ACC. GRD	0W	FJB - TRANSM. RLY GRD	11K	DESTINATION SIGN	12TE	12 V BATT. TRANSM. EATON
0IN	INTERCOM SYSTEM	0W	SHIFT SELECTOR GROUND	11J	DESTINATION SIGN	12TF	12 V BATT. TRANSM. EATON
0J	PARCEL RACK A/C UNIT	0W	WCL MODULE	11P	DESTINATION SIGN	12VB	FR JCT PANEL 12V DISC SW
0K	PARCEL RACK A/C UNIT	0WA	WCL DOOR AJAR	12	12V ELECTRONIC TERMINAL	12VD	12V HOT WIRE DISTRIBUTION
0L	ENG.CPT -CLEAR.LTS RR ROOF	0WC	WCL BATTERY CPT. ACCES.	12A	FR JCT PANEL 12V DISC SW	12VE	FR JCT PANEL 12V DISC SW
0L	R.J.B. - GRD	0WL	WCL SIGNAL DOOR AJAR ALARM	12A	BATT. JCT PANEL 12V DISC SW	12VF	12 VOLTS FRONT DISTRIBUTIION
0L	FR - SIDE MARK. & FLASH GRD	0Y1	ABS SYSTEM-GRD	12B	FR JCT PANEL 12V DISC SW	12VG	RR JCT PANEL 12V DISC SW
0L1	ENG.CPT-SIDE MARK. & FL. GRD	0Y2	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	12VI	12V IGNITION DISTRIBUTION
0L2	HEAD LTS GROUND	0Y3	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	12VO	12 VOLTS BATTERY EQUALIZER
0L3	FR.SERV.DR. & ENT.DOOR GRD	0Y4	ABS SYSTEM-GRD	12C	RR JCT BOX 12V DISC SW	12VR	12 VOLTS REAR DISTRIBUTION
0L4	FOG LTS RESISTOR GRD	0Y5	ABS SYSTEM-GRD	12D	BATT. JCT PANEL 12V HOT WIRE	12W	12V HOT WIRE DDEC FEEDING
0L5	LH CONSOL - ACC. GRD	0Y6	ABS SYSTEM-GRD	12D	FR JCT PANEL 12V HOT WIRE	12WA	ENTRANCE DOOR SYSTEM
0L5	W.C.L.DOOR & AIR DRYER GRD	00A	ELECTRONIC TERMINAL GROUND	12D	RR JCT PANEL 12V HOT WIRE	12WR	WCL DOOR TOP LT
0L6	MARKER&FLASH. GROUND	00F	FRONT ELECTRONIC GROUND	12D	FR JCT PANEL 12V HOT WIRE	14	LAVATORY PUMP
0L7	AISLE LIGHTS GROUND	2B	A/C & HEAT SYSTEM	12DD	FR JCT PANEL 12V HOT WIRE	14A	LAVATORY PUMP- P.BUTTON
0L8	DOCKING LTS	2D	A/C & HEAT SYSTEM	12DDR	FR JCT BOX 12V HOT DDR CONN	14P	LAVATORY PUMP
0LV	WINDSHIELD WASHER LEVEL	2DD	A/C & HEAT SYSTEM	12DT	T.T. LT MODULE	15	WIPER & WASHER FEEDING
0M	WIPER 2 MIRROR MOTOR	2E	A/C & HEAT SYSTEM	12E	FR JCT PANEL 12V DISC SW	16	SPEEDOMETER (+)
0M3	DEFROST GRD	2EE	A/C & HEAT SYSTEM	12F	RR JCT PANEL 12V DISC SW	16T	SPEED SW SIGNAL IN (+)
0M4	HORN & DR'S WINDOW LIFTER	2F	A/C & HEAT SYS.-EVAP. SPEED SW.	12F1	FR JCT PANEL 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT
0M5	SUN VISOR MOTOR	2H	A/C & HEAT SYS-LO-PRESS SW.	12F2	FR JCT PANEL 12V DISC SW	17A	EXTERIOR LTS-FLASHER UNIT
0M6	UPPER FAN DEFROST	2L	A/C & HEAT SYS-HI-PRESS SW.	12FL	RR JCT PANEL 12V DISC SW	17C	JUMPER LTS SW. - HAZARD
0M7	DR'S WIND.LIFT. & RH MIR. SW	4A	HOTESS CHIME MAIN SWITCH	12G	FR JCT PANEL 12V DISC SW	18	UPPER FAN DEFROST
0M7A	LH MIRROR SW.	4C	HOTESS CHIME P. RACK SW.	12H	12V IGN. DASH ACCESS.	19	UPPER FAN DEFROST
0P	ENG.CDT - PRE-HEATER	5	AISLE LTS FEEDING	12I	RR JCT BOX 12V IGNITION	20	SPEEDOMETER SIGNAL (-)
0R	SOUND SYSTEM RELAY GROUND	5N	EMERGENCY LTS	12I	FR JCT PANEL 12V IGNITION	21	LEFT DIRECTIONNAL LTS
0SA	BOSCH ALTERNATOR GROUND	5N0	SPEED SIGNAL HIGHER 5MPH	12IA	RR JCT PANEL 12V IGNITION	21A	LEFT DIRECTIONNAL LTS SIGN.
0SA	PARCEL RACK LTS SWITCH	5N0	SPEED SIGNAL LOWER 5MPH	12IA	FR JCT PANEL 12V IGNITION	21B	HAZARD SWITCH SIGNAL
0SB	PARCEL RACK LTS SWITCH	6	AISLE LTS	12IB	FR JCT PANEL 12V IGNITION	21BB	LEFT DIRECTIONNAL LTS FEED.
0SC	PARCEL RACK LTS SWITCH	7B	ENTRANCE DOOR FEED.-24V HW	12IB	STEERING BOX ECU FEEDING	21H	EXTERIOR LTS-HAZARD SIGNAL
0SE	PARCEL RACK LTS SWITCH	9	INTERIOR LTS-ENGINE CPT	12IC	FR JCT PANEL 12V IGN EATON	21M	AUX. LTS - DIRECTIONAL LH
0SF	PARCEL RACK LTS SWITCH	9F	INTERIOR LTS - FR-SERV. CPT	12ID	FR JCT PANEL 12V IGN EATON	23	RIGHT DIRECTIONNAL LTS
0SG	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12IE	ABS-FR JCT PANEL 12V IGN.	23A	RIGHT DIRECTIONNAL LTS SIGN.
0SH	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12IN	12 VOLTS DISC.SW. INTERCOM	23BB	RIGHT DIRECTIONNAL LTS FEED.
0SJ	PARCEL RACK LTS SWITCH	10A	AUX. COMPRESSOR CLUTCH	12IN	FR JCT PANEL 12V DISC.SW.	23H	EXTERIOR LTS-HAZARD SIGNAL
0SS	SOUND SYSTEM GROUND	10B	INTERIOR LTS-LUGGAGE CPT	12J	FR JCT PANEL 12V DISC.SW.	23K	RIGHT DIRECT. LTS W/KNELLING
0SS	SOUND SYSTEM GROUND	10C	INTERIOR LTS-LUGGAGE CPT	12K	FR JCT PANEL 12V DISC.SW.	23M	AUX LTS - DIRECTIONAL RH
0S2	RADIO GROUND	10E	INTERIOR LTS-BATTERY CPT	12L	CORNRING LTS FEEDING	24	24 VOLTS BATTERY DIST.
0S3	VIDEO GROUND	10H	AUX. COMPRESSOR CLUTCH	12LX	CLUSTER 12V HOT WIRE	24	24 V. DISC. FRONT DIST.
0T	LAVATORY FAN & PUMP	10L	AUX. COMPRESSOR CLUTCH	12M	ABS-FR JCT PANEL 12V DISC.SW	24A	BATT. JCT PANEL 24V DISC SW
0T	SPEED SW. CONNECTOR	10X	AUX. COMPRESSOR CLUTCH	12P	12 VOLTS BATTERY JCT BLOCK		
0T1	DASH ACC. GROUND			12R	12 VOLTS MEMORY RADIO		
				12P	12V POWER OUTLET		
				12SB	12V SOUND SYSTEM FEEDING		
				12SS	12V SOUND SYSTEM FEEDING		

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24A	24V BOOSTER BLOCK	25B	EXT. LTS-DAYTIME RUN LTS	45B	A/C & HEAT SYS.-WATER PUMP	64B	A/C SPARE
24A	FR JCT PANEL 24V DISC. SW	25D	BOTH ALTERNATOR RUN SIGNAL	45C	A/C & HEAT SYS.-WATER VALV	65	FOOT DAMPER MOTOR
24A	RR JCT PANEL 24V DISC. SW	25K	T.T.LT. ALTERNATOR #2	45D	A/C & HEAT SYS.-WATER VALV	65A	FOOT DAMPER MOTOR
24BE	BATTERY MONITOR	26	DR'S & ENT. WINDOW LIFTER	45G	A/C & HEAT SYS.-DR'S HTR	65D	DRIVER'S REC. DAMPER
24C	FR JCT PANEL 24V DISC SW	26A	CIGAR LIGHT. & POW.OUTLET LH	45H	A/C & HEAT SYS.-EVAP. SPEED	65E	DRIVER'S REC. DAMPER L.H.
24D	24 V. HOT WIRE FEEDING	26B	DRIVER'S WINDOW LIFTER	46	EXTERIOR LTS-MARKER	65F	DRIVER'S REC. DAMPER L.H.
24D	FR JCT BOX 24V HOT WIRE	26C	DRIVER'S WINDOW LIFTER	46A	EXTERIOR LTS-AUX LTS RESIS.	66	A/C PASSENGER - ON/OFF
24DD	FR JCT BOX 24V HOT WIRE	27	LAVATORY ALARM	46C	EXTERIOR LTS-MARKER	67A	A/C & HEAT SYSTEM
24DS	WIRELSS MICRO FEEDING	28H	T.T.LT MODULE - HI A/C PRES.	46D	EXTERIOR LTS-AUX LTS RESIS.	68	DASH & DEFROST DAMPER MOT
24E	24 VOLTS POWER DISTRIBUTION	28T	T.T.LT MODULE - LO A/C PRES.	48	ENTRANCE DOOR OPEN SIGNAL	68A	DASH & DEFROST DAMPER MOT
24E	RR JCT PANEL 24V DISC SW	29	A/C & HEAT SYS.-DR'S HTR	48A	ENTRANCE DOOR OPEN SOL.	69	DAMPER MIX LIMIT SWITCH
24F	RR JCT PANEL 24V DISC SW	29H	HVAC DASH MODILE	48B	ENTRANCE DOOR OPEN SIGNAL	70	HAT RACK & NIGHT LTS FEEDING
24G	FR JCT PANEL 24V DISC SW	30A	GALLEY SWITCH SIGNAL	48C	ENTRANCE DOOR SYSTEM	72	SUN VISOR - FEED
24H	RR JCT PANEL 24V DISC SW	30J	GALLEY SWITCH LED	48D	ENTRANCE DOOR SYSTEM	72A	SUN VISOR RH
24I	FR JCT PANEL 24V IGNITION	31B	WIPER & WASHER SYSTEM	48W	ENTRANCE DOOR SEDAN	72B	SUN VISOR RH
24IA	RR JCT PANEL 24V IGNITION	32	EXTERIOR LTS-BACK-UP	49	ENTRANCE DOOR CLOSE SIGNAL	72C	SUN VISOR LH
24IA	FR JCT PANEL 24V IGNITION	32B	EXTERIOR LTS-BACK-UP	49A	ENTRANCE DOOR SYSTEM	72D	SUN VISOR LH
24IB	FR JCT PANEL 24V IGNITION	35	ENTRANCE STEP LIGHTS	49B	ENTRANCE DOOR SYSTEM	74	R.H. READING LAMP FEEDING
24IF	FR JCT PANEL 24V IGNITION	36	ENGINE BRAKE SYSTEM	50	AIR DRYER	74A	R.H. HOTESS CHIME FEEDING
24K	RR JCT PANEL 24V DISC SW	36A	ENGINE BRAKE SYSTEM & RET.	52	ALARM & SIGNAL-ELEC.HORN	74B	WCL R.H. READING LAMP FEED.
24L	RR JCT PANEL 24V DISC SW	37	LAVATORY LTS FEEDING	52A	ALARM & SIGNAL-ELEC.HORN	74D	READING LAMP SWITCH
24M	RR JCT PANEL 24V DISC SW	38	FLUORESCENT RELAY FEEDING	52B	PNEUMATIC HORN	74J	READING LAMP INDICATOR SW.
24P	FR JCT PANEL 24V DISC SW	38A	R.H FLUORESCENT	53	ALARM & SIGNAL-ELEC.HORN	75	L.H. READING LAMP FEEDING
24P2	RR BENCH- INVERTER	38B	L.H. FLUORESCENT	53B	WIPER & WASHER SYSTEM	75A	L.H. HOTESS CHIME FEEDING
24PV	RR BENCH- INVERTER	38C	FLUORESCENT FEEDING	53C	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE
24R	24V STARTER RELAY	39	INTERIOR LTS-DRIVER'S LTS	53E	WIPER & WASHER SYSTEM	76C	LOW FUEL T.T.LT
24R	SCENIC VIEW SIGNAL ON	39D	INTERIOR LTS - DRIVER' LTS	53J	WIPER & WASHER SYSTEM	76M	FUEL PRIME PUMP
24SB	24V SOUND SYSTEM FEEDING	41	A/C SYS.-COND FAN MOTOR	55	EXTERIOR LTS-HI BEAM	76P	FUEL PRIME PUMP FEEDING
24SS	24V SOUND SYSTEM FEEDING	41A	A/C SYS.-COND FAN MOTOR	57	EXTERIOR LTS-HI BEAM	77B	A/C SYS. - LIQ. SOL. VALVE
24S1	AMPLIFIER FEEDING	41B	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM	77C	A/C & HEAT SYS.-COMPRESSOR
24S2	AMPLIFIER FEEDING	42	A/C SYS.-COND FAN MOTOR	57B	A/C & HEAT SYS.-WATER PUMP	77H	A/C SYS.-LIQ. SOL. VALVE
24S3	VIDEO FEEDING	42A	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP	81	EXTERIOR LTS-STOP SW
24S4	VIDEO FEEDING	43	PARCEL RACK A/C	57E	A/C & HEAT SYS.-WATER VALV	82	EXTERIOR LTS-STOP SIGNAL
24T	RR JCT PANEL 24V DISC SW	43A	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER	82A	EXTERIOR LTS-STOP SIGNAL
24VA	24 VOLTS BATTERY EQUALIZER	43B	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM	82B	EXTERIOR LTS-STOP LTS
24VD	24V HOT WIRE FEED	43C	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM	82C	EXTERIOR LTS-STOP LTS
24VF	24 VOLTS FRONT DISTRIBUTION	43D	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM	82L	EXT. LTS-STOP LTS & CYCLOP
24VI	24 VOLTS IGNITION REAR DIST.	43E	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM	82R	EXTERIOR LTS-STOP LTS
24VR	24 VOLTS REAR DISTRIBUTION	43F	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW	83	ENG. CTR-MAST. KEY SW ACC.
24Y	24 VOLTS POWER GALLEY	43G	PARCEL RACK A/C	61A	EXTERIOR LTS-HEAD SIGNAL	83A	24V&12V CUT RELAY COIL
24WC	WCL PUMP FEEDING	43M	PARCEL RACK A/C	62	LAVATORY INDICATOR	83B	24V&12V CUT RELAY COIL
24WL	WCL PUMP FEEDING	43X	PARCEL RACK A/C	63	EXTERIOR LTS-CLEAR. FEED	84	ENG. CTR-MAST KEY SW START
24WR	WCL POWER ACCES.	44	EXTERIOR LTS-FOG	63B	EXTERIOR LTS-CLEARANCE	84A	ENG. CTR-MAST KEY SW START
25	EITHER ALTERNAT. RUN SIGNAL	44A	EXTERIOR LTS-FOG	63C	EXT. LTS-MARKER SIGNAL	84J	ENG. CTR-MAST KEY SW START
25A	TT.LT. ALTERNATOR #1	44B	EXTERIOR LTS-FOG	63D	BLINKER RELAY	85	24V IGNITION SIGNAL
25A1	BOSCH ALTERNATOR SIGNAL D+	44C	FOG,LTS & HVAC FEEDING	63E	BLINKER RELAY	85A	24V IGN DASH INSTRUMENT.
25A2	BOSCH ALTERNATOR SIGNAL D+	44D	EXTERIOR LTS - FOG	63F	EXT. LTS-MARKER BLINKER		
		44E	EXTERNAL LTS - FOG	64	DRIVER'S FAN SPEED CTR		
		45A	A/C & HEAT SYSTEM FULL AIR	64A	A/C SPARE		

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
85C	24V IGNITION - FEED	116	WORLD TR.-SOL. SUPPLY		BRAKE	143Y	WORLD/EATON TRANSM.BATT.GRD
85F	RAD. FAN CONTROL W/RETARD	116B	A/C & HEAT SYSTEM-DR'S HTR	133	GALLEY HEATING CONTAINER	144	ABS SYSTEM-SENSOR
85W	OUT SPEED INTERLOCK-24V IGN.	116C	A/C SYS.-TRIG. DEFROST	133A	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR
85X	ABS-24V IGN	117A	OIL TEMP. EATON TRANSM.	133B	GALLEY HEATING CONTAINER	145	ABS SYSTEM
85Y	ABS-WARNING LT	119	WORLD TRANSM-ENGINE BRAKE	133C	GALLEY HEATING CONTAINER	146	ABS SYSTEM
86	ENG. CTR-STARTER SOL.	120	WORLD TRANSM-A SOL.	134	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION
86A	ENG. CTR-STARTER RELAY COIL	121	WORLD TRANSM-SOL.SUPPLY	134A	GALLEY HEATING CONTAINER	146AA	WORLD TRANSM-DIAGN.CONN.
86F	TELL TALE STARTER ON	123	WORLD TR.-NEUTRAL START	135	GALLEY HEATING CONTAINER	147	WORLD TRANSM-OIL TEMP
86T	TELL TALE STARTER ON	123A	ALARM & SIGNAL-FIRE DETECT.	135A	WORLD TR.-RES MODULE RET.	147	ABS SYSTEM-VALVE
87B	ENGINE CTR-24V IGNITION	123B	ALARM & SIGNAL-FIRE DETECT.	135B	A/C & HEAT SYS.-AIR SENSOR	147A	ETHER COLD START
88	ENGINE CTR-RR START SIGNAL	124	WORLD TR.-SENSOR POWER	135C	A/C & HEAT SYS.-AIR SENSOR	147C	ETHER COLD START
89	ENGINE CTR-RR START SIGNAL	124A	WORLD TRANSM-SENSOR PWR	136	MICRO-WAVE OVEN SWITCH	148	ABS SYSTEM-VALVE
90	DASH MAGNETIC SWITCH	125	LAVATORY FAN	136A	GALLEY LAMP	148	WORLD TR.-OUTPUT SPEED LO
90B	ENG. CTR-MAST KEY SW FEED	125	WORLD TR-RETARDER INDICAT.	136A1	WORLD TRANSM-12V BATTERY	149	WORLD TR.-TURBINE SPEED H
91	PARKING BRAKE SW SIGNAL	125	WORLD TR-RETARDER INDICAT.	136A2	WORLD TRANSM-12V BATTERY	149	ABS SYSTEM-SENSOR
91A	DDEC -FAST IDLE SIGNAL	125W	WORLD TR-RETARDER INDICAT.	136AA	WORLD TRANSM-SHIFTER PWR	149A	ABS SYSTEM
91B	D.R.L. CANCEL RELAY	126	24 V IGN. SPEED SWITCH	136V	WORLD TRANSM-12V BATTERY	150	WORLD TR.-ENGINE SPEED LO
91C	PARKING BRAKE - T.T.LT	126A	KNEELING SYSTEM	136V	WORLD TRANSM-12V BATTERY	150	DDEC -ECM BATTERY GRD
91J	FAST IDLE - JUMPER SW.	126AA	KNEELING SYSTEM	136X	WORLD TRANSM-12V BATTERY	150A	DDEC -ECM BATTERY GRD
91W	WCL PARKING BRAKE SIGNAL	126B	KNEELING SYSTEM	137	WORLD TRANSM-RETARDER	151	DDEC -ECM BATTERY GRD
92	BATT. EQUAL.-CHECK BALANCE	126C	HI-BUOY SIGNAL	137	RR VIEW MIRROR	151	ATC VALVE
93	BATT. EQUALIZ.-CHECK LO/HI	126D	KNEELING SYSTEM	137A	RR VIEW MIRROR	152	ATC VALVE
95A	ENG. BRAKE & RETARDER SYS.	126E	KNEELING SYSTEM	137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT
95B	ENG. BRAKE & RETARDER SYS.	126F	KNEELING SYSTEM	137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)
100	INTERIOR LTS RELAY COIL	126G	KNEELING SYSTEM	137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED
100	INDIRECT LTS FEEDING	126H	SPEED SIGN 5NC - 24V	137E	RR VIEW MIRROR	157B	ABS SYSTEM
100A	INDIRECT LTS RELAY COIL	126K	KNEELING SYSTEM	137F	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC
100B	INDIRECT LTS FEEDING	126L	KNEELING SYSTEM	137H	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW
100C	INDIRECT LTS FEEDING	126P	KNEELING SYSTEM	137I	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD
101	24 VOLTS POWER STARTER	126R	KNEELING SYSTEM	137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C
101	WORLD TR.- LO SIGN SOL.LO	126S	KNEELING SYSTEM	137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE
102	24 VOLTS A/C DISTRIBUTION	126T	KNEELING SYSTEM	137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN
102	WORLD TRANSM.-SOL. SUPPLY	126V	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL
102A	BOSCH ALTERNATOR FEEDING	126W	WORLD TRANSM-NOT USED	137R	WORLD TRANSM-RETARDER	166	WORLD TRANSM. OUTPUT 7
103	WORLD TRANSM.- B.SOL.LO	127	WORLD TRANSM. - H SOL.	137T	MIRROR HEAT SW-JUMPER	167	W. TR.-OUT SPEED INTERLOCK
103	LOW BUOY SYSTEM	127	24HOT WIRE PREHEAT	138	ABS SYSTEM-SENSOR	169	WORLD TRANSM-PRE-SELECT #1
104	WORLD TR. -G SOL.	127A	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR	170	WORLD TRANSM-SHIFTER
105W	WORLD TR-SOL.-RET.OIL TT.LT	127B	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE	170C	LUGGAGE DOOR LOCK-T.T.LT
107	WORLD TR. - SOL. SUPPLY	127S	PRE-HEAT WATER HEATER	139	WORLD TR.-OUTPUT SPEED HI	170D	LUGGAGE DOOR LOCK-FEED
110	WORLD TR.-F SOL. LO	128	WORLD TRANSM-B SOL.	140	WORLD TR.-TURBINE SPEED LO	170E	LUG. DOOR LOCK-UNLOCK SIGN
112	WORLD TR.-SPARE OUTPUT (+)	128A	PRE-HEAT WATER HEATER	140	ABS SYSTEM-VALVE	170F	LUGGAGE DOOR LOCK-FEED
113W	WORLD TR.-REVERSE WARNING	128B	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE	170G	LUGGAGE DOOR LOCK-FEED
114	INTERIOR LT-DASH LT RHEOS.	129	WORLD TRANSM-E SOL.	141	WORLD TR.-ENGINE SPEED HI	170K	LUGGAGE DOOR-LOCK SIGN
114A	INTERIOR LT-DASH LT RHEOS.	129B	PRE-HEAT WATER HEATER	142	ABS SYSTEM-VALVE	170L	LUGG DOOR LOCK-SIGN T.T.LT
114B	INT. LT-DASH LT RHEOST.FEED	130	WORLD TRANSM-SOL. SUPPLY	143	ABS SYSTEM-SENSOR	170N	LUGG DOOR LOCK-SIGN T.T.LT
115	DDEC -COOLANT LEVEL	130	EVAP. FAN MAIN CABLE	143A	ABS SYSTEM-SENSOR	170R	LUGG DOOR LOCK-SIGN. T.T.LT.
115W	WORLD TR.-DO NOT SHIFT SIGN	130A	EVAP. FAN MAIN CABLE	143W	WORLD TRANS-BATTERY GRD	170S	LUGG DOOR LOCK-SIGN T.T.LT
		131	WORLD TRANSM-D SOL.	143X	WORLD TRANSM-BATTERY GRD	170T	LUGG DOOR LOCK-SIGN T.T.LT
		132	WORLD TRANSM-ENGINE				

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
170V	LUGG DOOR LOCK-SIGN T.T.LT	300	WCL POWER SYSTEM & ACCESS.	564	DDEC-DIGITAL OUTPUT		
170W	LUGGAGE DOOR LOCK-FEED	300A	WCL POWER SYSTEM SW.	565	DDEC-ENGINE BRAKE ACTIVE		
170X	LUGG DOOR LOCK-SIGN T.T.LT	301J	WCL POWER SW. JUMPER LED	583	DDEC-ENGINE BRAKE 4 CYL.		
170Y	LUGGAGE DOOR LOCK-FEED	301	WCL SIGNAL POWER SW.	900	DDEC-DATA LINK (+)		
170Z	LUGGAGE DOOR LOCK	302	WCL DOOR AJAR TTLT & ALARM	900A	EATON-DATA LINK(+)		
171	WORLD TRANSM-SHIFTER	304	WCL DOOR TOP LT.	901	DDEC-DATA LINK (-)		
172	WORLD TRANSM-SHIFTER	305	WCL PARKING BRAKE SOL. VALVE	901A	EATON-DATA LINK(-)		
173	WORLD TRANSM-SHIFTER	305A	WCL DOOR OPEN SIGNAL	908	DDEC-HYDRAU. PWM#1 OUTPUT		
174	WORLD TRANSM-SHIFTER	305B	WCL DOOR TOP LT.	916	DDEC-SENSOR SUPPLY (5VDC)		
175A	WORLD TRANSM-SHIFTER	306	WCL CONTROL SYSTEM	925	J1939(+)		
176	WORLD TRANSM-SHIFTER	307	WCL CONTROL SYSTEM	926	J1939(-)		
180	OUTSIDE TEMP. DISPLAY	308	WCL CONTROL SYSTEM	927	J1939(SHIELD)		
180A	OUTSIDE TEMP. DISPLAY	309	WCL CONTROL SYSTEM	952	DDEC-SENSOR RETURN		
180A	WORLD TRANSM-SHIFTER	309	WCL CONTROL SYSTEM	953	DDEC-BATTERY GRD		
180B	OUTSIDE TEMP. DISPLAY	310	EATON TRANSM. START SIGNAL	979	DDEC-ENGINE BRAKE 2 CYL.		
180C	OUTSIDE TEMP. DISPLAY	311	EATON TR.LH.CONS.GEAR DISPLAY	2123	FLASHER SIGNAL LTS		
181	FROZEN POINT T.T.LT	312	EATON TR. NEUTRAL SIGNAL				
181A	TEMP. CTR'L INSIDE SENSOR	313	EATON TR.LH.CONS.GEAR DISPLAY				
181B	TEMP. CTR'L INSIDE SENSOR	314	EATON TR.LH.CONS. GRD				
181C	THERMOMET. OUTSIDE SENSOR	315	EATON TR.ENG.COMP.12V POWER				
181D	THERMOMET. OUTSIDE SENSOR	316	EATON TR.ENG.COMP. GRD				
195	WORLD TRANSM-TRANS ID	317	EATON TR.ENG.COMP.12V POWER				
197	FUEL WATER FILTER	318	EATON TR.ENG.COMP. GRD				
197A	FUEL WATER FILTER	319	EATON TR.ENG.COMP.12V POWER				
200	EATON TRANSM. GRD	320	EATON TR.ENG.COMP. GRD				
201	WORLD TRANSM-SPARE	417	DDEC-LIMIT SPEED GOVERNOR				
202	WORLD TRANSM-SPARE	419	DDEC -CHEK ENGINE LIGHT				
203	WORLD TRANSM-SPARE	439	DDEC-12V IGNITION				
204	WORLD TRANSM-SPARE	451	DDEC-A/C FAN CLUTCH				
214	WORLD TR.-BACK-UP SIGNAL	505	DDEC-TACHOMETER DRIVE				
231	WORLD TR.-NEUTRAL SIGN GRD	509	DDEC-STOP ENGINE LIGHT				
231F	WORLD TR.-NEUTRAL SIGN GRD	510	DDEC-FAST IDLE SIGNAL				
231W	W.TR.-NEUTRAL SIGN GRD WCL	524	DDEC-ENGINE BRAKEDISABLE				
240	DDEC -ECM 12V FEEDING	525	DDEC-FAST IDLE SIGNAL				
241	DDEC -ECM 12V FEEDING	528	DDEC-STOP ENG. OVERRIDE				
253	24V SIGNAL GALLEY INVERTER	531	DDEC-CRUISE CLUTCH CUT OUT				
254	GALLEY REFRIGERATOR	540	DDEC-CRUISE ENABLE T.T.LT				
254A	GALLEY REFRIGERATOR	541	DDEC-CRUISE SET SW				
254F	GALLEY REFRIGERATOR	542	INPUT PARK BRAKE INTERLOCK				
255	GALLEY COFFEEMAKER	543	DDEC-CRUISE BRAKE PEDAL				
255A	GALLEY COFFEEMAKER	544	DDEC-CRUISE ON/OFF SW				
255B	GALLEY COFFEEMAKER	545	DDEC-CRUISE RESUME SW				
260	WINDOW AJAR-T.T.LT	555	DDEC-FAN CLUTCH SPEED#1				
290	FAN CLUTCH RADIATOR-FEED	556	DDEC-VEHICULE SPEED (+)				
290A	FAN CLUTCH RADIATOR-FEED	557	DDEC-VEHICULE SPEED (-)				
291	FAN CLUTCH RADIATOR SPD 1	563	DDEC-FAN CLUTCH SPEED#2				
292	FAN CLUTCH RADIATOR SPD 2						
292J	FAN OVERRIDE LTS SWITCH						